

Climate control settings

Basic settings

Climate control bar



Climate control bar

- ① Adjusts temperature, airflow and air distribution, left, as well as displaying the current setting
- ② Calls up the climate control menu, displays the current cooling and climate mode setting (airflow setting)
- ③ Adjusts temperature, airflow and air distribution, right, as well as displaying the current setting

Calling up the climate control menu:

- ▶ To switch to the climate control bar: slide ↓ the controller.
- ▶ To select from climate control bar ②: turn and press the controller. The menu for selecting climate control functions is activated.
- ▶ To select the desired climate control function: turn and press the controller. The selected climate control function appears.

The following climate control functions can also be called up directly from the climate control bar:

- Temperature, left and right, displayed as the actual temperature, e.g. 20 °C.
- Temperature, left and right, displayed as the actual temperature, e.g. 68 °F (20 °C).

- Airflow left and right, displayed as and the current setting, e.g. 1.
- Air distribution left and right, displayed by the current setting, e.g. .

Switching climate control on/off





- ▶ Call up the climate control menu (▷ page 59).
- ▶ To switch to the footer: slide ↓ the controller.
- ▶ To select **Climate Ctrl On**: turn and press the controller.
- ▶ Switch the climate control function on or off . If climate control is switched off, the adjustment functions are deactivated.

Synchronizing the climate control settings

With the synchronize option, you can decide whether you wish to activate the climate control settings for all zones together or separately.

- ▶ Call up the climate control menu (▷ page 59).
- ▶ To switch to the footer: slide ↓ the controller.
- ▶ To select **Sync.**: turn the controller and press to confirm.
- ▶ Switch the synchronization function on (left and right synchronized) or off (left and right separate).

With the synchronization function switched off, you can alternate between driver and front passenger.

- ▶ To switch from the footer to the main area: slide  the controller.
- ▶ To switch between left and right: slide  the controller.


Not all climate control functions allow switching between the driver and front passenger.

- i** The synchronize function can also be deactivated by sliding the controller to the left or right in the setting area. The setting elements for the driver and front passenger are then shown separately once again.

Further information (see the vehicle Operator's Manual).


Switching to the rear-compartment air conditioning setting

You can also set the rear-compartment air conditioning from the front.

- ▶ Call up the climate control menu (▷ page 59).
- ▶ To switch to the footer: slide  the controller.
- ▶ To select the **Rear Setting**: turn and press the controller.
- ▶ You switch to the rear-compartment air conditioning setting. The vehicle interior display changes accordingly.
- ▶ To switch the setting back to the front again: select **Return to Front**. After a short time, COMAND automatically switches the adjustment functions back to the front.

Switching cooling with air dehumidification on/off

Activating the cooling with air dehumidification facilitates the cooling of the vehicle interior even with high outside temperatures.

- ▶ Call up the climate control menu (▷ page 59).
- ▶ To switch to the footer: slide  the controller.
- ▶ To select **A/C**: turn and press the controller.
- ▶ Switch cooling with air dehumidification on or off .

- i** The current status of the cooling function is displayed in the climate control bar: AC on – activated, AC off – deactivated (▷ page 59).


Setting the temperature



- ▶ To select the current temperature in the climate control bar on the left or right: turn and press the controller. The temperature setting scale appears.
- ▶ To change the setting: turn the controller.
- ▶ To close the temperature setting scale: press the controller.
- i** You can also set the temperature using the climate control menu, i.e. as described for setting the footwell temperature (▷ page 61).


Setting the airflow



- ▶ To select  on the left or right in the climate control bar: turn and press the controller.
The airflow setting scale appears.
 - ▶ To change the setting: turn the controller.
 - ▶ To close the temperature setting scale: press the controller.
- i** You can also set the airflow using the climate control menu, i.e. as described for setting the footwell temperature (▷ page 61).

Setting the air distribution



- ▶ To select the current air distribution display on the left or right in the climate control bar, e.g. : turn and press the controller.
The air distribution setting scale appears.
 - ▶ To change the setting: turn the controller.
 - ▶ To close the temperature setting scale: press the controller.
- i** You can also set the air distribution using the climate control menu, i.e. as described


for setting the footwell temperature (▷ page 61).

Further settings


Adjusting the footwell temperature



The footwell temperature can be lowered or increased in comparison with the temperature setting in the front.

- ▶ Call up the climate control menu (▷ page 59).
- ▶ To select **Adjust Footwell**: turn and press the controller.
- ▶ If necessary, change sides: slide  the controller.
- ▶ To change the setting: turn and press the controller.

Exiting a menu

- ▶ Press the  button.

Adjusting the climate mode settings

 


By setting the climate mode, you determine the strength of the airflow based on the air

distribution set. The setting is only active when the air-conditioning system is set to "AUTO".

- ▶ Call up the climate control menu (> page 59).
- ▶ To select **Climate Mode**: turn and press the controller.
- ▶ If necessary, change sides: slide ←☉→ the controller.
- ▶ To change the setting: turn and press the controller.

Exiting a menu

- ▶ Press the  button.

i The current climate mode setting is set in the climate control bar: DIFFUSE, MEDIUM or FOCUS (> page 59).


Starting/stopping the perfume atomizer



The perfume atomizer makes it possible to scent the air in individual compartments in the vehicle interior. Further information (see the vehicle Operator's Manual).

- ▶ Call up the climate control menu (> page 59).
- ▶ To select **Air Freshener**: turn and press the controller.
Depending on the previous status, you start or stop the perfume atomizer.
- ▶ To set the intensity: turn the controller when the atomizer is switched on.

Exiting a menu

- ▶ Press the  button.

 
Switching the ionization on/off



The ionization has a cleansing effect on the air in the vehicle interior. Further information (see the vehicle Operator's Manual).

- ▶ Call up the climate control menu (> page 59).
- ▶ To select **Ionization**: turn and press the controller.
You switch it on or off, depending on the previous status.

Exiting a menu

- ▶ Press the  button.

Auxiliary heating



You can pre-set three departure times for automatic activation of the auxiliary heating.

Selecting the pre-set time:

- ▶ Call up the climate control menu (> page 59).
- ▶ To select **Auxiliary Heating**: turn and press the controller.
- ▶ Turn the controller.