





- ▶ Use  or  to select *Night View Assist* .
- ▶ Press  to confirm.




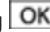






The current selection is displayed.

- ▶ To activate/deactivate: press the  button again.

If Night View Assist Plus automatic activation is switched on, the night vision image is automatically shown in the multifunction display if an object is detected.

For further information about Night View Assist Plus .

### Activating/deactivating the Traffic Sign Assist display

- ▶ Use  on the steering wheel to call up the list of menus.
- ▶ Press the  or  button on the steering wheel to select the *Settings* menu.
- ▶ Confirm by pressing  on the steering wheel.
- ▶ Use  or  to select the *Assistance* submenu.
- ▶ Press  to confirm.
- ▶ Press the  or  button to select *Traffic Sign Assist* .
- ▶ Press the  button.











The current selection is displayed.

- ▶ To activate or deactivate: press .

When Traffic Sign Assist is activated, traffic signs appear in the speedometer under certain conditions.

### Activating/deactivating PRE-SAFE® Brake

PRE-SAFE® Brake is only available in vehicles with DISTRONIC PLUS.

- ▶ Use  on the steering wheel to call up the list of menus.
- ▶ Press the  or  button on the steering wheel to select the *Settings* menu.
- ▶ Confirm by pressing  on the steering wheel.
- ▶ Use  or  to select the *Assistance* submenu.
- ▶ Press  to confirm.
- ▶ Press the  or  button to select *PRE-SAFE Brake* .
- ▶ Press  to confirm.











The current selection is displayed.

- ▶ To activate/deactivate: press the  button again.


When PRE-SAFE® Brake is deactivated, the  symbol appears in the *Assistance graphic* menu in the multifunction display.

For more information on PRE-SAFE® Brake, see .

### Activating/deactivating the distance warning function

- ▶ Use  on the steering wheel to call up the list of menus.
- ▶ Press the  or  button on the steering wheel to select the *Settings* menu.
- ▶ Confirm by pressing  on the steering wheel.
- ▶ Use  or  to select the *Assistance* submenu.
- ▶ Press  to confirm.
- ▶ Press  or  to select *Distance warning* .
- ▶ Press  to confirm.

The current selection is displayed.

- ▶ To activate/deactivate: press the  button again.

When the distance warning function is deactivated, the  symbol appears in the *Assistance graphic* menu in the multifunction