


MODEL 222
with CODE 439 (EASY ADJUST luxury head restraint)

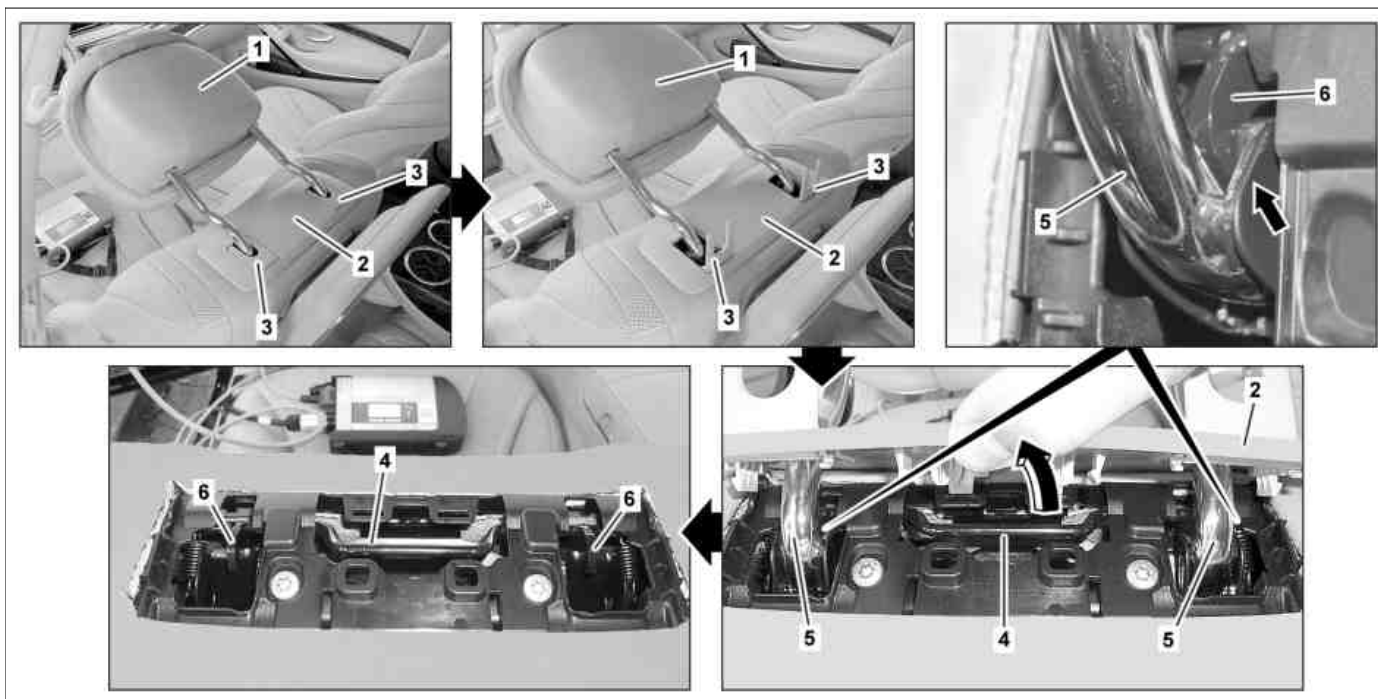


P91.16-3005-09

Shown on driver seat head restraint

- | | | |
|------------------|---------|------------------------|
| 1 Head restraint | 3 Cover | 5 Head restraint guide |
| 2 Cover | 4 Lock | 6 Locking pawl |

☒	Remove		
1 ☒ AD	Fold down head restraint (1) at driver seat towards front	<p>i For removal of head restraint (1) at front passenger seat, see operator's manual.</p> <p>i Fold down head restraint (1) as follows: Connect XENTRY → Select control unit "ESE 'Driver' - electrical seat adjustment for 'driver' with memory function (N32/1)" → Select "Adaptations" tab → Select "Teach-in processes" menu → Select "Remove/install head restraint" menu and follow further instructions</p>	AD00.00-P-2000-04B
2	Fold up panels (3) 90° backwards		
3	Unclip cover (2) and lift until the lock (4) is accessible		
4	Push lock (4) forwards in direction of the arrows and remove head restraint guide (5)		
5	Remove head restraint (1) with cover (2)		
☒	Install		
6	Install cover (2)		
7	Fold up panels (3) 90° backwards		
8	Insert head restraint guides (5) into the supports at the backrest frame	<p>i The locking pawls (6) must engage in the head restraint guides (5).</p>	
9	Fold back panels (3) forwards		
10 ☒ AD	Reset head restraint (1) at driver seat to starting position		AD00.00-P-2000-04B

		<p>i For installation of head restraint (1) at front passenger seat, see operator's manual.</p> <p>i Fold back head restraint (1) as follows: Connect XENTRY → Select control unit "ESE 'Driver' - electrical seat adjustment for 'driver' with memory function (N32/1)" → Select "Adaptations" tab → Select "Teach-in processes" menu → Select "Remove/install head restraint" menu and follow further instructions</p>	
11  AD	Carry out seat normalization at the front passenger seat or at the driver seat		AD00.00-P-2000-04B