


MODEL 222

Shown on left rear lamp unit (E3)

- 1 Side paneling
- 2 Electrical connector
- 3 Nuts
- E3 Left rear lamp unit
- E4 Right rear lamp unit

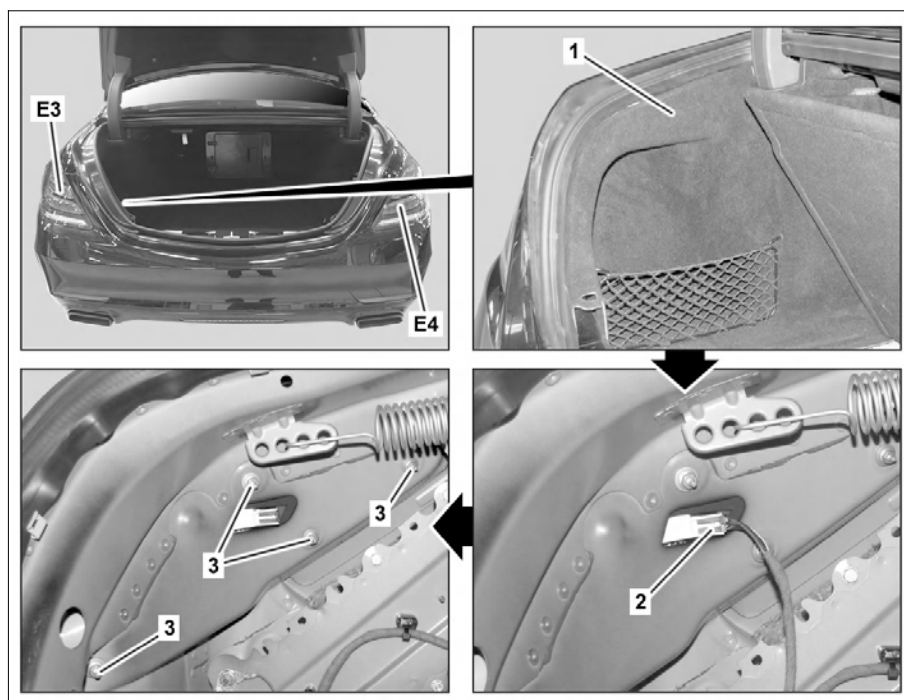

P82.10-7137-06

	<b>Danger !</b>	<b>Risk of injury</b> caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
		Notes on sensor system for trunk lid opening/closing		AH80.61-P-0001-01A
		<b>Remove/install</b>		
1		Fold up load compartment floor		
2		Release side paneling (1) in vicinity of left rear lamp unit (E3) or right rear lamp unit (E4) until nuts (3) are accessible	MODEL 222.0/1	AR68.30-P-4600LF
3		Remove bass module speaker	MODEL 222 with CODE 811 (Advanced sound system) Only with left rear lamp unit (E3).	AR82.62-P-7839LF
4		Disconnect electrical connector (2) from left rear lamp unit (E3) or right rear lamp unit (E4)		
5		Unscrew nuts (3)		
6		Remove left rear lamp unit (E3) and right rear lamp unit (E4)		
7		Install in the reverse order		