



P91.10-2919-09

- 1 Pneumatic line
 2 Electrical connector
 3 Electrical connector (with code (432) Left and right dynamic multicontour seat)
 4 Trim panel
 5 Bolts

- 6 Backrest frame
 7 Trim panel
 N32/15 Left front multicontour backrest control unit (with code (409) Left/right front multicontour seats or code (432) Left and right dynamic multicontour seat)

- N32/16 Right front multicontour backrest control unit (with code (409) Left/right front multicontour seats or code (432) Left and right dynamic multicontour seat)
 M27/5 Left front backrest angle adjustment motor
 M28/5 Right front backrest angle adjustment motor

	Remove/install		
1	Remove left or right front seat		AR91.10-P-1000SX
2	Remove head restraint guide from front seat		AR91.16-P-0050SX
3	Remove sidebag on front seat		AR91.60-P-0695SX
4	Remove cover with upholstery from backrest frame (6) of front seat		
5.1	Remove left front multicontour backrest control unit (N32/15) or right front multicontour backrest control unit (N32/16)	On vehicles with code (409) Left/right front multicontour seats or code (432) Left and right dynamic multicontour seat	
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
6	Disconnect pneumatic line (1)		
7	Disconnect electric connector (2)		
8	Disconnect electrical connector on left front backrest angle adjustment motor (M27/5) or on right front backrest angle adjustment motor (M28/5)		
9.1	Separate electrical connection (3)	On vehicles with code (432) Left and right dynamic multicontour seat	
10	Remove panelings (4) on front seat frame		AR91.10-P-1200SX
11	Expose electric wiring harness on backrest frame (6)		
12	Unscrew bolts (5)		*BA91.10-P-1001-01O
13	Remove backrest frame (6)	Installation: Ensure that the panelings (7) are positioned correctly.	
14.1	Remove detachable parts	When replacing the backrest frame (6).	
15	Install in the reverse order		

Nm Front seats

Number	Designation	Model 221
BA91.10-P-1001-01O	Bolt at backrest fitting	Nm 35