


Shown on right front seat

- 1 Sidebag unit
- 2 Backrest cover
- 3 Rivet
- 4 Electrical connector

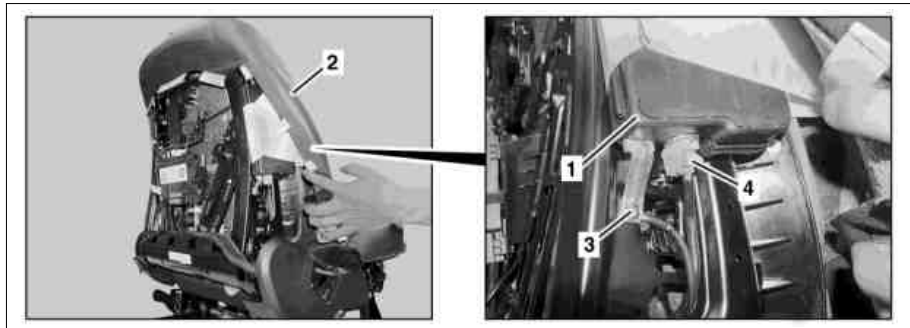

P91.60-3104-04

	Remove/install		
	Danger!	Risk of injury caused by performing testing or repair work on airbag or emergency tensioning retractor units.	Store airbag units with deployment side facing up; do not expose to temperatures greater than 100 °C. When working on these units, disconnect the power supply.
		Notes on performing repair, body work and welding on vehicles with airbags and ETR units	AH91.00-P-0002-01M
		Assessment of airbag and belt tensioner units in accident vehicles	AH91.00-P-0006-01B
		Legal regulations on handling and storing airbags and emergency tensioning retractors	AH91.00-P-0004-01A
1		Move left or right front seat forwards	
2		Detach ground line to starter battery and on-board electrical system battery	AR54.10-P-0003SX
3		Remove seat-back lining on front seat backrest	
4		Release backrest cover (2) in area of sidebag unit (1)	
5		Drill out rivet (3).	Hand riveter Drill (electric/pneumatic) *WH58.30-Z-1003-29A *WE58.40-Z-1001-03A
		Detach electrical connector (4) and remove sidebag unit (1)	If sidebag unit (1) is replaced, the defective sidebag unit (1) must be properly disposed of. Refer to: ↓ Notes on disposing of airbag and emergency tensioning retractor units OS91.00-P-0001-01A
7		Install in the reverse order	
8.1		Check supplemental restraint system (SRS) using STAR DIAGNOSIS Connect STAR DIAGNOSIS and read out fault memory	After replacing sidebag unit (1). STAR DIAGNOSIS diagnosis system AD00.00-P-2000-04A *WH58.30-Z-1048-13A

Commercially available tools

Number	Designation	
WH58.30-Z-1048-13A	STAR DIAGNOSIS diagnosis system, Compact Passenger Car	6511 1801 00
WH58.30-Z-1003-29A	Hand riveter	

Workshop equipment

WE58.40-Z-1001-03A	Drill (electric/pneumatic)
--------------------	----------------------------