


MODEL 217, 222

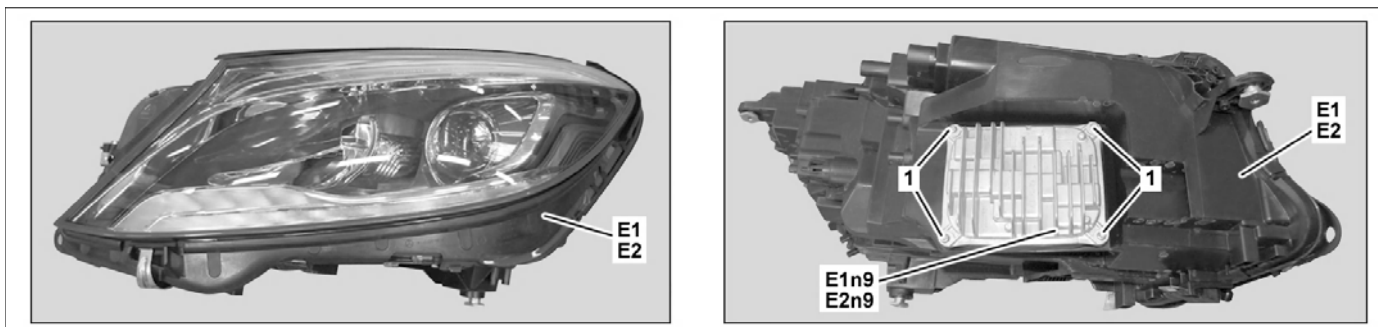


P82.10-7143-07

Shown on MODEL 222.004

1 Bolts  
E1 Left front lamp unit

E1n9 Left headlamp control unit  
E2 Right front lamp unit

E2n9 Right headlamp control unit

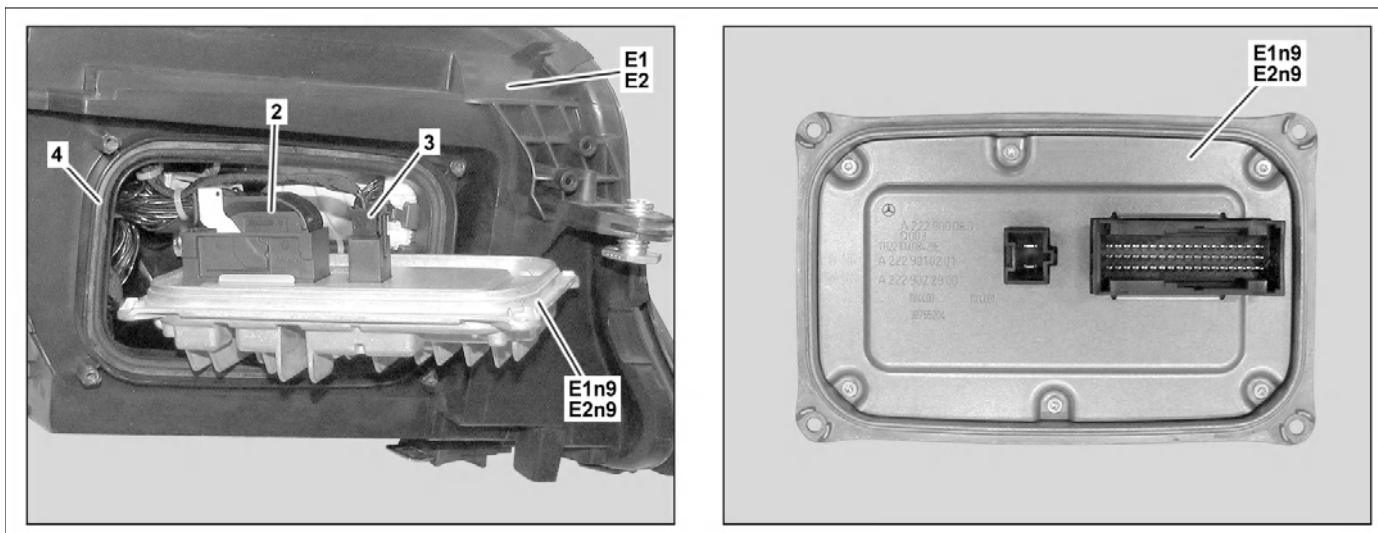

P82.10-7144-08

Shown on MODEL 222.004

2 Electrical connector  
3 Electrical connector  
4 Seal

E1 Left front lamp unit  
E1n9 Left headlamp control unit  
E2 Right front lamp unit

E2n9 Right headlamp control unit

	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	<b>Remove/install</b>		
1  	Perform initial startup of left headlamp control unit (E1n9) or right headlamp control unit (E2n9) with diagnostic system	When replacing the left headlamp control unit (E1n9) or right headlamp control unit (E2n9).	AD00.00-P-2000-04B
2	Remove left front lamp unit (E1) or right front lamp unit (E2)	MODEL 217  MODEL 222	AR82.10-P-4730LC  AR82.10-P-4730LF
3	Remove screws/bolts (1) at left headlamp control unit (E1n9) or right headlamp control unit (E2n9)		

4	Pull out left headlamp control unit (E1n9) or right headlamp control unit (E2n9) until electrical connectors (2, 3) can be separated	<b>i</b> <b>Installation:</b> Ensure that seal is seated correctly at left headlamp control unit (E1n9) or right headlamp control unit (E2n9).	
5	Disconnect electrical connectors (2, 3) and remove left headlamp control unit (E1n9) or right headlamp control unit (E2n9)		
6	Install in the reverse order		