

Model 217

Model 222

up to model year 2018

with code 631 (Static LED headlamps, left-hand traffic)

Model 222

up to model year 2018

with code 632 (Headlamps, LED, static, right-side traffic)

Model 222

up to model year 2018

with code 640 (SAE dynamic LED headlamps, right-hand traffic)

Model 222


up to model year 2018

with code 641 (Dynamic LED headlamps, left-hand traffic)

Model 222

up to model year 2018

with code 642 (Dynamic LED headlamps, right-hand traffic)

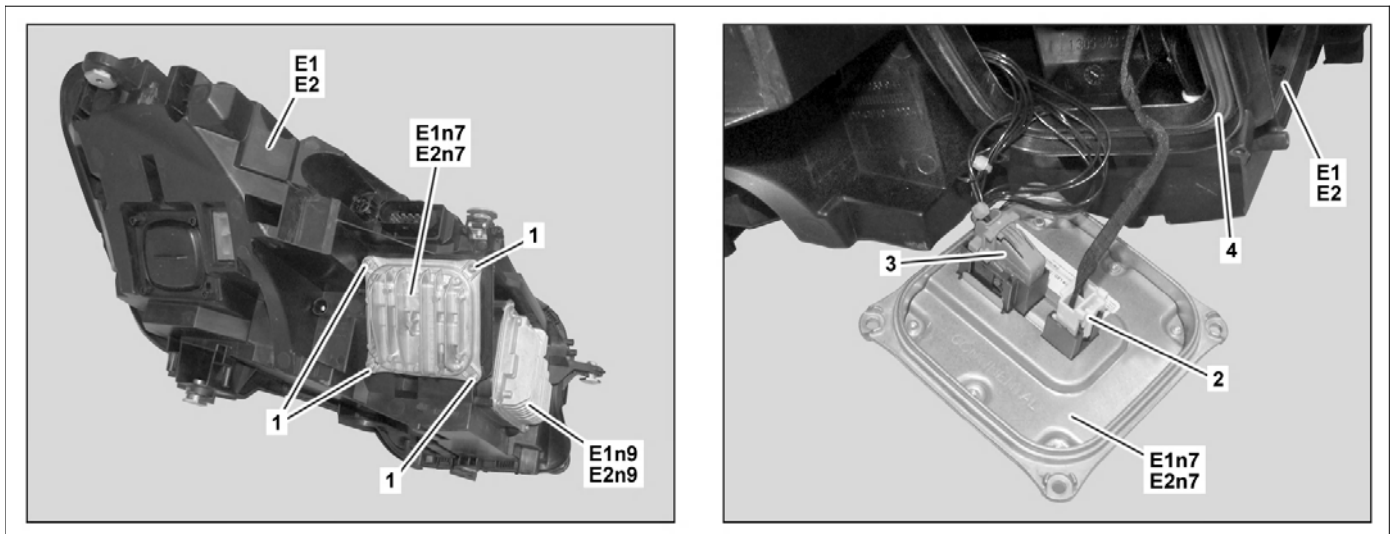

P82.10-7145-08

Shown on model 222.004, left front lamp unit (E1)

1	Bolts	E1	Left front lamp unit	E2n7	Actuation module for right front exterior lights LED
2	Electrical connector	E1n7	Actuation module for left front exterior lights LED	E2n9	Right headlamp control unit
3	Electrical connector	E1n9	Left headlamp control unit		
4	Seal	E2	Right front lamp unit		

	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Remove/install		
1	Perform initial startup of left front actuation module, LED exterior lighting (E1n7) or right front actuation module, LED exterior lighting (E2n7)	When replacing the left front actuation module, LED exterior lighting (E1n7) or right front actuation module, LED exterior lighting (E2n7). i Installation: Note Data Matrix code on the left front lamp unit (E1) or right front lamp unit (E2).	AD00.00-P-2000-04B
2	Remove left front lamp unit (E1) or right front lamp unit (E2)	Model 217 Model 222	AR82.10-P-4730LC AR82.10-P-4730LF
3	Remove bolts (1)		

4	Pull out left front actuation module, LED exterior lighting (E1n7) or right front actuation module, LED exterior lighting (E2n7) until electrical connectors are accessible (2, 3)	i Installation: Ensure that seal (4) is seated correctly.	
5	Release and disconnect electrical connectors (2, 3) and remove left front actuation module, LED exterior lighting (E1n7) or right front actuation module, LED exterior lighting (E2n7)		
6	Install in the reverse order		