


ENGINE 157, 278 in MODEL 217, 222

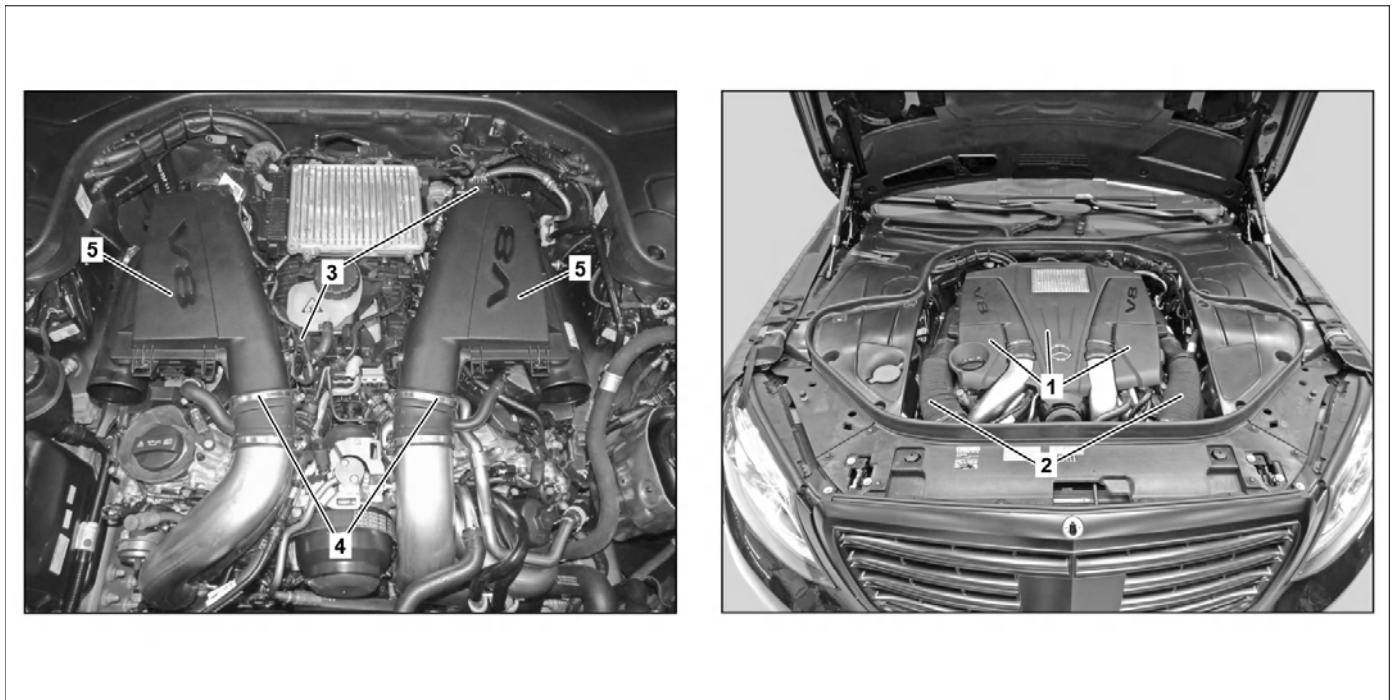

P09.10-2288-09

- 1 Engine covers
- 2 Engine air intake ducts
- 3 Electrical connections

- 4 Clamps
- 5 Air filter housing

Danger!	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
	Remove/install		
1	Remove engine covers (1)		
2	Remove engine air intake ducts (2)		
3	Disconnect electrical connections (3) at the pressure sensors downstream of air filter		
4	Loosen clamps (4) at charge air lines		
5	Remove air filter housing (5) upwards		
6	Install in the reverse order		