

Selecting a track

 
Selecting a track using the current track list

- ▶ To display the current track list: press the controller in the basic display. The category list appears.
- ▶ Select [Current Tracklist](#).
- ▶ To select a track: turn the controller and press to confirm.

Selecting a track by skipping to a track

- ▶ To skip forward or back to a track: turn or briefly slide ◀⊙▶ the controller in the media basic display.

Selecting a track using the number keypad

- ▶ Press the  key on the number keypad. A numerical entry field appears. The number of positions offered corresponds to the number of tracks in the current track list. Only numbers that correspond to a track number in the current track list can be entered.
 - ▶ To enter the track number using the number keys: briefly press the desired numbers on the number keypad. The track plays after the last possible number is entered.
- i** Pressing and holding a number key for more than two seconds completes the entry, and the corresponding track is played.

Searching for a track

- ▶ In media mode, slide ⊙↓ the controller. The media menu bar is shown.
- ▶ To select [Search](#): turn and press the controller. The category list is shown.
- ▶ Select a category, e.g. [Artists](#). Sub-categories appear with the selection of the main category (depends on the multimedia system default settings and the music tracks available).
- ▶ Select a sub-category. If the sub-category [Artists](#) contains music tracks, these will be displayed.

Gracenote® Media Database

General notes

This function is available in CD mode.



There is a version of Gracenote® music recognition technology, Emeryville, California, USA on the multimedia system hard disk. You will recognize this by the logo in the bottom right-hand corner of certain audio displays.

If the audio CD does not contain any CD text information, the multimedia system can use the Gracenote® Media Database to identify unknown audio tracks when in CD mode.

Carrying out an Internet update of metadata

The [Updating Metadata Via Internet](#) option allows any missing metadata for an audio CD (e.g. cover, track, album, artist) to be uploaded retrospectively to the internal Gracenote® database.

An Internet connection is required for this (▷ page 146).

Selecting Internet update of metadata


- ▶ In media mode, slide ⊙↓ the controller. The media menu bar is shown.
- ▶ To select [Options](#): turn and press the controller.
- ▶ Select [Updating Metadata Via Internet](#) in the selection list. A connection with the Gracenote® data server is established. The missing data is loaded, saved and displayed in the main display field. If there is no data found or there is no Internet connection, a corresponding error message will appear.

Switching the Gracenote® data display on/off

- ▶ Activate CD mode (▷ page 168).
- ▶ To select **Gracenote Media Database**: turn and press the controller.
- ▶ **Show Track Information**: switch function on or off .
If the function is deactivated, **Track 1** is shown instead of the Gracenote® data in the basic display, for example.

Media search

Starting the media search

- ▶ In media mode, slide  the controller.
The media menu bar appears.
- ▶ To select **Search**: turn and press the controller.
The category list appears.


General notes

The multimedia system plays back files from the following data media:

- Disc (audio CD/DVD)
- Memory card
- Media Register
- USB storage device
- Apple® devices (folder, year and photos are not available)

The categories are displayed according to the data available.

Category list

- ▶ In media mode, slide  the controller.
The media menu bar is shown.
- ▶ To select **Search**: turn and press the controller.
The category list is shown.

Depending on the connected media sources and files, the following categories are listed:

- **Current Tracklist**
- **Folder**
- **Select By Cover**
- **Keyword Search**

- **Playlists**
- **Artists**
- **Albums**
- **Track**
- **Year**
- **Genres**
- **Composers**
- **Videos**
- **Photos**

i The categories are available as soon as the entire media content has been read and analyzed.

If the same device is reconnected with unchanged media content, these categories are available more quickly.

When connecting Apple® devices, the categories “Folder”, “Year” and “Photos” are not available.

Searching a track using the current track list

- ▶ To select **Current Tracklist** in the category list (▷ page 173): turn and press the controller.
The selection list appears.
- ▶ Select the required track.

Searching for a track via a folder

Playable files can be searched for in the active data medium's directories.

- ▶ To select **Folder** in the category list (▷ page 173): turn and press the controller.
The folder list appears.
- ▶ Select the required folder.
The track list appears.
- ▶ Select the required track.