



Model 222.0/1/9

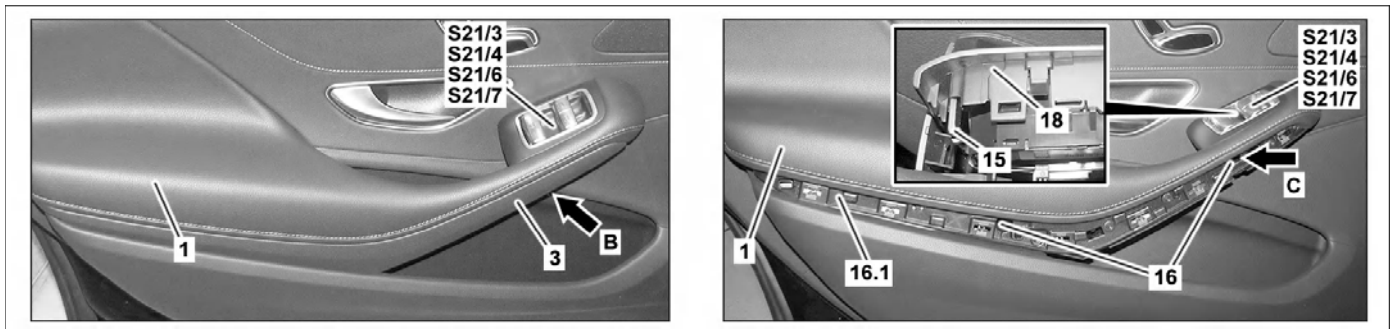

P72.12-2953-07

Shown on model 222.0


1	Door lining	16.1	Screw	S21/6	Left rear door switch group
3	Trim piece	18	Switch trim	S21/7	Right rear door switch group
15	Catch hook	S21/3	Left rear door power window switch		
16	Bolts	S21/4	Right rear door power window switch		

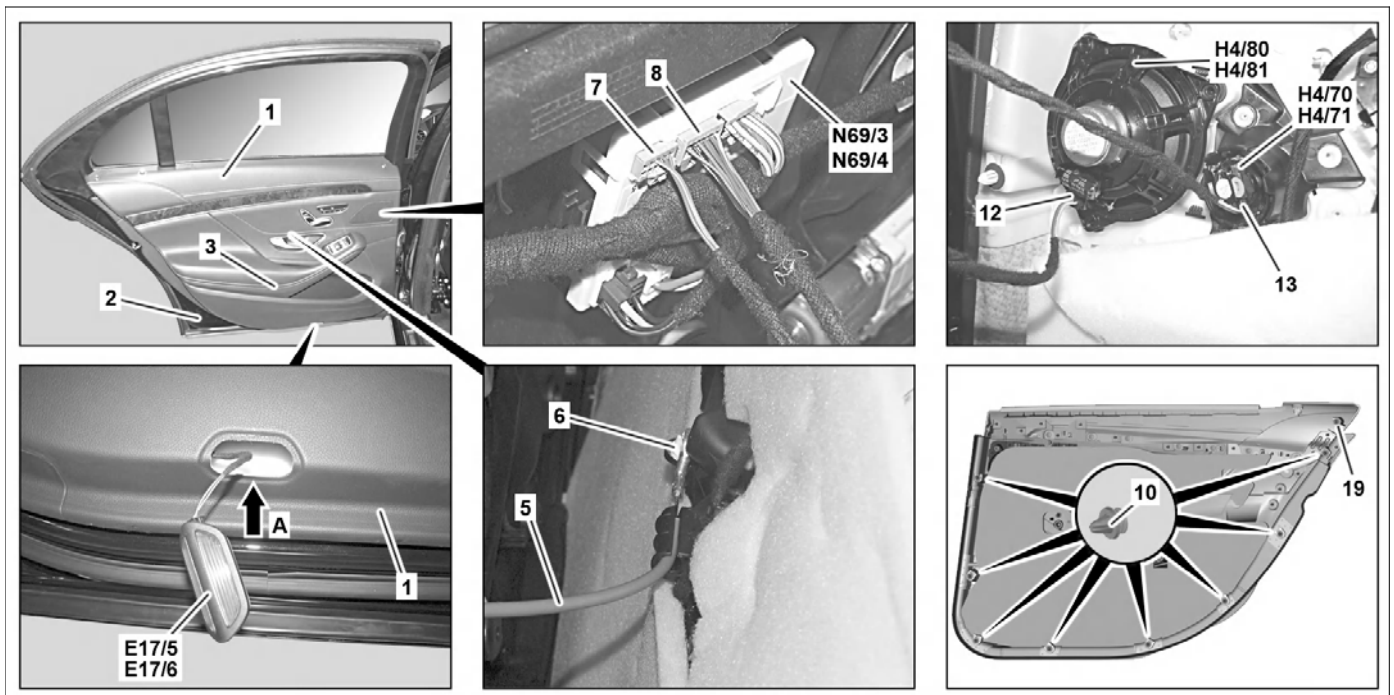

P72.12-2954-09

Shown on model 222.0

1	Door lining	10	Mounting clip	H4/71	Right rear door tweeter
2	Rear door	12	Electrical connector	H4/80	Left rear door midrange speaker
3	Trim piece	13	Electrical connector	H4/81	Right rear door midrange speaker
5	Inside door opener cable	19	Mounting clip	N69/3	Left rear door control unit
6	Inner door handle	E17/5	Left rear door exit and warning lamp	N69/4	Right rear door control unit
7	Electrical connector	E17/6	Right rear door exit and warning lamp		
8	Electrical connector	H4/70	Left rear door tweeter		

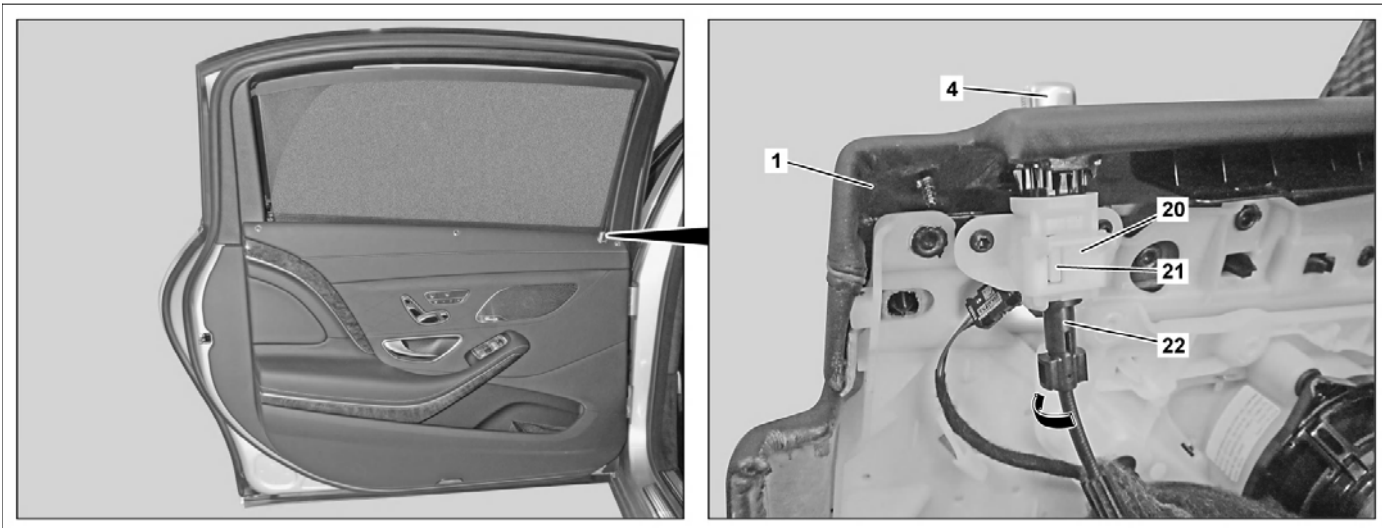

P72.12-3097-08


Shown on model 222.9

- 1 Door lining
- 4 Door knob
- 20 Slide

- 21 Catch hook
- 22 Wire lock

 
 
 
 
 

 
 
Shown on model 222.9


- 7.1 Electrical connector
- 7.2 Electrical connector
- 7.3 Electrical connector
- 7.4 Electrical connector
- N69/3 Left rear door control unit
- N69/4 Right rear door control unit

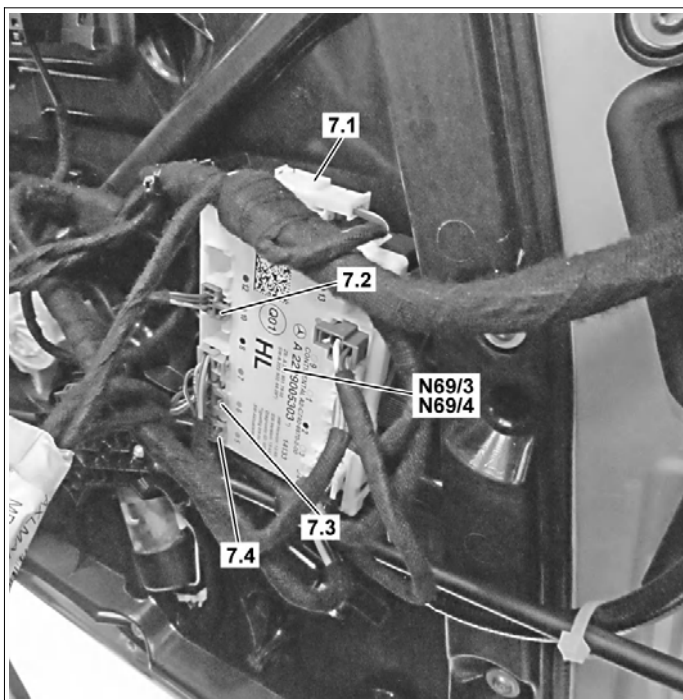

P72.12-3098-12

	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
⚠	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
🔧 🔩	Remove/install		
1	Lift catch hook on trim piece (3) through opening (arrow B) with suitable screwdriver, then slightly guide catch hook of trim piece (3) out of armrest and hold trim piece (3) so that the catch hook cannot stuck		
2	Unclip with trim piece (3) from front toward rear from remaining mounting points and remove	i Installation: Ensure the trim piece (3) is seated correctly in armrest.	

		 Clip remover	*452589016300
3	Unlock catch hook (15) through opening (arrow C) in door lining (1) and remove switch pod (18) with left rear door power window switch (S21/3), right rear door power window switch (S21/4), left rear door switch group (S21/6) or right rear door switch group (S21/7) upward from door lining (1)	 Do not disconnect electrical connector.	
4	Remove bolts (16)		
5	Remove bolt (16.1)	Model 222.9	
6	Unclip left rear door exit/warning lamp (E17/5) or right rear door exit/warning lamp (E17/6) from door lining (1)	 Do not disconnect electrical connector.  Clip remover	*452589016300
7	Reach into opening (arrow A) and carefully unclip retaining clips (10) from door lining (1)	 Unclip door lining (1) by hand. The door lining (1) can be damaged when using the assembly wedge.	
8	Unclip door lining (1) from retaining clip (19) in rear door (2)	Model 222.0/1 with code 297 (Roller sun blinds in rear doors)  Unclip door lining (1) by hand. The door lining (1) can be damaged when using the assembly wedge.	
9	Unhook inside door opener cable (5) on inside door handle (6)		
10	Unlock electrical connectors (7, 8) on left rear door control unit (N69/3) or right rear door control unit (N69/4) and remove		
11	Unlock electrical connectors (7.2, 7.3, 7.4) on left rear door control unit (N69/3) or right rear door control unit (N69/4) and remove	Model 222.9	
12	Disconnect electrical connection (7.1)	Model 222.9	
13	Unlock electrical connector (12) on left rear door midrange speaker (H4/80) or right rear door midrange speaker (H4/81) and remove		
14	Unlock electrical connector (13) on left rear door tweeter (H4/70) or right rear door tweeter (H4/71) and remove		
15	Unlock catch hook (21), push slide (20) downward and turn wire lock (22) in direction of arrow	Model 222.9	
16	Pull door locking knob (4) with wire lock (22) out of door lining (1) and remove	Model 222.9	
17	Remove door lining (1)	 Guide left ear door exit and warning lamp (E17/5) or right rear door exit and warning lamp (E17/6) through door lining (1) with electrical line connected and allow to hang down.  Installation: The new door lining (1) is delivered together with the speaker grille. If it is different than the previously installed speaker grille, transfer or replace.	
18	Install in the reverse order		

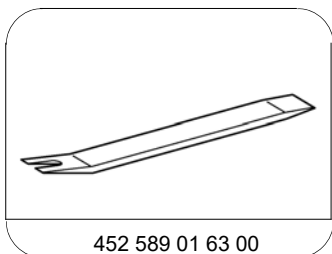

452 589 01 63 00

Clip remover