217 with engine 157, 176, 177, 276, 278, 279


Model 222 with engine 157, 176, 177, 256, 264, 276, 277, 278, 279

Modification notes

20.12.2018 Method description adapted Operation step 1

Shown except CODE 494 (USA version)


- 1 Activated charcoal canister
- 2 Line
- 3 Hose
- 4 Retaining clips
- 5 Retaining lug

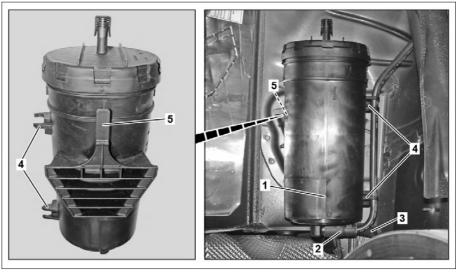

P47.30-2261-05

Shown on model 222 with engine 264


- 1 Activated charcoal canister
- 3 Hose
- 5 Retaining lug
- 6 Snap clamp
- 7 Plug-in connector
- 8 Electrical connector

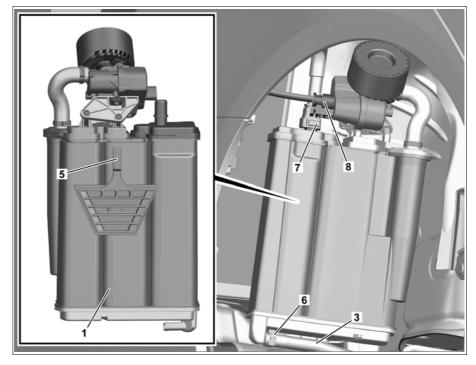


P47.30-A006-06

	Risk of explosion caused by fuel igniting, risk	No fires, sparks, open flames or smoking.	AS47.00-Z-0001-01A
	of poisoning caused by inhaling and	Pour fuels into suitable and appropriately	
	swallowing fuel as well as risk of injury to eyes		
	and skin caused by contactwith fuel.	Wear protective clothing when handling fuel.	
	Notes on avoiding damage through		AH00.00-P-5000-01A
	contamination and foreign objects		
	Information on preventing damage to		AH54.00-P-0001-01A
	electronic components due to electrostatic		
	discharge		
X	Remove/install		
1	Remove right rear wheel.		AR40.10-P-1102A

2	Remove fender liner in right rear fender.	Model 217 with engine 157, 176, 177, 276, 278, 279	AR88.10-P-1400LC
		Model 222 with engine 157, 176, 177, 256, 264, 276, 277, 278, 279	AR88.10-P-1400LF
3	Disconnect electrical connector (8).	Model 222 with engine 264	
4	Release click clamp (6).	Model 222 with engine 264 i Installation: Replace snap clamp (6). Pliers for click clamps	*171589003700
5	Detach hose (3) from activated charcoal canister (1) and seal openings with suitable stop plugs.	Record plug	*129589009100
6.1	Unclip line (2) from retaining clips (4), detach from activated charcoal canister (1), and seal openings with suitable stop plugs.	Model 217 with engine 157, 176, 177, 276, 278, 279 Model 222 with engine 157, 176, 177, 276, 277, 278, 279 Model 222 with engine 256 except code 494 (US version) Record plug	*129589009100
6.2	Disconnect electrical connector for leak tightness diagnostic device, detach vent line from activated charcoal canister (1), and seal openings with suitable stop plugs.	Model 222 with engine 176, 177, 256 with code 494 (US version)	*129589009100
7	Release securing lug (5) and push activated charcoal canister (1) upwards.	i Installation: Ensure that activated charcoal canister (1) is seated correctly.	1.2555555150
8	Remove activated charcoal canister (1) in downward direction.		
9	Install in the reverse order.		

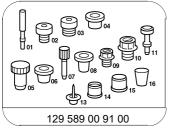

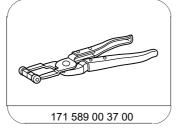

Record plug

Pliers for click clamps