#### Model 222

## with code P46 (Rear-Seat Entertainment Package)


## **Modification notes**

27.06.2017 Teaching components added.

Operation steps 8 and 9.


# Shown on model 222 up to model year 2018

A40/5 Left rear display A40/6 Right rear display

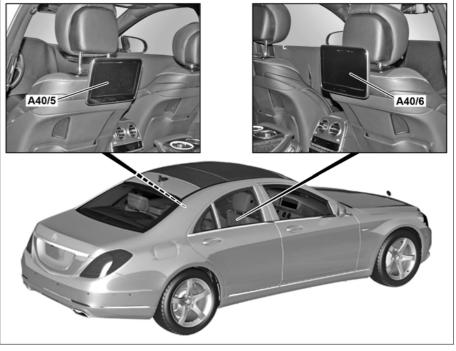

P82.90-2514-06



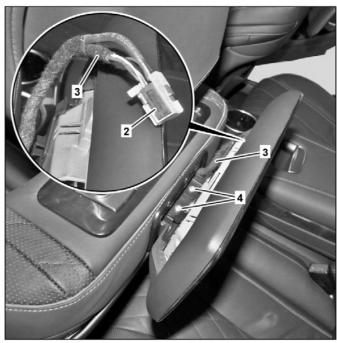

P82.60-9192-09

## Shown on model 222 up to model year 2018

- 1 Cover
- 2 Electrical connector
- 3 Electrical line

4 Bolts

A40/5 Left rear display

Notes on avoiding damage to optical fibers during repair work		AH82.60-P-0001-05AK
Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
Remove/install		
Switch off ignition and store transmitter key outside of transmission range (min. 2 m)		
Take off cover (1)		
Disconnect electrical connection (2)		
Pull out the electrical line (3) from the guide at the left rear display (A40/5) or the right rear display (A40/6)		
Remove screws (4)		
Remove left rear display (A40/5) or right rear display (A40/6) from respective seat		
Install in the reverse order		
Teach components		
Teach the radio frequency headphones (H8/3) to the left rear display (A40/5)	When renewing the left rear display (A40/5), one or both radio frequency headphones(H8/3).	
		AD00.00-P-2000-04B
Teach the radio frequency headphones (H8/3) and the COMAND remote control at the right rear display (A40/6)	When renewing the right rear display (A40/6), one or both radio frequency headphones (H8/3) or the COMAND remote control.	
		AD00.00-P-2000-04B
	during repair work  Information on preventing damage to electronic components due to electrostatic discharge  Remove/install  Switch off ignition and store transmitter key outside of transmission range (min. 2 m)  Take off cover (1)  Disconnect electrical connection (2)  Pull out the electrical line (3) from the guide at the left rear display (A40/5) or the right rear display (A40/6)  Remove screws (4)  Remove left rear display (A40/5) or right rear display (A40/6) from respective seat Install in the reverse order  Teach components  Teach the radio frequency headphones (H8/3) to the left rear display (A40/5)	during repair work  Information on preventing damage to electronic components due to electrostatic discharge  Remove/install  Switch off ignition and store transmitter key outside of transmission range (min. 2 m)  Take off cover (1)  Disconnect electrical connection (2)  Pull out the electrical line (3) from the guide at the left rear display (A40/5) or the right rear display (A40/6)  Remove screws (4)  Remove left rear display (A40/5) or right rear display (A40/6) from respective seat  Install in the reverse order  Teach components  Teach the radio frequency headphones (H8/3) to the left rear display (A40/5)  Teach the radio frequency headphones (H8/3) and the COMAND remote control at the right  When renewing the left rear display (A40/6), one or both radio frequency headphones (H8/3) and the COMAND remote control at the right