


Model 217, 222

Shown on model 222


- 1 Steering wheel
- 1s Screw

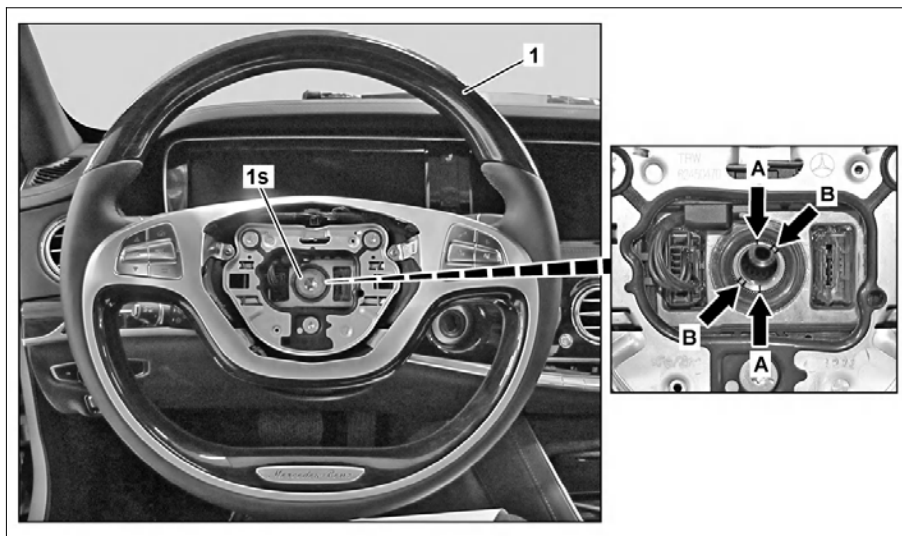

P46.10-3341-05

Shown on model 222

- 1 Steering wheel
- 2 Electrical connector

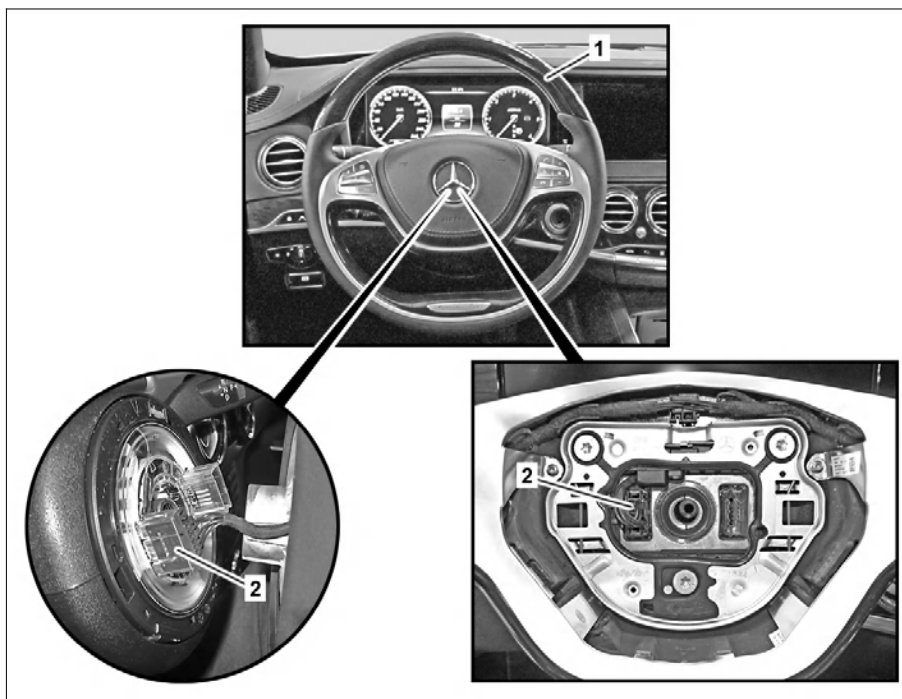

P46.10-3586-06

	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Notes on self-locking nuts and bolts		AH00.00-N-0001-01A
	<b>Remove/install</b>		
1	Turn steering wheel (1) to center position.	The front wheels must be in the straight-ahead position.	
2	Remove airbag unit from steering wheel (1).		AR91.60-P-0660LF
3	Counterhold steering wheel (1) and remove bolt (1s).	<b>Installation:</b> Reuse bolt (1s) and mark with a non-water-soluble pen (color dot). Screw/bolt, steering wheel to steering shaft If the bolt (1s) already bears a marking (color dot) ↓ Replace bolt (1s).	*BA46.10-P-1001-02J
4	Remove steering wheel (1) until the electrical connector (2) is accessible.		

5	Release and disconnect electrical connector (2).		
6	Remove steering wheel (1).	<p><b>i</b> <b>Installation:</b> Align recesses of the splines (arrows A) in steering wheel (1) with markings on the steering shaft.</p> <p><b>i</b> Model 217.### 2# , 222.### 2#</p> <p><b>Installation:</b> If there are double-line marks (arrows B) present on the steering shaft, match cutouts of spline (arrows A) with double-line marks (arrows B).</p>	
7	Install in the reverse order.		

**Nm** Steering wheel

Number	Designation		Model 217	Model 222
BA46.10-P-1001-02J	Screw/bolt, steering wheel to steering shaft	Nm	80	80