



MODEL 222

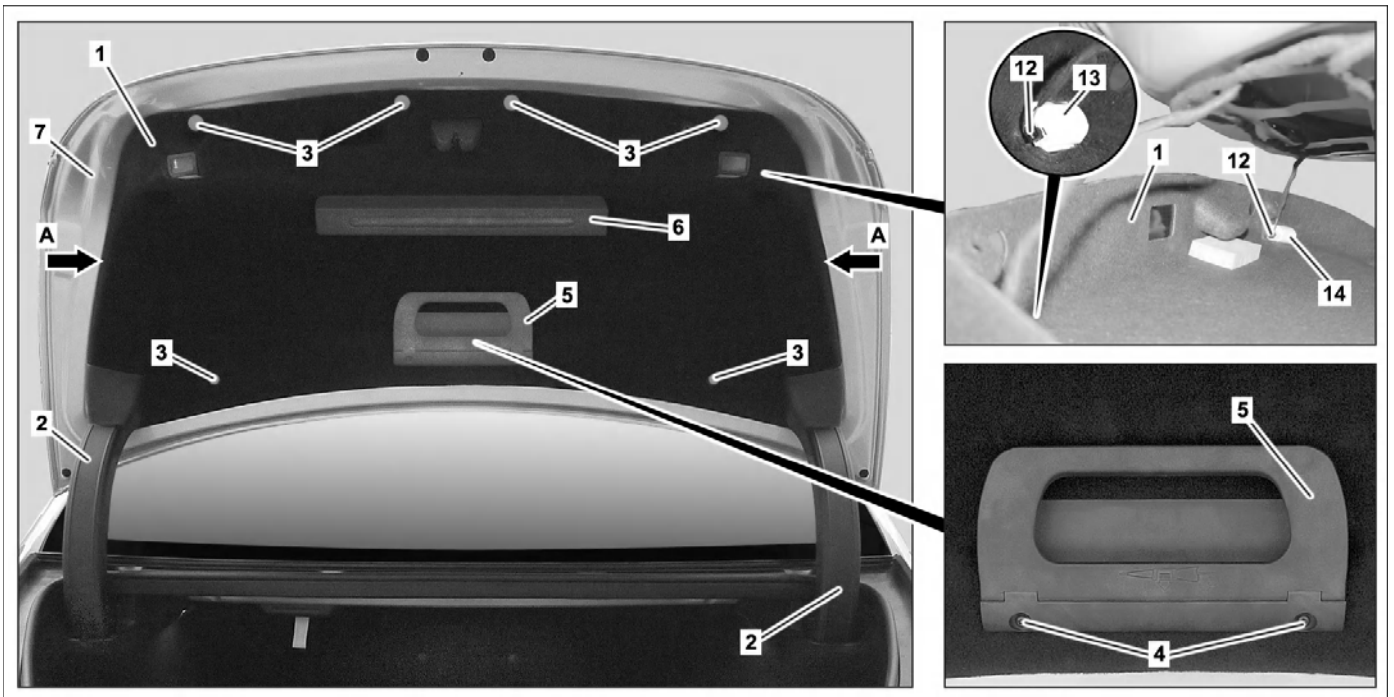

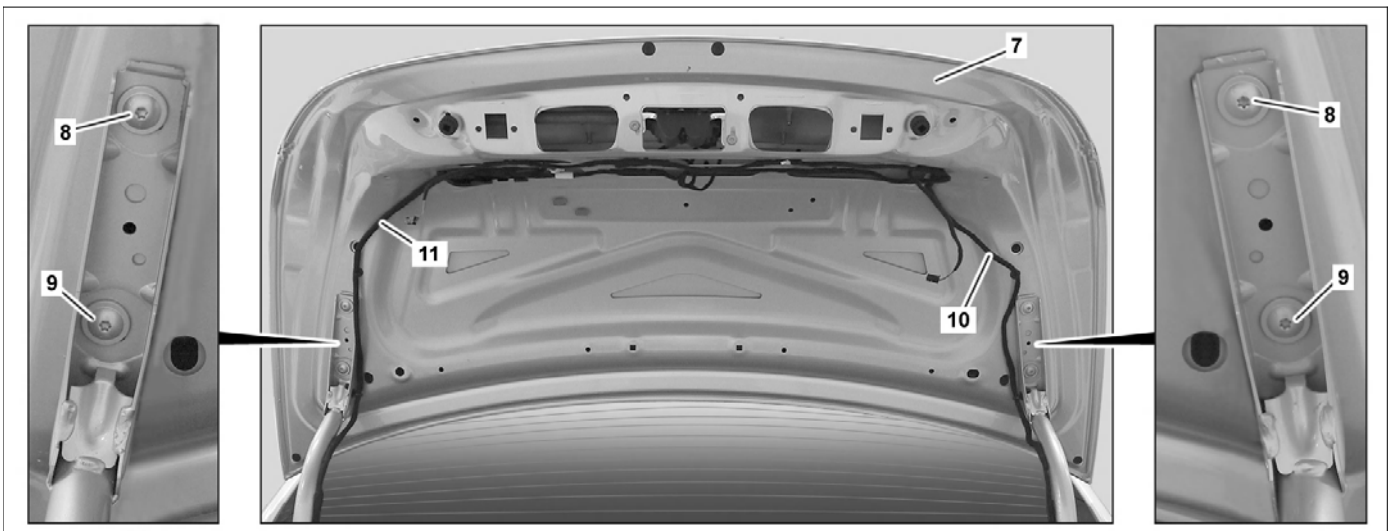


P88.50-3111-09


- | | | | | | |
|---|--------------------------|----|---------------------------------|----|--|
| 1 | Trunk lid paneling | 5 | Umbrella holder | 13 | Right trunk lid/liftgate ambient lamp and warning lamp |
| 2 | Hinge bracket trim piece | 6 | Hazard warning triangle bracket | 14 | Left trunk lid/liftgate ambient lamp and warning lamp |
| 3 | Expansion clips | 7 | Trunk lid | | |
| 4 | Bolts | 12 | Electrical connector | | |




P88.50-3112-08

- | | | | | | |
|---|-----------|----|---------------------------|----|---------------------------|
| 7 | Trunk lid | 9 | Screw | 11 | Electrical wiring harness |
| 8 | Screw | 10 | Electrical wiring harness | | |

 	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
	Remove/install		
1	Remove hinge bracket trim piece (2)		
2	Remove warning triangle (6) from warning triangle bracket		
3	Remove hazard warning triangle bracket (6)	i Installation: Replace clips on warning triangle bracket (6).	
4	Unscrew bolts (4) and remove umbrella holder (5)		
5	Remove expansion clips (arrows A)		
6	Remove expansion clips (3), unclip trunk lid paneling (1) with assembly wedge and remove until electrical connectors (12) on ambient lamp and right trunk lid/liftgate warning lamp (13) and ambient lamp and left trunk lid/liftgate warning lam (14) are accessible	 Mounting wedge  Clip remover	*110589035900 *452589016300
7	Disconnect electrical connectors (12) on ambient lamp and right trunk lid/liftgate warning lamp (13) or left trunk lid/liftgate warning lam (14) and ambient lamp and remove trunk lid paneling (1)		
8	Disconnect electrical connectors from electrical wiring harnesses (10 and 11) in trunk lid (7)	i The number of electrical connectors depends on the equipment installed.	
9	Remove electrical wiring harnesses (10 and 11) from trunk lid (7) and lay down to side		
10	Remove screws/bolts (8)	i Installation: Screw in bolts (8) only until trunk lid (7) can still be moved. Tighten bolts (8) when adjusting trunk lid (7).	
11	Loosen bolts (9)	i Loosen bolts (9) only until trunk lid (7) can be removed. i Installation: Screw in bolts (9) only until trunk lid (7) can still be moved. Tighten bolts (9) when adjusting trunk lid (7).	
12	Remove trunk lid (7)		
13	Install in the reverse order	i Install trunk lid paneling (1) only after adjusting trunk lid (7).	
14	Adjust trunk lid (7)		AR88.50-P-5200LF
15	Calibrate reversing camera and 360° camera with STAR DIAGNOSIS	MODEL 222 with CODE 218 (Reversing camera) with CODE 501 (360 degree camera)	AD00.00-P-2000-04B

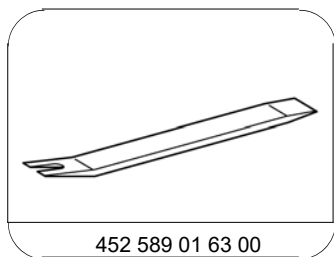

Clip remover

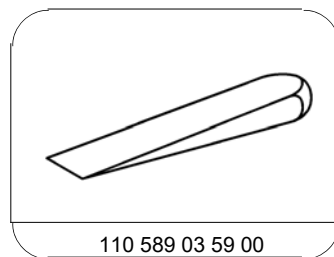

Mounting wedge