


Model 222

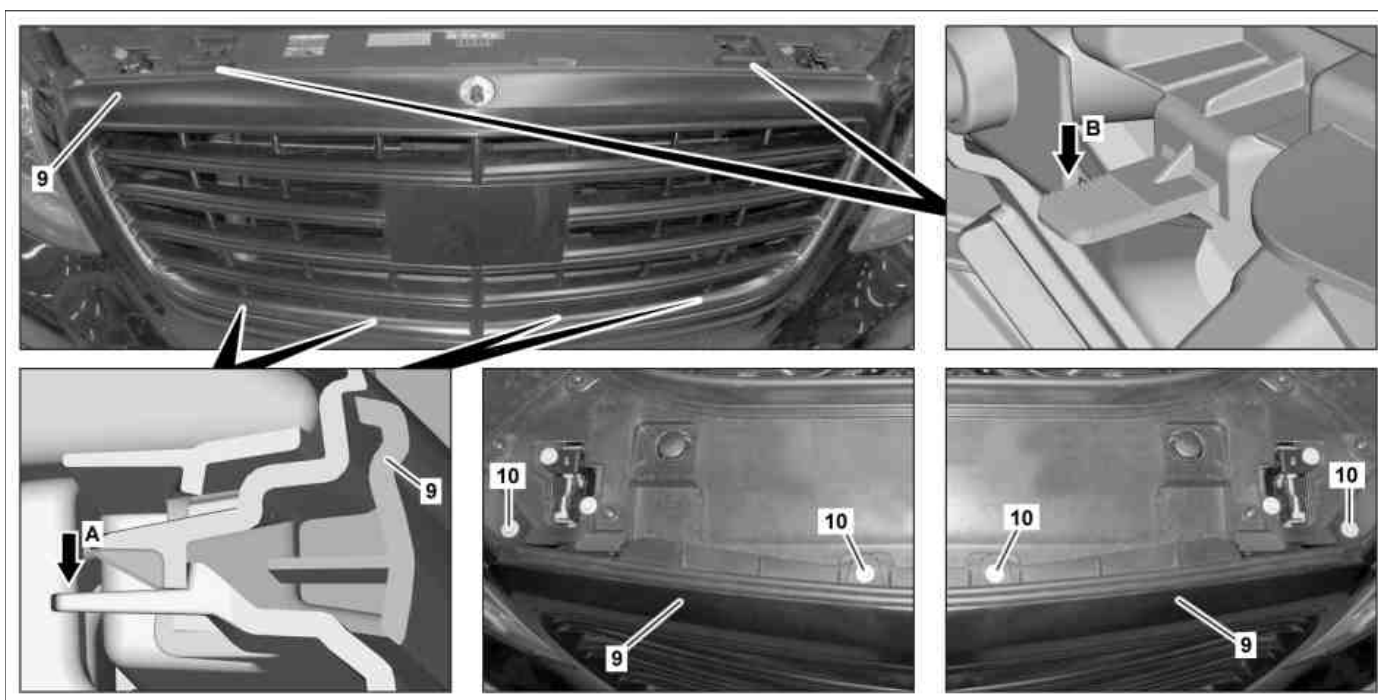

P88.20-3920-09

9 Radiator grille

10 Screw

	Danger !	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
	Remove/install			
1	Open engine hood			
2	Remove screws (10)			
3	Tilt radiator grille (9) at top toward front and release catches (arrow A)			
4	Expose electrical connector on 360° camera at front and disconnect		Model 222 with code 501 (360° camera)	AR54.30-P-3001LF
5	Remove radiator trim (9)		Installation: Adjust gap dimensions above catch (arrow B). Engine hood to radiator trim Protrusion of radiator trim/engine hood Feeler gauge	*BE60.00-P-1005-01BA *BE60.00-P-1006-01BA *129589032100
6	Install in the reverse order			
7	Calibrate front 360° camera using the diagnostic system		Model 222 with code 501 (360° camera)	AD00.00-P-2000-04B


Check values for gap dimensions

Number	Designation	Dimension "C"	mm	Model 222
BE60.00-P-1005-01BA	Engine hood to radiator trim		3,5 (± 1)	
		For picture, see		AR60.00-P-0700-01 LF

Check values for gap dimensions

Number	Designation	Model 222

BE60.00-P-1006-01BA	Protrusion of radiator trim/engine hood	Dimension "C"	mm	1 (±1)
		For picture, see		AR60.00-P-0700-01 LF

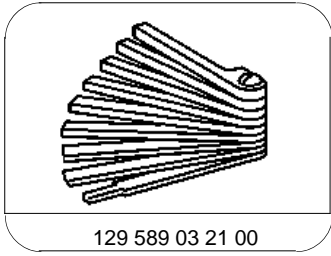

Feeler gauge