






- Model 217
with code 432 (Dynamic seats left and right)
- Model 217
with code P43 (Rear seat comfort package)
- Model 222.0/1/9
with code 432 (Dynamic seats left and right)
- Model 222.0/1/9
with code P43 (Rear seat comfort package)

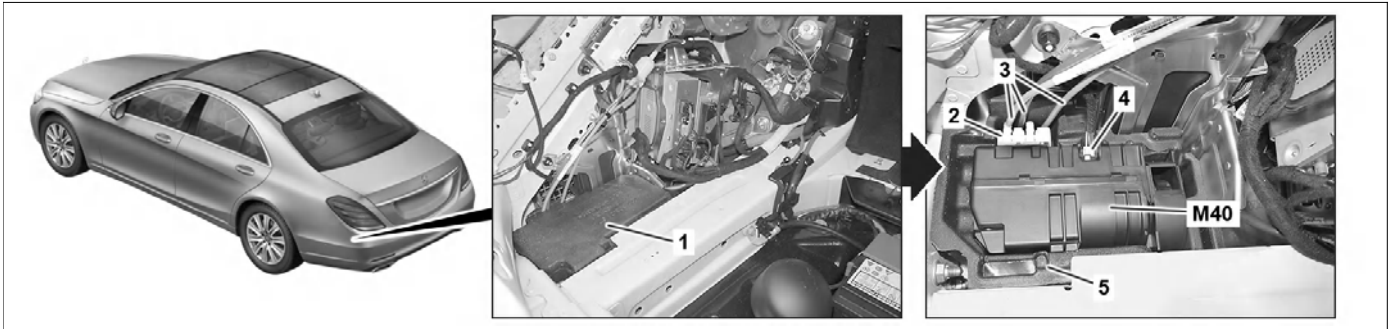

P91.25-2611-07

- 1 Cover
2 Connection block
3 Pneumatic lines
4 Electrical connector
5 Bracket
M40 Multicontour seat pneumatic pump

 	Remove/install		
1	Remove left cover from trunk	Model 217.4 with code 432 (Dynamic seats left and right) Model 217.4 with code P43 (Rear seat comfort package) Model 217.3 with code 432 (Dynamic seats left and right) Model 217.3 with code P43 (Rear seat comfort package) Model 222.0/1/9 with code 432 (Dynamic seats left and right) Model 222.0/1/9 with code P43 (Rear seat comfort package)	AR68.30-P-4800LCA AR68.30-P-4600LC AR68.30-P-4600LF
2	Remove woofer	Model 222.0/1/9 with code 432 (Dynamic seats left and right) with code 811 (High-End sound system) Model 222.0/1/9 with code 811 (High-End sound system) with code P43 (Rear seat comfort package)	AR82.62-P-7839LF
3	Take off cover (1)		
4	Remove multicontour seat pneumatic pump (M40) out of bracket (5) until electrical plug (4) can be disconnected		
5	Disconnect electrical plug (4) at multicontour seat pneumatic pump (M40)		
6	Disconnect pneumatic lines (3)	<p> Installation: Note installation position of pneumatic lines (3). Otherwise correct function of the air cushion of the multicontour seat is no longer ensured.</p> <p> Do not kink pneumatic lines (3) on multicontour seat pneumatic pump (M40). Otherwise the pneumatic lines (3) may be damaged.</p>	
7	Remove multicontour seat pneumatic pump (M40) from trunk		
8	Remove terminal block (2)	When replacing multicontour seat pneumatic pump (M40).	
9	Install in the reverse order		