

Item	Designation	Coordinates
A0	Use of wiring diagrams	64L
A45	Fanfare horns and airbag clock spring contact	25D 30D 37D 42D
Code 238	Active Lane Keeping Assist	37H
Code 443	Steering wheel heater	1D 23C 49A
F1/3	Passenger-side A-pillar fuse box	8L
F1/3f329	Electrical fuse 329	9K
K40/6	Driver-side fuse and relay module	4L
K40/6f210	Fuse 210	3L
M99	Steering wheel vibration motor	39L
N2/10	Supplemental restraint system control unit	21L
N30/4	Electronic Stability Program control unit	17L
N49	Steering wheel angle sensor	53B
N73	Electronic ignition switch control unit	13L
N80	Steering column module control unit	4A 11A 20A 29A 37A 45A 54A 61A
N135	Steering wheel electronics	25E 29E 37E 42E
N135s1	Left fanfare horn system button	35L
N135s2	Right fanfare horn system button	35L
N135s3	Center horns button	36L
R12/13	Driver airbag squib 1	43L
R12/14	Driver airbag squib 2	44L
R22/4	Steering wheel heater	25L
R22/4b1	Heating element temperature sensor	26L
R22/4r1	Steering wheel heater heating element	25L
S4	Combination switch	47D
S4s1	Turn signal lamps switch	46D
S4s2	Headlamp flasher/high beam switch	47D
S4s4	Windshield washer system switch	48D
S4s5	Wipe switch	48D
S16/13	DIRECT SELECT lever	61D
S40/4	Cruise control lever	56D
S40/4r1	DISTRONIC control	60D
S40/4s1	Resume from memory switch	54D
S40/4s2	Decelerate and set switch	55D
S40/4s3	Accelerate and set switch	55D
S40/4s4	OFF switch	57D
S40/4s6	SPEEDTRONIC switch	58D

Item	Designation	Coordinates
<u>S40/4v1</u>	SPEEDTRONIC light emitting diode	59D
<u>S59</u>	Steering column adjustment switch	50D
<u>S59/1</u>	Steering column adjustment and steering wheel heater switch	50D
<u>S59/1e1</u>	Steering wheel heater indicator lamp	50D
<u>S110</u>	Left multifunction steering wheel button group	29L
<u>S110/1</u>	Steering wheel downshift button	42L
<u>S110s1</u>	Scroll forward/back button	27L
<u>S110s2</u>	Voice control system OFF button	28L
<u>S110s3</u>	System selection button	28L
<u>S110s4</u>	'Back' button	29L
<u>S110s6</u>	OK button	30L
<u>S110s7</u>	Reset and 'Back' button	30L
<u>S111</u>	Right multifunction steering wheel button group	32L
<u>S111/1</u>	Steering wheel upshift button	40L
<u>S111s1</u>	Buttons + and - for setting specific functions and volume control	31L
<u>S111s3</u>	Accept/terminate phone call button	32L
<u>S111s4</u>	Voice control system ON button	33L
<u>S111s6</u>	Mute function button	34L
<u>U2</u>	Valid for all except USA	58A
<u>U1043</u>	Valid without code (443) Steering wheel heater	49A
<u>W34</u>	Left footwell ground point	7H
<u>X18</u>	Cockpit wiring harness and frame floor assembly electrical connector	10F
<u>X18/35</u>	Cockpit wiring harness and frame floor assembly electrical connector	16F
<u>Z6/116z1</u>	Circuit 31 connector sleeve	8F
<u>Flex E</u>	Chassis FlexRay	13K 17K
<u>LIN E1</u>	Steering LIN	29C