Transmission 725 (except 725.017) in model 222
Transmission 725.0 (except 725.007/017) in model 213
Transmission 725.0 (except 725.017) in model 205

Transmission 725.0 in model 166, 167, 172, 217, 231, 238, 253, 257, 290

Shown here is transmission 725.0 in model 205

4e Plug 5 Drain screw



P27.00-2418-06

Shown here is transmission 725.0 in model 257.359

4e Plug



P27.00-2511-11

⚠ Warning	Risk of injury . Skin or eye injuries may result when handling hot or glowing objects.	Wear protective gloves, protective clothing and safety glasses, if necessary.	AS00.00-Z-0002-01A
	Risk of death caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between vehicle lift columns and position the four support plates at the vehicle lift support points specified by the vehicle manufacturer.	AS00.00-Z-0010-01A
⚠ Caution	Risk of injury to skin and eyes due to handling of transmission oil. Health risk caused by swallowing transmission oil	Wear protective gloves, protective clothing and safety glasses. Do not pour transmission oil into beverage bottles.	AS00.40-Z-0001-01A
	Risk of death when touching components on vehicles with high-voltage on-board electrical system	Do not touch damaged or defective components and open lines of the high-voltage on-board electrical system. Persons who wear electronic implants (e.g. cardiac pacemakers) must not carry out any work on high-voltage on-board electrical systems.	

	Note on high-voltage on-board electrical system		AH54.00-P-0010-01A
	Notes on automatic transmission		AH27.19-P-0001-01NKB
23	Remove		
1	Remove automatic transmission oil pan with automatic transmission oil filters.	Transmission 725 (except 725.017) in model 222	
		Transmission 725.0 (except 725.007/017) in model 213 Transmission 725.0 (except 725.017) in mode	
		205 Transmission 725.0 in model 166, 167, 172, 217, 231, 238, 253, 257, 290	
F AR		Transmission 725.0 in model 166	AR27.10-P-7031EWM
⊯AR		Transmission 725.0 (except 725.007/017) in model 213 Transmission 725.0 in model 238	AR27.10-P-7030OLC
FAR		Transmission 725 (except 725.017) in model	AR27.10-P-7030LF
		222	7.1.2
		Transmission 725.0 in model 217	
FAR SEAR		Transmission 725.0 in model 257	AR27.10-P-7031MSA
F AR		Transmission 725.0 in model 290	AR27.10-P-7031MNI
		Dispose of the automatic transmission oil pan with the automatic transmission oil filters and do not use again.	
		Otherwise, this may lead to leakage and consequential damage.	
3	Remove stop plug (4e).		
3	Turn torque converter until drain screw (5) appears.		
4	Drain off Remove drain screw (5) and drain transmission oil.	Collect the drained transmission oil in a suitable container in order to measure the oil filling quantity.	
		Damage can otherwise occur. Dispose of old drain screw (5). Otherwise, this may lead to leakage and consequential damage.	
1 5	Clean		
» X	Clean drain opening on torque converter.		
6	Tighten new drain screw (5).	Replace the drain screw (5). Otherwise, this may lead to leakage and consequential damage.	
		Nm Drain screw to torque converter	*BA27.20-P-1002-01D
7	Install stop plug (4e).		
8	Install new automatic transmission oil pan with automatic transmission oil filters.	Transmission 725 (except 725.017) in model 222 Transmission 725.0 (except 725.007/017) in	
		model 213 Transmission 725.0 (except 725.017) in mode 205	
~-		Transmission 725.0 in model 166, 167, 172, 217, 231, 238, 253, 257, 290	ADOT 40 5 TOS : TOS
S AR		Transmission 725.0 in model 166 Transmission 725.0 (except 725.007/017) in model 213	AR27.10-P-7031EWM AR27.10-P-7030OLC
⊯ AR		Transmission 705 0 in model 000	
⊯AR ⊯AR		Transmission 725.0 in model 238 Transmission 725 (except 725.017) in model 222 Transmission 705.0 in model 247	AR27.10-P-7030LF
		Transmission 725 (except 725.017) in model	AR27.10-P-7030LF AR27.10-P-7031MSA

Nm Torque converter

Number	Designation	Transmission 725.0
BA27.20-P-1002-01D	Drain screw to torque converter Nm	10