



MODEL 217
MODEL 222

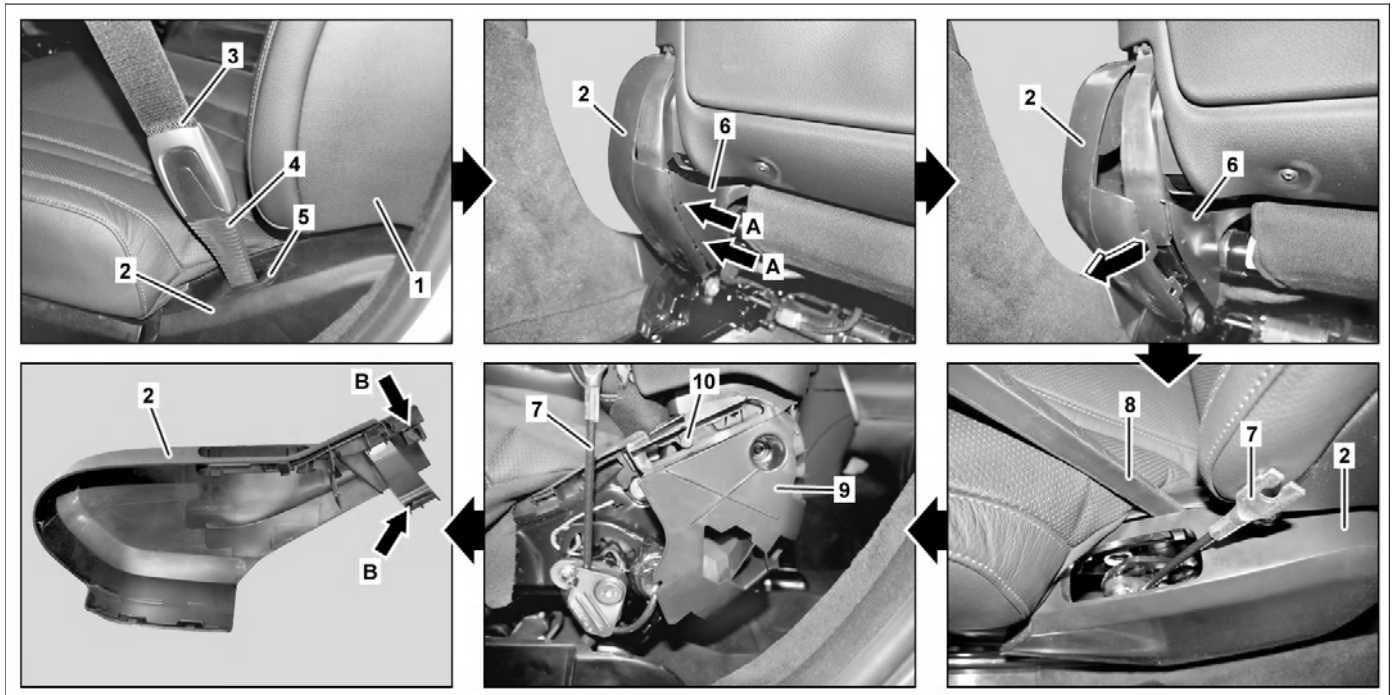

P91.10-3799-09

Shown on MODEL 222

- | | | | | | |
|---|------------------|---|------------|----|---------------------|
| 1 | Front seat | 5 | Cover | 9 | Inner reinforcement |
| 2 | Rear outer trim | 6 | Left cover | 10 | Guide bolts |
| 3 | Belt end fitting | 7 | Cable eye | | |
| 4 | Bellows | 8 | Long wedge | | |

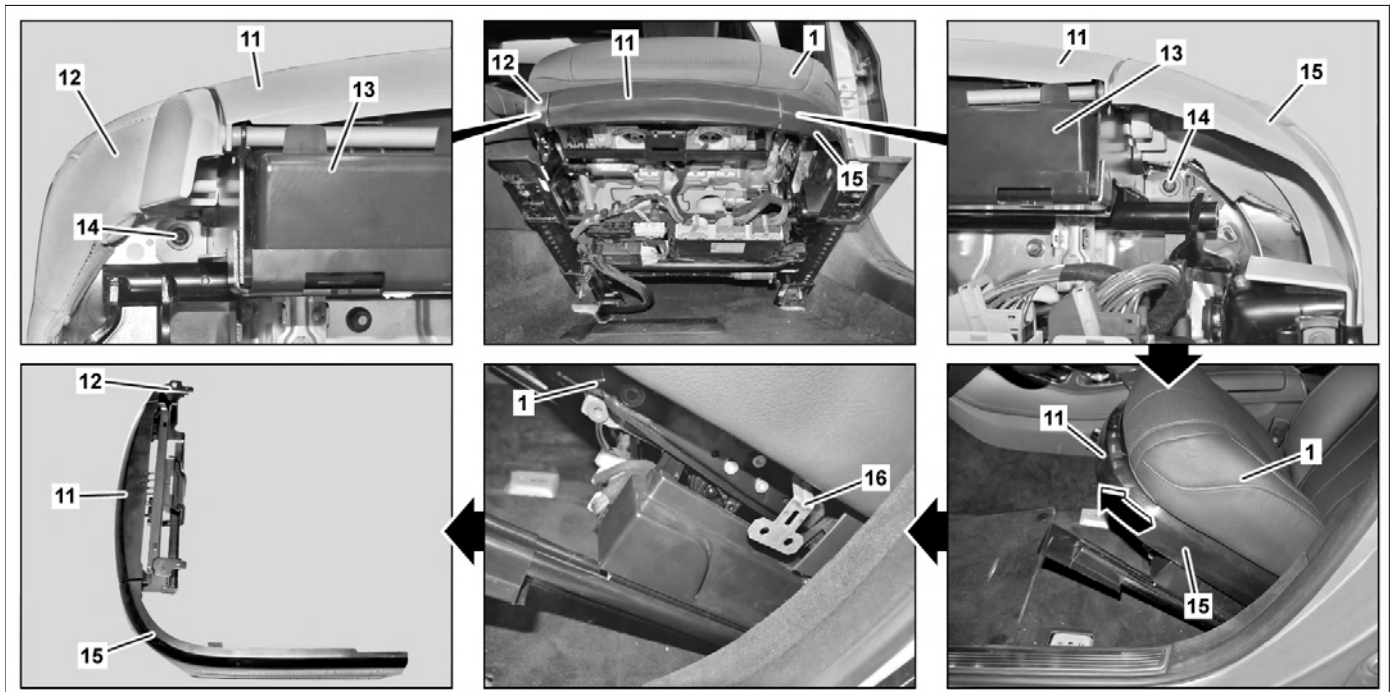


P91.10-3800-09

Shown on MODEL 222 without CODE 682 (Fire extinguisher)

- 1 Front seat
- 11 Flap
- 12 Inner front paneling



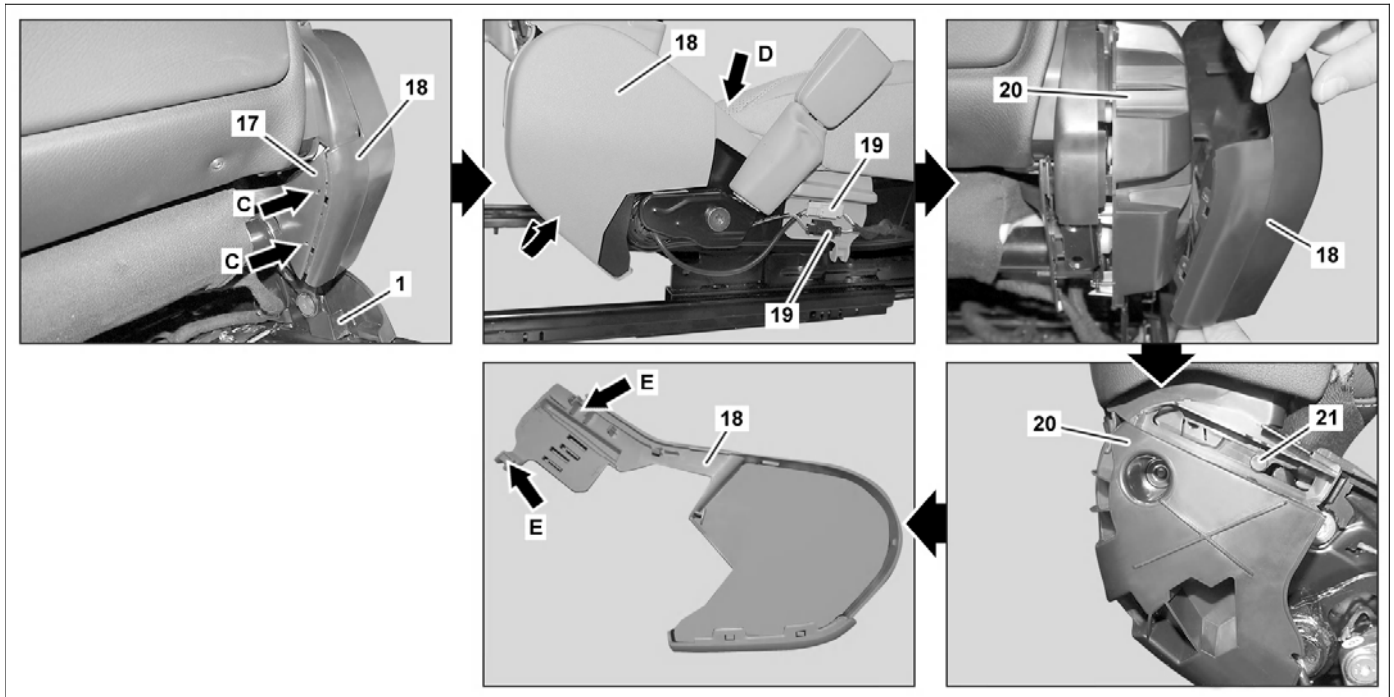







- 13 Stowage compartment (without CODE 682 (Fire extinguisher))
- 14 Screw
- 15 Front outer trim
- 16 Bracket






P91.10-3801-09

Shown on MODEL 222

- 17 Right cover
- 18 Inner rear paneling
- 19 Electrical connector
- 20 Inner reinforcement
- 21 Guide bolts


 	Remove/install		
1	Move front seat (1) to foremost position and upwards		
2	Remove belt end fitting (3)	MODEL 222	AR91.40-P-1030-02LF
3	Unclip cover (5)	MODEL 222  Installation: Pay attention to installation position.  Extraction hook	*140589023300
4	Remove boot (4)	MODEL 222  Installation: Pay attention to installation position.	
5	Unclip rear outer panel (2) and remove	 Release catch hooks of rear outer panel (2) through openings (arrows A) with suitable tool and guide rear outer panel (2) out of left cover (6). Unclip rear outer panel (2), as shown, with  long wedge (8), lift it and guide it out of seat cushion frame.  Installation: Pay attention to installation position. Guide cable eye (7) through rear outer panel (2). Ensure that brackets (arrows B) are seated correctly in seat cushion frame.  Long wedge	*115589035900
6	Unclip inner reinforcement (9) from rear outer panel (2)	MODEL 222 If the inner reinforcement (9) remains in the outer rear panel (2).	
7	Attach inner reinforcement (9) on backrest frame	MODEL 222  Inner reinforcement (9) partially detaches from backrest frame.	

  		i Installation: Pay attention to installation position. Ensure that guide pin (10) is seated correctly in guide rail of inner reinforcement (9).	
8.1	Open flap (11) and remove fire extinguisher	MODEL 217 with CODE 682 (Fire extinguisher) MODEL 222 with CODE 682 (Fire extinguisher) i Installation: Ensure that fire extinguisher is seated correctly.	
8.2	Open flap (11) and clear out stowage compartment (13)	MODEL 217 without CODE 682 (Fire extinguisher) MODEL 222 without CODE 682 (Fire extinguisher)	
9	Close flap (11)		
10	Release front seat (1) and fold backward with electrical lines connected		AR91.10-P-1000LF
11	Remove left and right screw/bolt (14)		
12	Remove front outer panel (15) from bracket (16)		
13	Swivel front outer panel (15), flap (11), front inner panel (12), stowage compartment (13) and frame upwards as a unit and remove from front seat (1)	i MODEL 217 without CODE 682 (Fire extinguisher) MODEL 222 without CODE 682 (Fire extinguisher) The stowage compartment (13) is only available for these vehicles.	
14	Unclip front outer panel (15) from frame and remove	When replacing front outer panel (15).	
15	Unclip flap (11) and remove from frame	When replacing flap (11).	
16	Unclip front inner panel (12) and remove from frame	When replacing front inner panel (12).	
17	Release electrical connectors from front seat, disconnect and remove front seat (1)		AR91.10-P-1000LF
18	Release electrical connectors (19) at rear inner panel (18) and remove	i Installation: Pay attention to installation position.	
19	Unclip rear inner panel (18) and remove	i Release catch hooks of rear inner panel (18) through openings (arrows C) with suitable tool and guide rear inner panel (18) out of right cover (17). Unclip inner rear panel (18) using  long wedge (8) (arrow D), lift and guide out of seat cushion frame. i Installation: Pay attention to installation position. Ensure that brackets (arrows E) are seated correctly in seat cushion frame.  Long wedge	*115589035900
20	Unclip inner reinforcement (20) from rear inner panel (18)	MODEL 222 Only if inner reinforcement (20) remains in rear inner panel (18).	
21	Attach inner reinforcement (20) on backrest frame	MODEL 222 i Inner reinforcement (20) partially detaches from backrest frame. i Installation: Pay attention to installation position. Ensure that guide pin (21) is seated correctly in guide rail of inner reinforcement (20).	
22	Install in the reverse order		

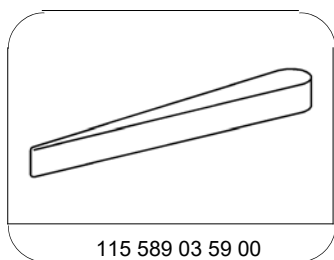

115 589 03 59 00

Long wedge

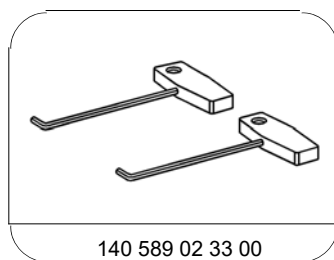

140 589 02 33 00

Extraction hook