


Model 217, 222
up to model year 2018

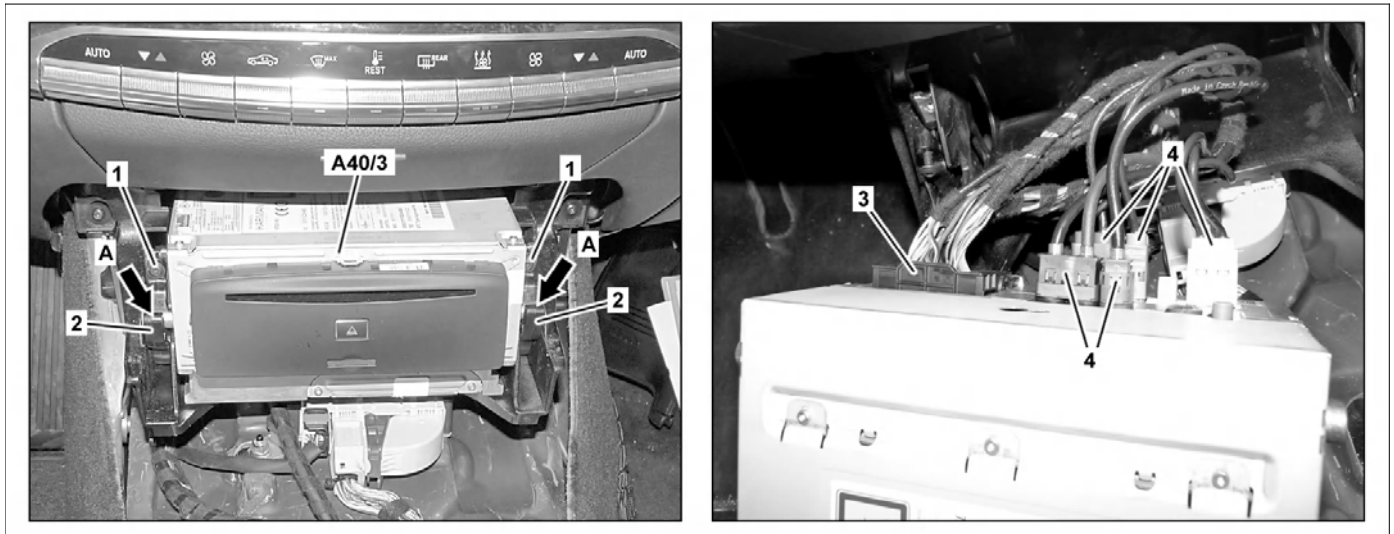

P82.87-9996-08

1 Screw
2 Lock
3 Black connector

4 Electrical connectors
A40/3 COMAND control unit

	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Notes on avoiding damage to optical fibers during repair work		AH82.60-P-0001-05AK
	Remove/install		
1 	Connect diagnostic system and perform initial startup of COMAND controller unit (A40/3)	When replacing the COMAND controller unit (A40/3).	AD00.00-P-2000-04B
2	Switch off ignition and keep transmitter key outside transmitter range (at least 2 m)		
3	Remove center console		AR68.20-P-2000LF
4	Loosen bolts (1) on locks (2)	Screws/bolts (1) remain on locks (2).	
5	Guide COMAND controller unit (A40/3) at locks (2) out of instrument panel		
6	Remove COMAND controller unit (A40/3) from locks (2) until black connector (3) and electrical connectors (4) are accessible	Installation: Insert retaining bolts (arrows A) of COMAND controller unit (A40/3) into the locks (2).	
7	Disconnect black connector (3) and electrical connectors (4)	The number of electrical connections (4) can vary depending on the equipment installed.	
8	Remove COMAND controller unit (A40/3) from vehicle		
9	Install in the reverse order		