


Model 222

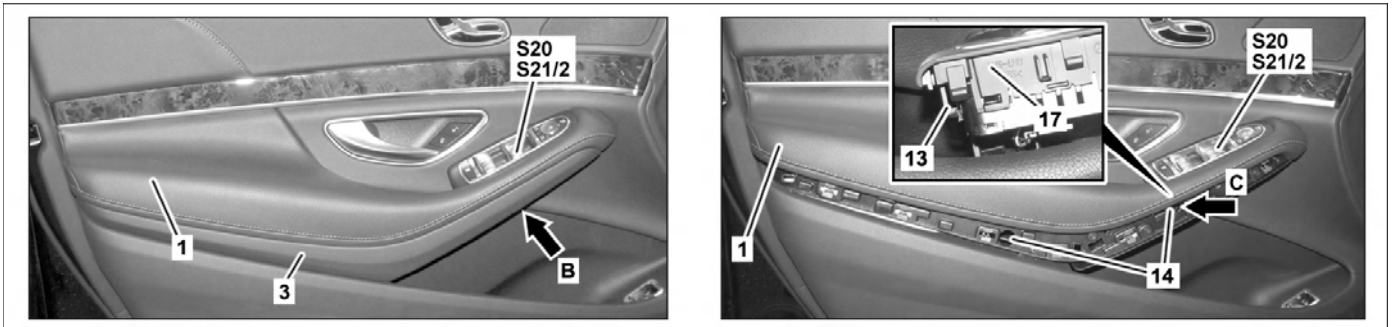

P72.10-4057-07


- |    |             |     |  |       |   |
|----|-------------|-----|--|-------|---|
| 1  | Door lining | 14  | Bolts  | S21/2 | Power window switch, front passenger side |
| 3  | Trim piece  | 17  | Frame  |       |   |
| 13 | Catch hook  | S20 | Power window and outside mirror adjustment switch group, driver side |       |   |

Shown on MODEL 222 with CODE Z07 (Top protection)

- |    |             |
|----|-------------|
| 1  | Door lining |
| 12 | Cover       |




P72.10-4334-06

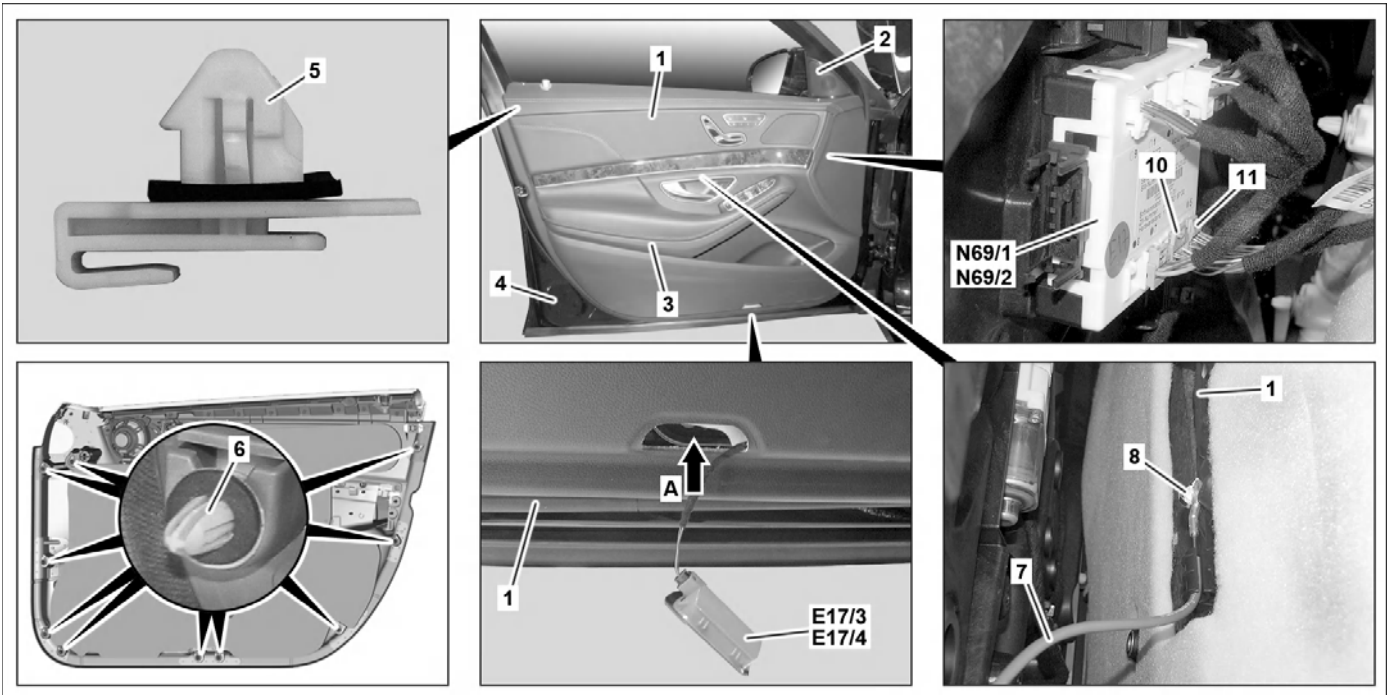

P72.10-4056-09

 


- |   |                          |    |                          |       |  |
|---|--------------------------|----|--------------------------|-------|--|
| 1 | Door lining              | 6  | Mounting clip            | E17/3 | Left front door exit and warning lamp  |
| 2 | Mirror triangle paneling | 7  | Inside door opener cable | E17/4 | Right front door exit and warning lamp |
| 3 | Trim piece               | 8  | Inner door handle        | N69/1 | Left front door control unit           |
| 4 | Front door               | 10 | Electrical connector     | N69/2 | Right front door control unit          |
| 5 | Mounting clip            | 11 | Electrical connector     |       |  |

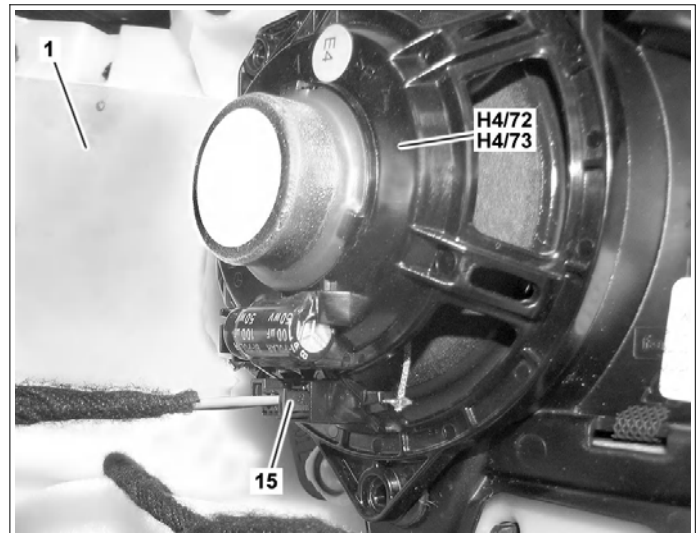
- |       |                                   |
|-------|-----------------------------------|
| 1     | Door lining                       |
| 15    | Electrical connector              |
| H4/72 | Left front door midrange speaker  |
| H4/73 | Right front door midrange speaker |



P72.10-4058-11

	<b>Risk of injury</b> caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
⚠	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
🔧 🛠	<b>Remove/install</b>		
1	Lift catch hook on trim piece (3) through opening (arrow B) with suitable screwdriver, then slightly guide catch hook of trim piece (3) out of armrest and hold trim piece (3) so that the catch hook cannot stuck		

2	Unclip with trim piece (3) from front toward rear from remaining mounting points and remove	<b>i</b> <b>Installation:</b> Ensure the trim piece (3) is seated correctly in armrest.  Clip remover	*452589016300
3	Unlock catch hook (13) through opening (arrow C) in door lining (1) and remove frame (17) with driver side power window and outside mirror adjustment switch group (S20) or passenger side power window switch group (S21/2) upward out of door lining (1)	<b>i</b> Do not disconnect electrical connector.	
4	Remove screws/bolts (14)		
5	Unclip cover (12) and unscrew bolt below	Model 222 with code Z07 (Top protection)	
6	Unclip left front door exit and warning lamp (E17/3) or right front door exit and warning lamp (E17/4) from door lining (1)	<b>i</b> Do not disconnect electrical connector.   Clip remover	*452589016300
7	Reach into opening (arrow A) and carefully unclip retaining clip (6) on door lining (1) by pulling carefully to inner sealing rail	 Unclip door lining (1) by hand. The door lining (1) can be damaged when using the assembly wedge.	
8	Slightly pivot door lining (1) toward inside of vehicle, then remove horizontally starting at front from inner sealing rail and push toward rear until door lining (1) moves out of retaining clip (5) and retaining clip (5) releases from front door inner panel (4)		
9	Remove door lining (1) from front door (4) until electrical connectors (10, 11) on left front door control unit (N69/1) or right front door control unit (N69/2) and inside door opener wire (7) are accessible		
10	Disconnect electrical connectors (10, 11) from left front door control unit (N691) or right front door control unit (N692)		
11	Unhook inside door opener cable (7) on inside door handle (8)		
12	Disconnect electrical connector (15) from left front door midrange speaker (H4/72) or right front door midrange speaker (H4/73)		
13	Remove door lining (1)	<b>i</b> Guide left front door warning/exit lamp (E17/3) or right front door warning/exit lamp (E17/4) through door lining (1) with electrical lines connected and allow to hang down. <b>i</b> <b>Installation:</b> The new door lining (1) is delivered together with the speaker grille. If it is different than the previously installed speaker grille, transfer or replace.	
14	Install in the reverse order		

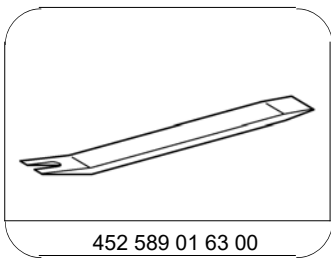

452 589 01 63 00

Clip remover