 



- ▶ Select Additional Display Area.
A menu appears.
- ▶ To select the desired display element: turn and press the controller.
The ● dot indicates the current setting.

Switching the display on/off

- ▶ Press the  button.
- or
- ▶ Press Vehicle in the main function bar.
The vehicle menu is displayed.
- ▶ To select Display Off: slide , turn and press the controller to confirm.
The display goes out.
- ▶ **To switch the display on again:** press the controller.

Time settings

General information

COMAND can automatically set the time and date.

 
The following navigation system functions require the time, time zone and summer/standard time to be set correctly in order to work properly:

- route guidance on routes with time-dependent traffic guidance
- calculation of expected time of arrival

Switching automatic time on and off



The Automatic Time Settings function is used to activate or deactivate the automatic setting of the time and date. This function is activated when the vehicle leaves the factory.

- ▶ Press the  button.
- or
- ▶ Press Vehicle in the main function bar.
The vehicle menu is displayed.

- ▶ To select Time: slide , turn and press the controller to confirm.
A menu appears.
- ▶ To select Automatic Time Settings: press the controller.
- ▶ To switch the function on or off : press the controller.

Setting the time zone

To set the time zone, the Automatic Time Settings function must be activated (▷ page 48).

- ▶ Press the  button.
- or
- ▶ Press Vehicle in the main function bar.
The vehicle menu is displayed.
- ▶ To select Time: slide , turn and press the controller to confirm.
A menu appears.
- ▶ To select Time Zone:: turn and press the controller.
A list of countries appears. The ● dot indicates the current setting.
- ▶ Select the country you are currently in by turning and pressing the controller.
The country is accepted.
A time zone list may also be displayed, depending on the country selected.
- ▶ To select the desired time zone: turn and press the controller.
The time zone is accepted.
A list of available options for setting summer time appears (▷ page 49).

Setting summer and standard time


You can use the Daylight Saving Time menu to set automatic summer time changeover or switch the summer time setting on or off. The changeover to summer time advances the time by one hour.

The Daylight Saving Time menu or the Automatic option is not available in all countries.

► Press the  button.

or

► Press Vehicle in the main function bar. The vehicle menu is displayed.

► To select Time: slide , turn and press the controller to confirm.

A menu appears.

► To select Daylight Saving Time: turn and press the controller.

A list of available options for setting summer time appears.

► To select Auto, On or Off: turn and press the controller.

Setting	Function
Automatic	The summer and standard time are automatically changed over.
On	The clock is advanced one hour ahead of standard time.
Off	The standard time for the chosen time zone is selected.

Manual time setting




Using the manual time settings, you can set the time forwards or backwards by up to several hours.

► Press the  button.

or

► Press Vehicle in the main function bar. The vehicle menu is displayed.


► To select Time: slide , turn and press the controller to confirm.

A menu appears.

► To select Set Time Manually: turn and press the controller.

A menu with an analog clock appears.

► To set the hour: turn the controller.

► To highlight minutes: slide  the controller.

► To set minutes: turn and press the controller.

The time is accepted.

The Automatic Time Settings function is deactivated .

 
 
If Automatic is set for the summer time changeover, a prompt will appear asking whether the automatic changeover should be maintained between summer and winter time.

The Daylight Saving Time menu or the Automatic option is not available in all countries.

i If Automatic Time Settings is reactivated, the previous settings for time zone and summer time changeover are restored.

 

Setting the time and date format

Use this function to set the time and date format for all displays in the vehicle.

- ▶ Press the  button.
- or
- ▶ Press Vehicle in the main function bar. The vehicle menu is displayed.
- ▶ To select Time: slide , turn and press the controller to confirm. A menu appears.
- ▶ To select Format: turn and press the controller.
- ▶ To select the desired date format: turn and press the controller. The • dot indicates the current setting.
- ▶ To select the desired time format: turn and press the controller. The • dot indicates the current setting.

Abbreviation	Meaning
YYYY/MM/DD	Year/Month/Day date format, year (all four digits)
YY/MM/DD	Year/Month/Day date format, year (two digits)
MM/DD/YYYY	Month/Day/Year date format, year (all four digits)
DD/MM/YYYY	Day/Month/Year date format, year (all four digits)
HH:MM (24 hrs)	Hours : Minutes (24 hour time format)
HH:MM (AM/PM)	Hours : Minutes (AM/PM time format)

Text reader settings

 

- ▶ Press the  button.
- or
- ▶ Press Vehicle in the main function bar. The vehicle menu is displayed.
- ▶ To select System Settings: slide , turn and press the controller to confirm. A menu appears.
- ▶ To select Text Reader Speed: turn and press the controller. A list appears.
- ▶ Select Fast, Medium or Slow. The • dot indicates the current setting.

Voice Control System settings

Opening/closing the help window

i If the set system language is not supported by the Voice Control System, English will be selected.

The help window also shows you information on audible instructions:

- during individualization
- during subsequent operation of the Voice Control System.
- ▶ Press the  button.
- or
- ▶ Press Vehicle in the main function bar. The vehicle menu is displayed.
- ▶ To select System Settings: slide , the controller, turn and press to confirm. A menu appears.
- ▶ To select Voice Control: turn and press the controller.
- ▶ Select Help Window. You have switched the help window on or off .

More information on the Voice Control System is available in the separate operating instructions.