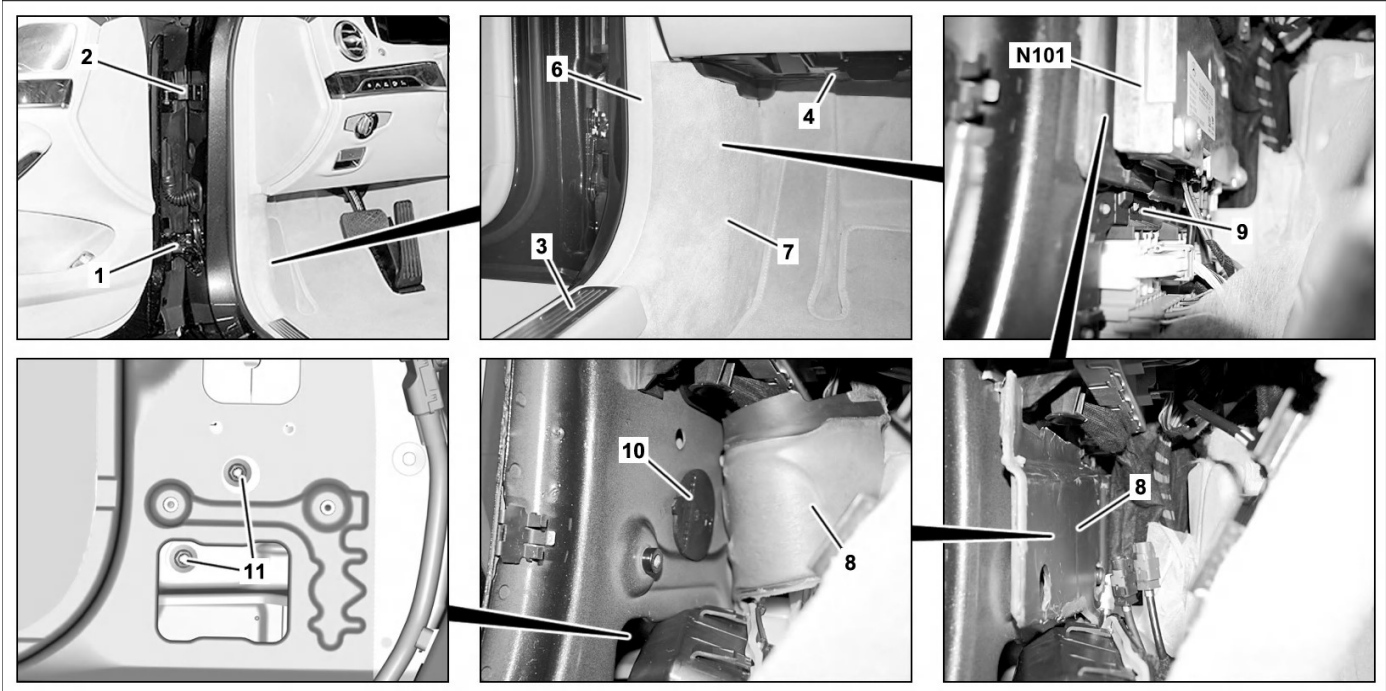


Model 217
Driver side

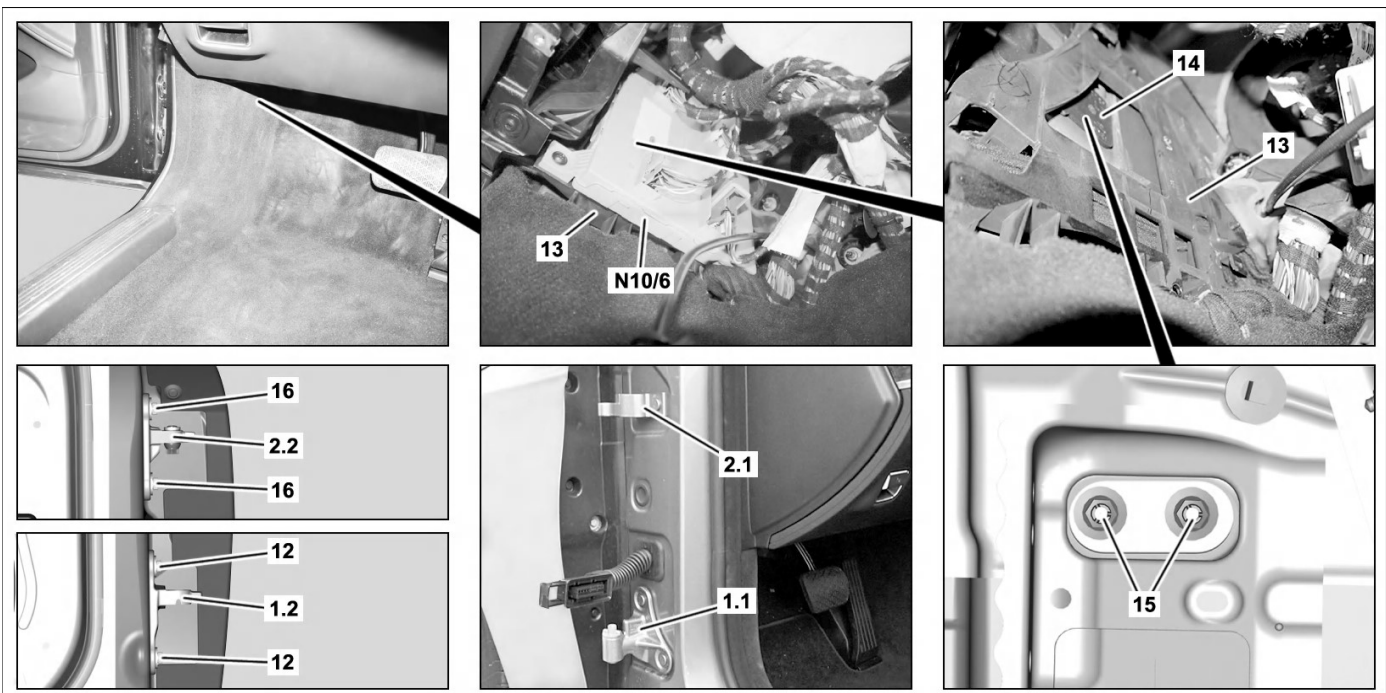
Model 222
except code Z07 (B7 armoring on special protection version)
Driver side



P72.10-4214-09

Shown on MODEL 222



 
 
 
 
 
 
 
- | | | | | | |
|---|--------------|---|---|------|--|
| 1 | Bottom hinge | 6 | Edge guard | 10 | Cap |
| 2 | Top hinge | 7 | Floor covering | 11 | Nuts |
| 3 | Door sill | 8 | Insulation mat | N101 | Night View Assist control unit (with CODE (610) Night View Assist) |
| 4 | Cover | 9 | Power distributor / potential distributor | | |

 
 
 
 


P72.10-4215-09

Shown on MODEL 222

1.1	Bottom A-pillar hinge leaf	12	Screw	15	Nuts
1.2	Bottom door hinge leaf	13	Bracket	16	Screw
2.1	Top A-pillar hinge leaf	14	Cover	N10/6	Front SAM control unit
2.2	Top door hinge leaf				

 Warning	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
	Remove/install		
1	Move driver seat all the way down		
2	Remove front door		AR72.10-P-0500LF
3.1	Mark installation position of bottom A-pillar hinge leaf (1.1) and bottom door hinge leaf (1.2)	When removing bottom hinge (1).	
3.2	Mark installation position of top A-pillar hinge leaf (2.1) and top door hinge leaf (2.2)	When removing top hinge (2).	
4	Remove door sill molding (3)		
5	Remove cover (4) below instrument panel	Model 217 Model 222.0/1 except code Z07 (B7 armoring on special protection version)	AR68.10-P-1500LF
6	Remove edge guard (6) in area of floor covering (7) from body flange		
7	Detach floor covering (7) from A-pillar and fold over		
8	Remove night view assist control unit (N101)	Model 217 with code 610 (Night view assist) Model 222 with code 610 (Night view assist) except code Z07 (B7 armoring on special protection version)Driver side	AR54.30-P-3100LF
9	Unclip power distributor/potential distributor (9) from A-pillar and down to side with lines connected	When removing bottom hinge (1).	
10	Press insulating mat (8) to side until cap (10) is accessible	When removing bottom hinge (1).	
11	Remove cap (10)	When removing bottom hinge (1).  Installation: Before installing cap (10): ↓ Install front door and adjust	AR72.10-P-0500LF
12	Unscrew nuts (11) and remove bottom A-pillar hinge leaf (1.1)	When removing bottom hinge (1).  Model 217Nut, hinge to A-pillar  Model 222 except code Z07 (B7 armoring on special protection version)Nut, hinge to A-pillar	*BA72.10-P-1002-01X *BA72.10-P-1002-01V
13	Unscrew bolts (12) and remove bottom door hinge leaf (1.2)	When removing bottom hinge (1).  Model 217Bolt, hinge to doors  Model 222 except code Z07 (B7 armoring on special protection version)Bolt, hinge to front door	*BA72.10-P-1001-01X *BA72.10-P-1001-01V
14	Remove front SAM control unit (N10/6)	When removing top hinge (2).	AR54.21-P-1254LF
15	Remove bracket (13)	When removing top hinge (2).	
16	Remove cover (14)	When removing top hinge (2).  Installation: Before installing cover (14): ↓ Install front door and adjust	AR72.10-P-0500LF
17	Unscrew nuts (15) and remove top A-pillar hinge leaf (2.1)	When removing top hinge (2).  Helper required to hold top A-pillar hinge leaf (2.1).	

		 Model 217Nut, hinge to A-pillar  Model 222 except code Z07 (B7 armoring on special protection version)Nut, hinge to A-pillar	*BA72.10-P-1002-01X *BA72.10-P-1002-01V
18	Unscrew bolts (16) and remove top door hinge leaf (2.2)	When removing top hinge (2).  Model 217Bolt, hinge to doors  Model 222 except code Z07 (B7 armoring on special protection version)Bolt, hinge to front door	*BA72.10-P-1001-01X *BA72.10-P-1001-01V
19	Install in the reverse order		

 Front door

Number	Designation		MODEL 222 except CODE Z07
BA72.10-P-1001-01V	Bolt, hinge to front door	Nm	35

 Front door

Number	Designation		Model 217
BA72.10-P-1001-01X	Bolt, hinge to doors	Nm	35

 Front door

Number	Designation		MODEL 222 except CODE Z07
BA72.10-P-1002-01V	Nut, hinge to A-pillar	Nm	35

 Front door

Number	Designation		Model 217
BA72.10-P-1002-01X	Nut, hinge to A-pillar	Nm	35