


Model 217, 222

### Modification notes

19.05.2016	Tool to be used changed and angle specifications included.	Operation step 3	
------------	--	------------------	--

Model 217, model 222 as of 31.05.2014,  
shown on model 217


- 1 Screwdriver
- 2 Spring
- 3 Electrical connector
- 4 Driver airbag

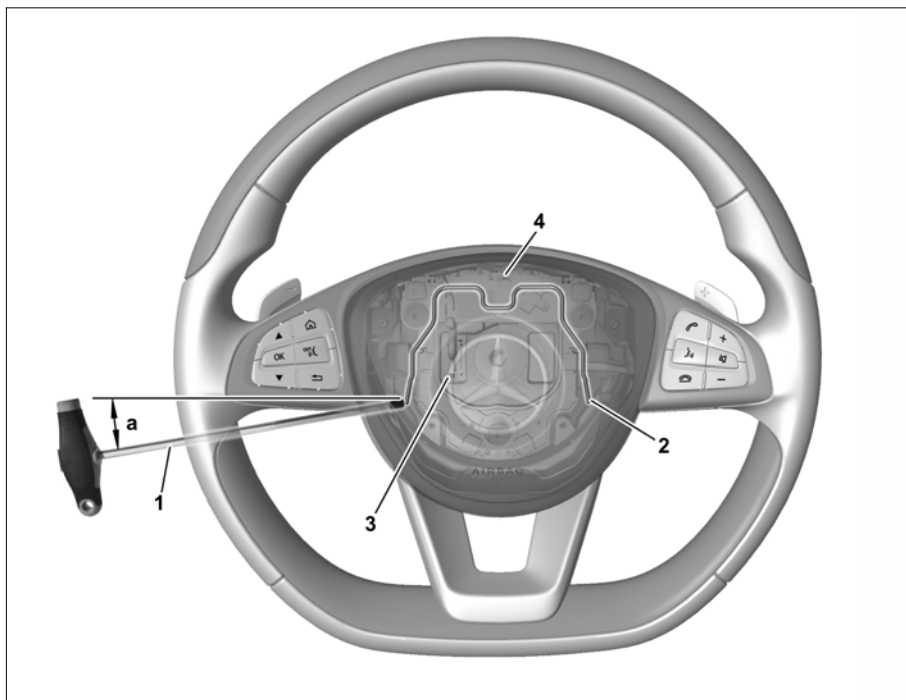

P91.60-5119-06

Model 222 up to 30.05.2014


- 1 Screwdriver
- 2 Spring
- 3 Electrical connector
- 4 Driver airbag

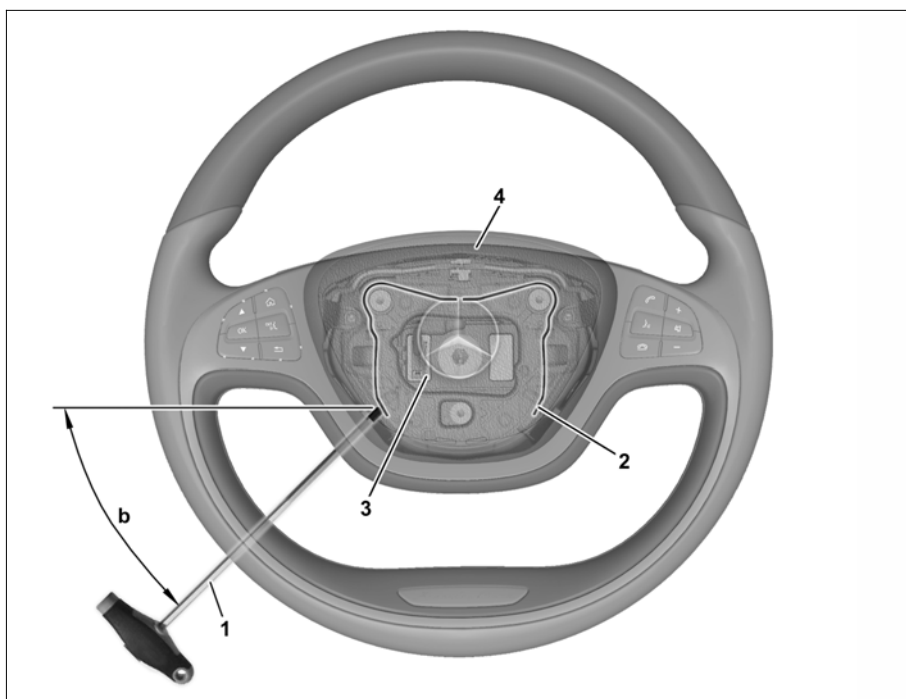

P91.60-5120-06

Shown on model 222

- 4 Driver airbag
- 5 Mount
- 6 Steering wheel

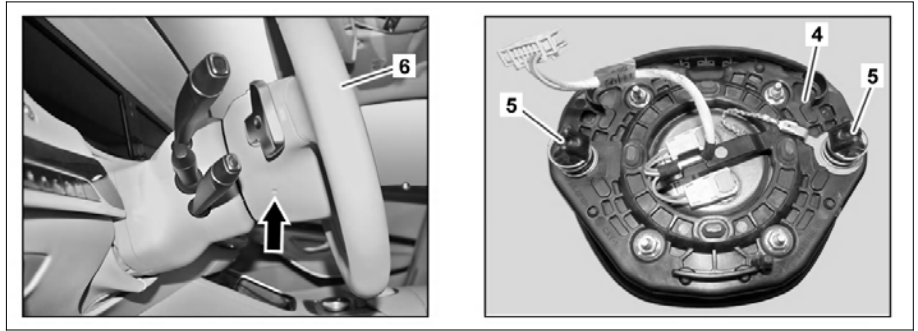

P91.60-4566-04

Warning	<b>Risk of injury</b> during testing and repair operations related to pyrotechnical components	Do not expose pyrotechnical component parts to temperatures above 100 °C or 212 °F. Disconnect current supply when working on such component parts.	<b>AS91.00-Z-0008-01A</b>
	Information on preventing damage to electronic components due to electrostatic discharge		<b>AH54.00-P-0001-01A</b>
	Information, assessment and legal requirements when working with, handling and storing pyrotechnical components		<b>AH91.00-Z-0000-10A</b>
	<b>Remove/install</b>		
1	Adjust steering wheel (6) to the topmost position		
2	Disconnect ground line to battery		<b>AR54.10-P-0003LF</b>
3	Insert screwdriver (1) in right and left opening (arrow) at steering wheel (6) and press respective end of spring (2) inwards until driver airbag (4) is released	<ul style="list-style-type: none"> <li> Model 217 Model 222 as of 5/31/14 Angle: a = approx. 10°</li> <li> Model 222 up to 5/30/14 Angle: b = approx. 45°</li> <li> Use commercially available Allen wrench with a size of 4 mm.</li> <li> Right and left opening (arrow) at steering wheel (6) must be pierced the first time that driver airbag (4) is removed.</li> <li> <b>Installation:</b> Ends of spring (2) must audibly engage in mounts (5) of driver airbag (4).</li> </ul>	
4	Remove driver airbag (4) and disconnect electrical connector (3)	<ul style="list-style-type: none"> <li> <b>Installation:</b> Make sure that electrical connector (3) engages properly.</li> </ul>	
5	Dispose of removed driver airbag (4) properly	When replacing the driver airbag (4).	
6	Install in the reverse order		
7	Check supplemental restraint system (SRS) with diagnostic unit	When replacing the driver airbag (4).	<b>AD00.00-P-2000-04B</b>

AD