


MODEL 217, 222.0/1/9


Shown on model 222

1 Fresh air vent

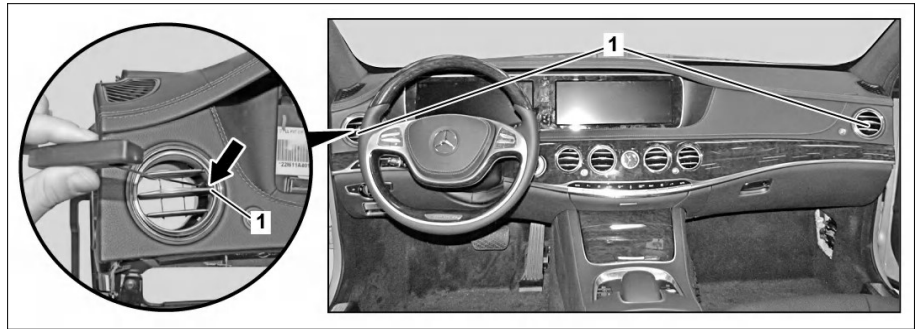

P68.10-4606-04

☒	Remove		
1	Insert extraction hook through open air vent (1) and position in cutout intended for this	<p>i The cutout is on the right side on the left air vent (1) and on the left side on the right air vent (1). Position the tip of the ☒ extraction hook in the cutout intended for this and turn 90°.</p> <p>☒ Extraction hook</p>	*140589023300
2	Pull out air vent (1)		
☒	Install		
3	Position air vent (1) at instrument panel and press into instrument panel	<p>i Make sure that the air vent (1) is seated correctly.</p>	

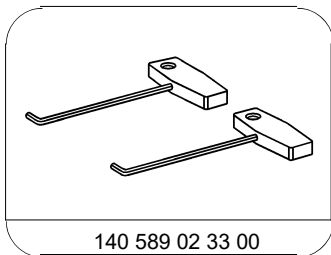

140 589 02 33 00

Extraction hook