


Model 213, 238
 Model 222
 as of model year 2018

Shown on model 213

- 2 "Back" button
- 3 Finger navigation pad
- 4 Multifunction display

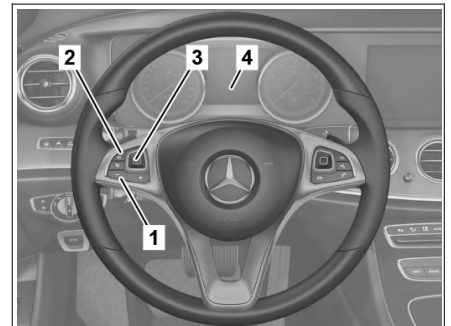

P00.20-2891-01

Shown on model 222.0 as of model year 2018

- 2 "Back" button
- 3 Finger navigation pad
- 4 Multifunction display



P00.20-2941-11

	Preparatory activity		
1	Close engine hood, doors and trunk lid or tailgate		
2	Switch electronic ignition lock control unit to position "1" (circuit 15R)	i There may be no fault messages in the multifunction display (4).	
	Open workshop level		
3	Use swipe movements on the finger navigation pad (3) to select the "Trip" menu item in the multifunction display (4)		
4	Use swipe movements on the finger navigation pad (3) in the "Trip" menu to select the standard "Total distance" display in the multifunction display (4)		
5	Press and hold "Back" (2) button for 1.5 s and press on finger navigation pad (3)	i The workshop menu with the following tabs is shown on the multifunction display (4): "Vehicle data", "Dynamometer test", "Brakepad change mode" or "Brakepad change", "ASSYST PLUS", "Head-up-display" (depending on equipment installed).	
	Close workshop level		
6	Press "Back" button (2) again until the workshop entry menu is shown on the multifunction display (4)		
7	Use swipe movements on the finger navigation pad (3) to select and confirm the "Trip" menu item		
	Finishing activity		

8	Switch electronic ignition lock control unit to position "0"		
---	--	--	--