

Activating/deactivating the panel heating



The panel heating function warms the surfaces with which the vehicle occupants frequently come into contact. Activation of the panel heating using COMAND as described below only works if seat heating is activated (see the vehicle Operator's Manual).

- ▶ Call up Vehicle Settings (> page 62).
- ▶ To select Panel Heating: turn and press the controller.
- ▶ To change the setting: turn the controller.

Activating/deactivating the acoustic locking confirmation



You can also set an audible signal to confirm that the vehicle has been locked.

- ▶ Call up Vehicle Settings (> page 62).
- ▶ To select Acoustic Lock Feedback: turn and press the controller.
The function switches on or off, depending on the previous setting.

You can find further information on the locking feature in the vehicle Operator's Manual.

Activating/deactivating the seat-belt adjustment function



The seat-belt adjustment function adjusts the driver's and front-passenger seat belt to the upper body of the occupants.

- ▶ Call up Vehicle Settings (> page 62).
- ▶ To select Belt Adjustment: turn and press the controller.
The function switches on or off, depending on the previous setting.

You can find further information in the vehicle Operator's Manual.

Activating/deactivating the automatic folding mirror function



When the Automatic Mirror Folding function is activated, the exterior mirrors fold in automatically as soon as you lock the vehicle from the outside. The exterior mirrors fold out

automatically again as soon as you unlock the vehicle.

- ▶ Call up Vehicle Settings (> page 62).
- ▶ To select Automatic Mirror Folding: turn and press the controller. The function switches on or off, depending on the previous setting.

You can find further information in the vehicle Operator's Manual.

Switching locator lighting on/off

If you switch on the Locator Lighting function, the exterior lighting is switched on for a short time when it is dark. The light switch must be set to **AUTO**.

The exterior lighting remains on for 40 seconds after the vehicle is unlocked. When you start the engine, the locator lighting is switched off and automatic headlamp mode is activated.

You can find further information on the automatic headlamp mode in the vehicle Operator's Manual.



Switching the locator lighting on/off

- ▶ Call up Vehicle Settings (> page 62).
- ▶ To select Locator Lighting: turn and press the controller. The function switches on or off, depending on the previous setting.

You can find further information in the vehicle Operator's Manual.

Switching the automatic locking feature on/off



When the automatic locking feature is activated, the vehicle is locked automatically when the ignition is switched on and the vehicle is traveling faster than walking pace.

- ▶ Call up Vehicle Settings (> page 62).
- ▶ To select Automatic Locking: turn and press the controller. The function switches on or off, depending on the previous setting.

You can find further information in the vehicle Operator's Manual.

Setting the delayed switch-off time

Interior lighting delayed switch-off



The interior lighting is activated for the duration of the delayed switch-off time when the SmartKey is removed from the ignition lock.