


Model 213, 238
 Model 222
 as of model year 2018

Shown on model 213

- 3 Finger navigation pad
- 4 Multifunction display

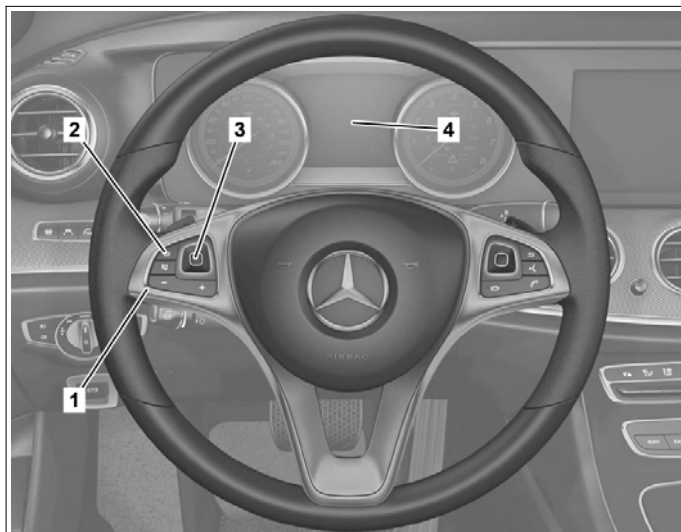

P00.20-2892-11

Shown on model 222.0 as of model year 2018

- 3 Finger navigation pad
- 4 Multifunction display



P00.20-2941-11

	Dialing		
1	Bring up workshop level on instrument cluster		AP00.20-P-0046B
2	Switch electronic ignition lock control unit to position "2" (circuit 15)	i There may be no fault messages in the multifunction display (4).	
3	Use swipe movements on the finger navigation pad (3) to select menu item "ASSYST PLUS" in the multifunction display (4)		
4	Confirm selection of "ASSYST PLUS" by pressing on the finger navigation pad (3)	i The tabs are shown on the multifunction display (4): "Service data", "Full service", "Vehicle handover".	
Reset service data			
5	Use swipe movements on the finger navigation pad (3) to select and confirm the "Full Service" menu item in the multifunction display (4)	i The current service items are shown on the multifunction display (4).	
6	Use swipe movements on the finger navigation pad (3) to select and confirm the "Conform Serv." menu item in the multifunction display (4)	i The oil selection or "Service carried out?" is shown on the multifunction display (4).	
7	Select and confirm specification for engine oil used using swipe movements on the finger navigation pad (3)	For vehicles with oil selection.	

		<p>i In order to achieve the maximum kilometer interval, use and confirm engine oil as per Specifications for Operating Fluids sheet 229.5 for gasoline engines and engine oil as per Specifications for Operating Fluids sheet 229.51 for diesel engines.</p>	
8	Use swipe movements on the finger navigation pad (3) to select and confirm the "Yes" menu item in the multifunction display (4)	<p>i "Reversal not possible" is shown on the multifunction display (4).</p>	
9	Use swipe movements on the finger navigation pad (3) to select and confirm the "Confirm" menu item in the multifunction display (4)	<p>i "Full service completed" is shown on the multifunction display (4).</p> <p>If the service is not performed or only partly performed after resetting the maintenance computer.</p> <p style="text-align: center;">↓</p> <p>Reset maintenance computer to default value again.</p> <p>Model 213, 238 Model 222 as of model year 2018 Model 222 as of model year 2018</p>	AP00.20-P-0044HA
	Deactivation		
10	Close workshop level on instrument cluster		AP00.20-P-0046B