Model series 222, creaking noises from driver seat when cornering

| Topic number | LI91.40-P-059981 |
|-------------------|---|
| Version | 3 |
| Design group | 91.40 Seat belts, emergency tensioning retractors |
| Date | 12-10-2014 |
| Validity | Model series 222 up to VIN A120665 |
| Reason for change | Description and picture changed |
| | |

Complaint:

Creaking noise in driver seat when cornering.

Cause:

The noise is produced between the guide of the seat belt buckle anchor fitting and the parts moving relative to it (studs, plate). (pic.1)

| Attachments | |
|-------------|-------------------------------------|
| File | Description |
| PIC 1.jpg | Noise from area of seat belt buckle |

Remedy:

Apply synthetic grease between the sector gear and the stud for the EVO tensioner mounting on the seat belt buckle. (pic.2)

It must be ensured that the synthetic grease is applied cleanly in front of and behind the shaft, as well as between the stud and the gear.

| Attachments | |
|-------------|--|
| File | Description |
| PIC 2.jpg | Grease between and behind the marked areas |

| Parts | | | | | | |
|-----------------|-----|-----|-----------------------------------|----------|--------|-----|
| Part number | ES1 | ES2 | Designation | Quantity | Note | EPC |
| A 001 989 46 51 | | | SYNTHETIC GREASE / DBL 6827.60 | 1 | Remedy | X |

| Work units | | | | | |
|------------|----------------|------|----------------|------|--|
| Op. no. | Operation text | Time | Damage code | Note | |
| | | | 91A1Y 36 | | |
| | | | 91N1Y 36 | | |

| WIS-References | | | | |
|------------------|--|------|------------|--|
| Document number | Title | Note | Allocation | |
| AR91.10-P-1200LF | Remove/install lining on front seat frame | | Remedy | |