


Model 222.0/1/9
with code 582 (Air conditioning, rear)

- 2 Electrical connector
3 Screw
4 Nut
5 Fender liner
6 Underfloor paneling
7 Screw
8 Nut
9 Engine compartment paneling
Y19/9 Rear air conditioning evaporator shutoff valve

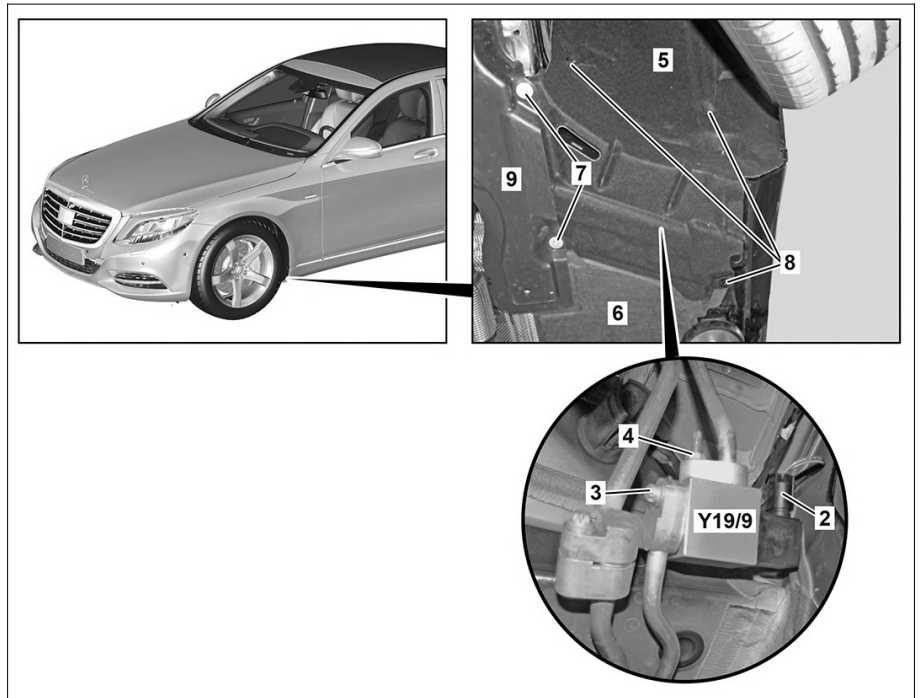

P83.50-2204-06

Danger	Risk of death caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between vehicle lift columns and position the four support plates at the vehicle lift support points specified by the vehicle manufacturer.	AS00.00-Z-0010-01A
	Remove/install		
1	Drain air conditioning system		AR83.30-P-1760LF
2	Raise vehicle		
3	Unscrew nut (8)		
4	Remove screw/bolt (7) at engine compartment paneling (9)		
5	Loosen left fender liner (5) in front fender in rear lower area		
6	Loosen left underfloor paneling (6) in front left area		
7	Disconnect electrical connector (2) at shutoff valve (Y19/9)		
8	Remove bolt (3)	Bolt, refrigerant line to shutoff valve	*BA83.30-P-1006-01P
9	Unscrew nut (4)	Nut, refrigerant line to shutoff valve	*BA83.30-P-1005-01P
10	Detach refrigerant lines from rear air conditioning evaporator shutoff valve (Y19/9)	Installation: Replace sealing rings of refrigerant lines.	
11	Remove rear air conditioning evaporator shutoff valve (Y19/9)		
12	Install in the reverse order		

Air conditioning

Number	Designation	Model 222 except code 1U6 (R744 refrigerant)
BA83.30-P-1005-01P	Nut, refrigerant line to shutoff valve M6 Nm	12

Air conditioning

Number	Designation	Model 222 except code 1U6 (R744 refrigerant)
BA83.30-P-1006-01P	Bolt, refrigerant line to shutoff valve M6	Nm 12