



MODEL 222.0/1/9

Shown on vehicle with CODE 582 (Rear air conditioning)

- 1 Center potentiometer
- 2.1 Left potentiometer
- 2.2 Right potentiometer
- 3 Rear potentiometer
- 11 Side cover

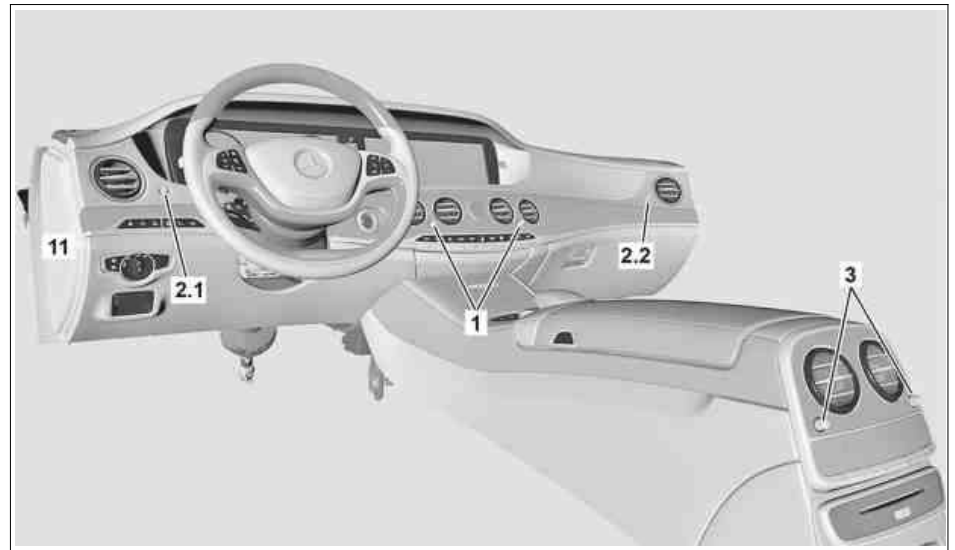

P83.10-2851-05

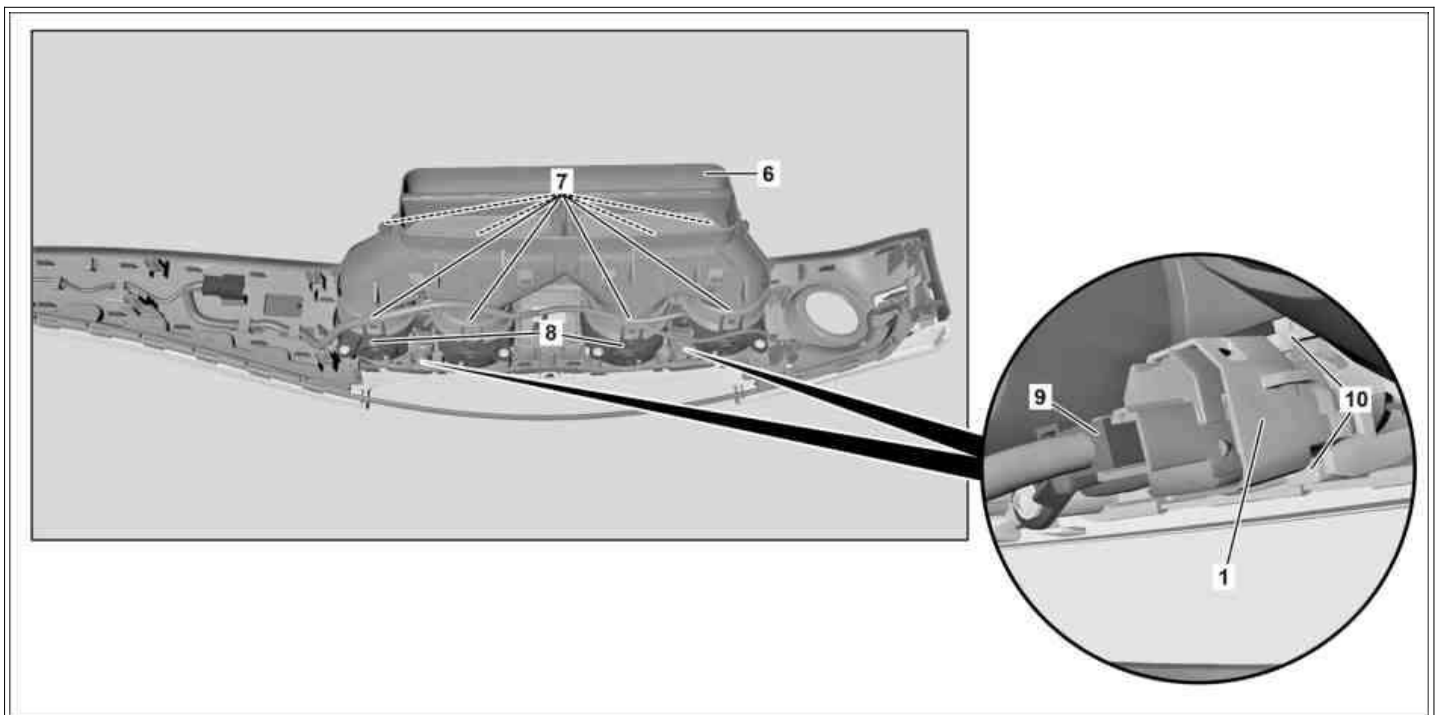


P83.10-2853-09

Center potentiometer

- | | |
|------------------------|------------------------|
| 1 Center potentiometer | 8 Center air vent |
| 6 Air duct segment | 9 Electrical connector |
| 7 Retaining tabs | 10 Catch lug |

Left/right potentiometer


- 2.1 Left potentiometer
- 2.2 Right potentiometer
- 9 Electrical connector
- 10 Catch lug
- 12 Fuse and relay module

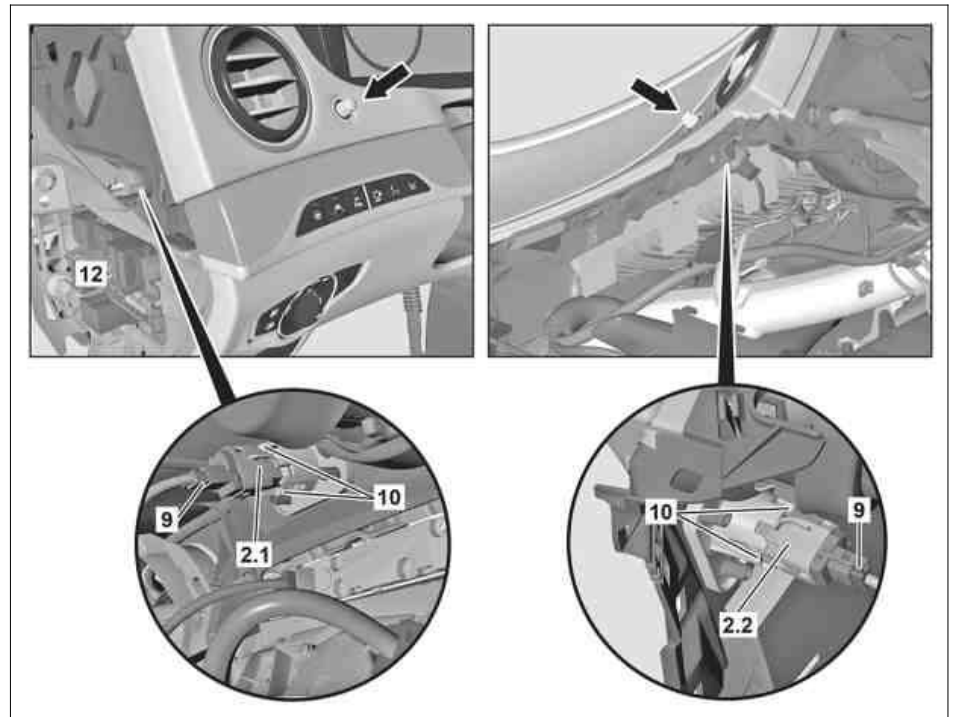



P83.10-2854-06

Rear potentiometer, shown on vehicle with CODE 582 (Rear air conditioning)

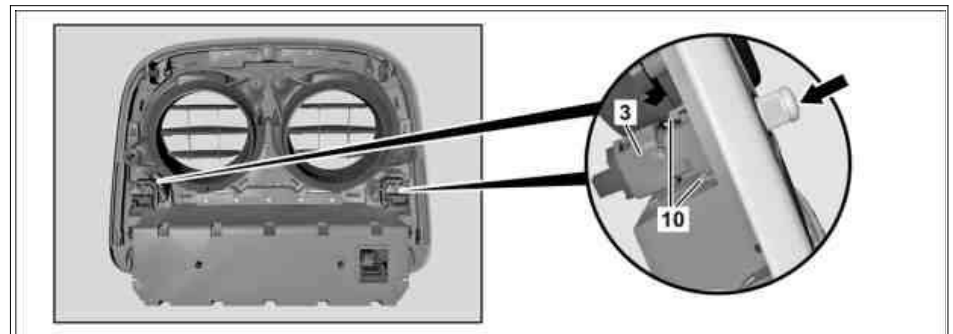- 3 Rear potentiometer
- 10 Catch lug



P83.10-2852-04

 	Remove/install		
1	Switch off ignition and remove transmitter key		
	Remove center potentiometer (1)		
2	Remove trim piece from instrument panel		AR68.10-P-1180LF
3	Remove air conditioning pushbutton control unit		AR83.25-P-1124LF
4	Disconnect electrical connector (9) at center potentiometer (1)		
5	Loosen retaining tabs (7) of air duct segment (6)		
6	Remove air duct segment (6)		
7	Lift catch tabs (10)		
8	Remove center potentiometer (1) toward rear		
	Remove left potentiometer (2.1)		
9	Remove side cover (11)		
10	Remove fuse and relay module (12)		
11	Disconnect electrical connector (9) at left potentiometer (2.1)		
12	Lift catch tabs (10)		
13	Press left potentiometer (2.1) out in direction of arrow		
	Remove right potentiometer (2.2)		
14	Remove glove compartment		AR68.10-P-1400LF

15	Disconnect electrical connector (9) at right potentiometer (2.2)		
16	Lift catch tabs (10)		
17	Press right potentiometer (2.2) out in direction of arrow		
	Remove rear potentiometer (3)		
18	Remove cover on center console		AR68.20-P-2350LF
19	Lift catch tabs (10)		
20	Press rear potentiometer (3) out in direction of arrow		
21	Install in the reverse order		