4 Use in the vehicle

4.1 Select seat

- 1. Note and observe the vehicle handbook.
 - Only car seats arranged in the direction of travel are approved for use.



- 2. Select a suitable seat.
 - (i) Car seats, which have been tested and approved by us, are suitable. You can find these in our model list. You can find the model list at: https://manuals.britax.com/product/p1050-1
 - The list of vehicle models has been created in accordance with the requirements of Standard UN R129 and contains the vehicle models, in which the product has been tested as at the date of publication according to the instructions contained in the user guide. However, the information about a specific vehicle model is not a guarantee that the product can be installed in the stated vehicle and customers are advised that they should consult the user guide about the correct installation of the product.
 - i If the desired vehicle is not included in the model list, please feel free to contact us (see "Contact", page 22).
- 3. We recommend positioning the car seats as follows. When using on the front seat:
 - Slide the front seat as far back as possible.
 When using on the rear seat:
 - Slide the back seat as far back as possible.
 - Slide the front seat as far forwards as possible.


4.2 Prepare eyes

- The carabiner on the lower strap must be hooked into suitable eyes. These eyes may already be present in the vehicle. If the vehicle does not have suitable eyes, the retaining straps have to be fastened. The retaining straps provide eyes for fastening the lower strap.
- Check that the selected car seat has one of the following fastening variants.
 - **INFO** You can find more information in the vehicle's manual

Vehicle eye



Strap on rail (rails with space to the vehicle floor)

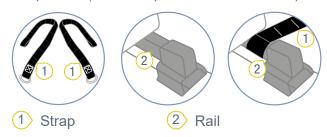


Strap on seat joint (car seat with seat fold)




2. Choose a fastening option available in the vehicle.

4.2.1 Use vehicle eyes.

- (i) If there are already eyes for the selected car seat, a strap does not have to be fastened. The carabiners are hooked directly to the eyes. The fastening of the carabiners depends on the selected car seat place. We distinguish between the following car seat places.
 - Single seat

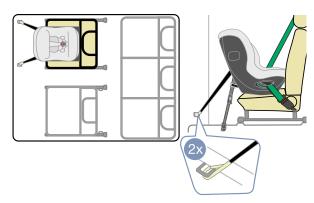


▶ Middle seat of a bench seat

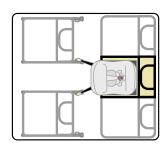



Outer seat of a bench seat

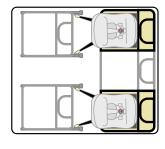



4.2.2 Fasten strap to the rail


NOTE

Material damage as a result of strap

If the strap is passed over plastic parts or electrical components of the vehicle, these may be damaged.


▶ Make sure that the strap is not passed over plastic parts or electrical components of the vehicle.

- (i) The fastening of the straps depends on the selected car seat place. We distinguish between the following car seat places.
 - Single seat

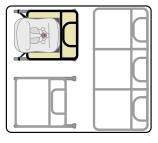





Middle seat of a bench seat

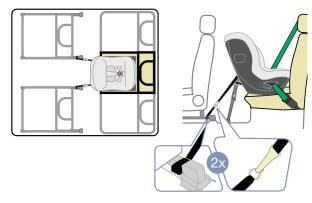

Outer seat of a bench seat

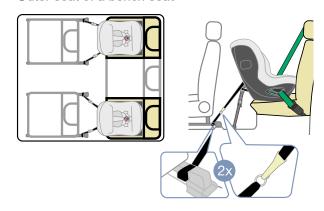

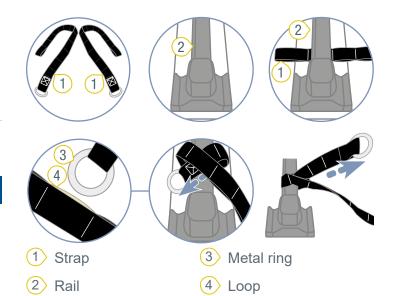

- 1. Check which fastening variant the car seat allows.
- 2. Pass the strap 1 around the rail 2.
- Pass the metal ring 3 through one of the loops 4.
 INFO The narrower the strap around the strap, the better.
- 4. Pull the loop tight
- ✓ Both straps are ready.


4.2.3 Fasten strap to the seat fold

NOTE

Material damage as a result of strap

If the strap is passed over plastic parts or electrical components of the vehicle, these may be damaged.

- ▶ Make sure that the strap is not passed over plastic parts or electrical components of the vehicle.
- The fastening of the straps depends on the selected car seat place. We distinguish between the following car seat places.
 - Single seat

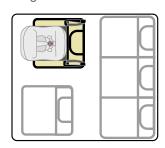




Middle seat of a bench seat






Outer seat of a bench seat

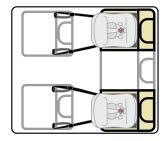



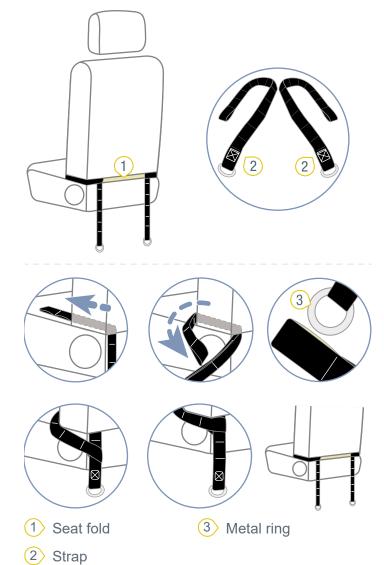

- 1. Check which fastening variant the car seat allows.
- 2. Pass the strap 2 through the seat fold 1.
- 3. Pass the strap 2 around the seat fold.
- Pass the metal ring 3 through one of the loops.
 INFO The narrower the strap around the seat joint, the better.
- 5. Pull the loop tight
- √ Both straps are ready.