


- Model 117, 156, 166, 172, 176, 190, 197, 207, 212, 217, 218, 231, 242, 246, 253 (except 253.99), 292
- Model 204
with code 442 (Luxury multifunction steering wheel)
- Model 205
up to model year 2019
- Model 222
up to model year 2018
- Model 463
as of model year 2013 up to model year 2019

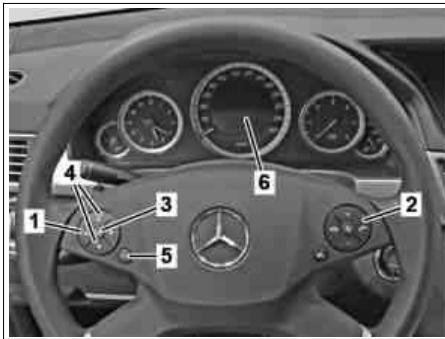

P54.33-3472-01



P54.33-3473-01



P54.33-3474-01

Shown on model 212.002, valid for model 197, 204 with code 442 (Comfort multifunction steering wheel), 207, 212

- 1 System selection button
- 2 Accept phone call button
- 3 OK button
- 4 Scroll forward/back button
- 5 "Back" button
- 6 Multifunction display

Shown on model 172, valid for model 117, 156, 166, 172, 176, 218, 231, 242, 246, 463 as from 01.06.12

- 1 System selection button
- 2 Accept phone call button
- 3 OK button
- 4 Scroll forward/back button
- 5 "Back" button
- 6 Multifunction display

Shown on model 222 up to model year 2018, valid for model 190, 205 up to model year 2019, 217, 253 (except 253.99), 222 up to model year 2018

- 1 System selection button
- 2 Accept phone call button
- 3 OK button
- 4 Scroll forward/back button
- 5 "Back" button
- 6 Multifunction display

Shown on model 292, valid for model 292

- 1 System selection button
- 2 Accept phone call button
- 3 OK button
- 4 Scroll forward/back button
- 5 "Back" button
- 6 Multifunction display



P00.20-2878-01

	Preparatory activity		
1	Switch electronic ignition lock control unit to position "1" (circuit 15R).	i There must be no fault messages shown on the multifunction display (4).	
	Open workshop level		
2	Press system selection button (1) repeatedly until menu item "Trip" is highlighted in multifunction display (6), and then confirm with OK button (3).		
3	Press scroll forward/back button (4) repeatedly until standard "Total distance" display appears in "Trip" menu in multifunction display (6).	i Operation step 5 must be performed within approx. 5 s after the standard display "Total distance" appears.	

4	First press and hold down Accept phone call button (2), then also press O.K. button within 1 s (3) and hold for approx. 5 s.	i The workshop menu with the following tabs appears in the multifunction display (6): "Vehicle data", "Dynamometer test", "Change brake lining" (depending on equipment installed), "ASSYST PLUS", "Head-up-display" (depending on equipment installed).	
	Close workshop level		
5	Press "Back" button (5) repeatedly until standard display (total distance) appears in multifunction display (6).		
	Finishing activity		
6	Switch electronic ignition lock control unit to position "0".		