
Model 223

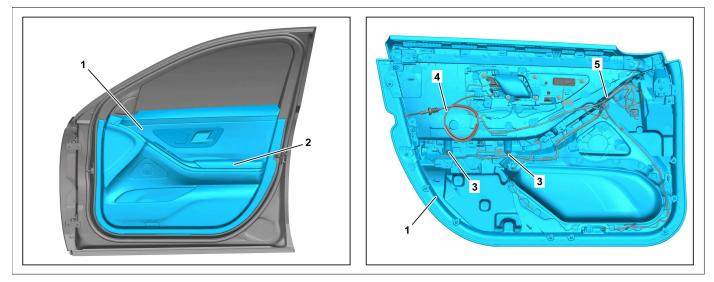

P72.10-A053-78

Shown on model 223 except code Z07 (B7 Armoring for special protection version)

- 1 Door trim
- 2 Armrest
- 3 Screw

- 4 Wire
- 5 Electrical wiring harness

P72.10-A160-78

Shown on model 223 with code Z07 (B7 Armoring for special protection version)

1	Door trim	6	Cover
3	Bolts	7	Cover

Notice	Notes on avoiding damage to windows installed in special high-security vehicles	Model 223 with code Z07 (B7 armoring on special protection version)	AH67.00-P-0003-01FB
Notice	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
XX	Remove/install		
1	Switch off ignition and store transmitter key outside of transmitter range (min. 2 m).		

2	Remove covers (6, 7).	Model 223 with code Z07 (B7 armoring on special protection version)	*115589035900
3	Remove armrest (2).	Model 223 except code Z07 (B7 armoring on special protection version)	AR72.10-P-1035S
4	Remove screws (3).		
5	Starting from the bottom, unclip door trim (1) and remove from sealing rail.	 Do not subject the entire width of the door trim (1) in the area above the door handle to tension and compression. Otherwise, the ambient lighting might be damaged. Installation: Ensure that the retaining clips are seated correctly on the door trim (1). They will be damaged otherwise. Long wedge 	*115589035900
6	Lift door trim (1) until electrical connectors of electrical wiring harness (5) and wire (4) can be accessed.	i Start at top front with the lifting.	
7	Detach wire (4) of inside door opener.		
8	Disconnect electrical connectors at front door control unit and at mid-range speaker.	i The number of electrical connectors can vary depending on the vehicle equipment.	
9	Remove door trim (1).		
4	Check		
10	Check retaining clips of the door trim (1) for damage.	If there is a problem: ↓	
		replace corresponding retaining clip.	
11	Install in the reverse order.		

