


Model 217, 222

Shown on model 222


- 01 Adapter
- 02 Support plate
- 03 Support arms of vehicle lift
- 1 Vehicle lift support point

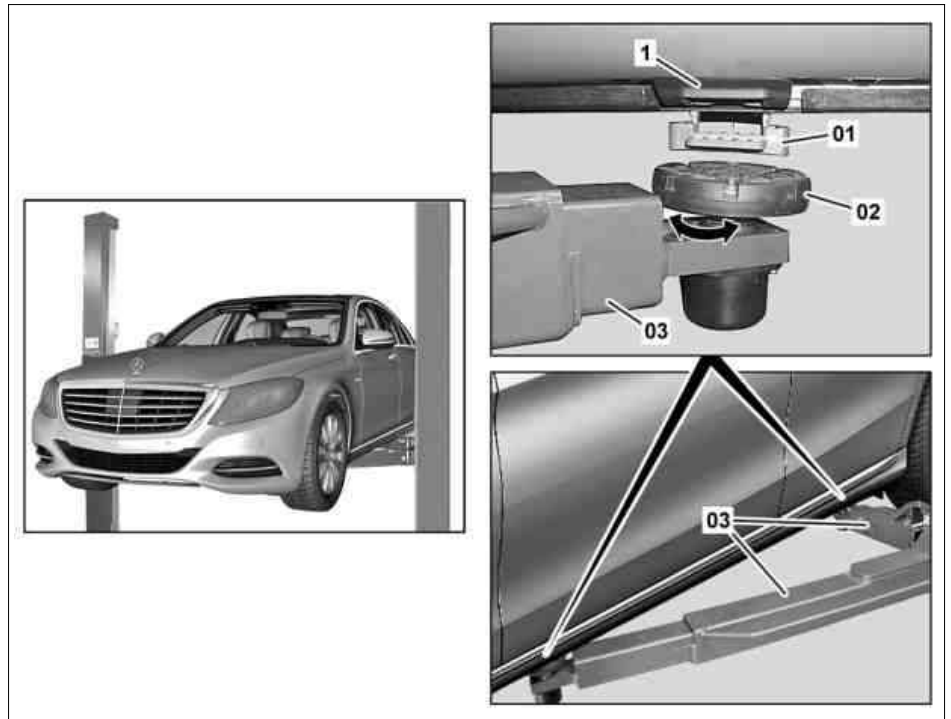

P00.60-2206-06

 
 
 

 
Shown on model 222


- 2 Front axle vehicle jack support point
- 3 Rear axle gear

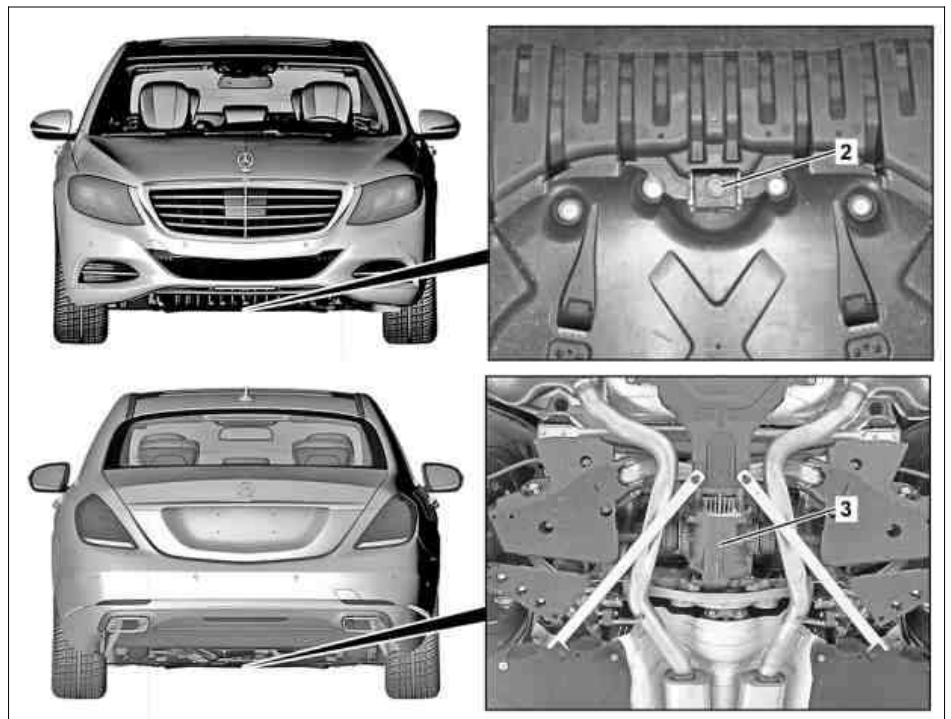

P00.60-2207-06

<p>⚠ Danger</p>	<p>Risk of death caused by vehicle slipping or toppling off during lifting</p>	<p>Only lift vehicle at the lift support points specified by the vehicle manufacturer.</p>	<p>AS00.00-Z-0032-01A</p>
<p>⚠ Danger</p>	<p>Risk of death caused by vehicle slipping or toppling off of the lifting platform.</p>	<p>Align vehicle between vehicle lift columns and position the four support plates at the vehicle lift support points specified by the vehicle manufacturer.</p>	<p>AS00.00-Z-0010-01A</p>

<p>⚠ Danger</p>	<p>Risk of accident caused by vehicle starting off on its own when jacked up. Risk of injury caused by rotating parts when working on running engine or drive train.</p>	<p>Ensure that jack stands are in a safe condition. An authorized person must occupy the driver's seat. Wear closed and close-fitting work clothes. Do not touch hot or rotating parts.</p>	<p>AS00.00-Z-0008-01A</p>
<p>Lift/lower vehicle</p>			
<p>1</p>	<p>Secure vehicle on vehicle lift.</p>	<p>When removing major assemblies (e.g. engine, transmission, axles).</p>	<p>AR00.60-P-0100CW</p>
<p>2</p>	<p>Clip adapters (01) into the vehicle lift support points (1) on the longitudinal members.</p>	<p>When removing underfloor panelings.</p> <p> Adapter kit</p>	<p>*203589023100</p>
<p>3</p>	<p>Adjust support plates (02) of support arms on vehicle lift (03) to vehicle height.</p>	<p> Turn support plates (02) until they make contact with the adapters (01) or vehicle lift support points (1) of the longitudinal members.</p> <p> Adapter kit</p>	<p>*203589023100</p>
<p>4</p>	<p>Lift vehicle with lifting platform.</p>		
<p>5</p>	<p>Lower vehicle in reverse order.</p>		
<p>Jack up/lower vehicle</p>			
<p>6</p>	<p>Lift vehicle with pit hoist or floor jack.</p>	<p>Model 217 Model 222 except code Z07 (Top protection) except code Z19 (Pullman government sedan) except code Z31 (Pullman Guard government sedan)</p> <p> Only position post of pit hoist or floor jack at front axle jack support point (2) or at rear axle differential (3). Otherwise damage to axles, major assemblies or the body may occur.</p>	
<p>7</p>	<p>Secure vehicle against tilting and falling down.</p>	<p>Model 217 Model 222 except code Z07 (Top protection) except code Z19 (Pullman government sedan) except code Z31 (Pullman Guard government sedan)</p> <p> Place jack stands under the corresponding vehicle lift support points (1) of the body.</p>	
<p>8</p>	<p>Lower vehicle in reverse order.</p>	<p>Model 217 Model 222 except code Z07 (Top protection) except code Z19 (Pullman government sedan) except code Z31 (Pullman Guard government sedan)</p>	

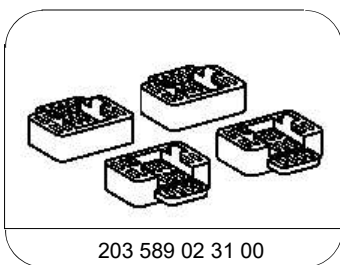

Adapter kit