

Retracting rear pistons

1. Manually release parking brake
2. Leave trip computer on mileage display



3. Turn on ignition to position 1 (one press of the engine start/stop button w/o foot on brake)

4. Press and hold Home (1) button until menu appears, then while still holding the Home button briefly press the Touch button (2)



5. Workshop menu appears on the left, select Brake Pad Replacement and follow instructions. If it says conditions not met, then the parking brake wasn't released. Turn off ignition and start over.

