


Model 290

except code U94 (Rear spoiler, static)

except code U99 (Rear spoiler, static, carbon)

1 Electrical connector
2 Screw
N170 Rear wing control unit

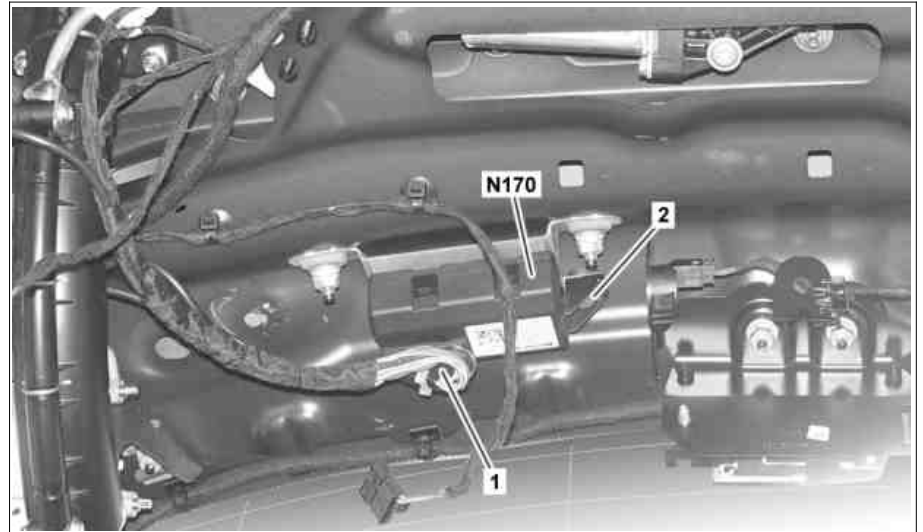

P54.21-3989-05

⚠ Warning	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Notes on HANDS-FREE ACCESS		AH80.61-P-0001-01A
☒ ☒	Remove/install		
1	Switch off ignition and store transmitter key outside of transmission range (min. 2 m).		
2	Remove lower liftgate trim.		AR72.20-P-6617FRX
3	Disconnect electrical connector (1).		
4	Remove screw/bolt (2).		
5	Remove rear wing control unit (N170).		
6	Install in the reverse order.		