 
 


Distributor cap (individual terminals)	inside	Distributor cap 	outside	Ignition: OFF Remove distributor cap. Unplug ignition cables (disconnect cables one at a time).	700 - 1300 Ω per terminal	Distributor cap defective.
Rotor	center	Rotor 	point	Ignition: OFF Remove distributor cap.	700 - 1300 Ω and visual inspection.	Rotor defective.