use 1r	□ 8 A (white) 0 16 A (red) • 25 A (blue)
	parking/tail light right, warn tion: license plate, instrumen	ing buzzer, illumina- nt cluster control ele-
2	ments (headlamp cleaning s fog light, rear fog light	system)
_	parking/tail light left	
	proximity switch/control uni	t seat adjustment
	(mirror and jacket tube adju	
5 🗆	stop lamp, instrument cluste control unit (cruise control, t	
5	relay left safety package, ba power soft top control unit (f temperature gauge)	
	climate control system, heat pump (relay auxiliary fan ter	
3	relay right safety package, o washer system, roll bar sens control)	
	diagnostic term.6, hazard wa nal lamp, electronic clock, fr lights (electronic radio, mirro	ont roof light, legroom
	residual engine heat storage system	fuse arrangement
10	wipe/wash system, combination relay, head- lamp flasher (relay head- lamp cleaning system term.86)	A 1 2 3 4 E B 5 6 7 8 F
2 🗌	cigar lighter, glove com-	C 9 10 11 12 G
	partment light, relay comfort circuitry	D 13 14 15 16 H
	term.86, storage com-	
	partment lamp	
_	low beam left	
_	low beam right	
5 🗆	high beam left	
	high beam right, high beam	indicator
	radio/electronic radio	
3	electromagnetic air pump cl	
	(electromagnetic A/C comp kickdown solenoid valve/au	
	transmission)	t.
	(door lights, sound-system, (CD-player)
) 0	(seat heating)	
0	front seat adjustment	
	front seat adjustment	
-		
	(auxiliary heater)	

fuse designation			
-	129 545 04 00		
fuse nr	□ 8A (white) ○ 16A (red) ■ 30A		
10	window lift left		
20	window lift right		
30	power soft top control unit and solenoid valves		
4 🗆	roll bar control unit and solenoid,electric seat belt locking		
50			
6 🗆	trunk light, central locking system control unit, (aut. antenna, infrared remote control unit)		
7	hydraulic unit power soft top		

There is a third fuse box behind the brake booster with three metal strip fuses.