


91-052

Removing and installing front seat head restraints

Side covering on backrest frame removed ([91-060](#))
 Cover on upper belt guide fitting removed ([91-075](#))

Operation no. of operation texts and work units or standard texts and flat rates:

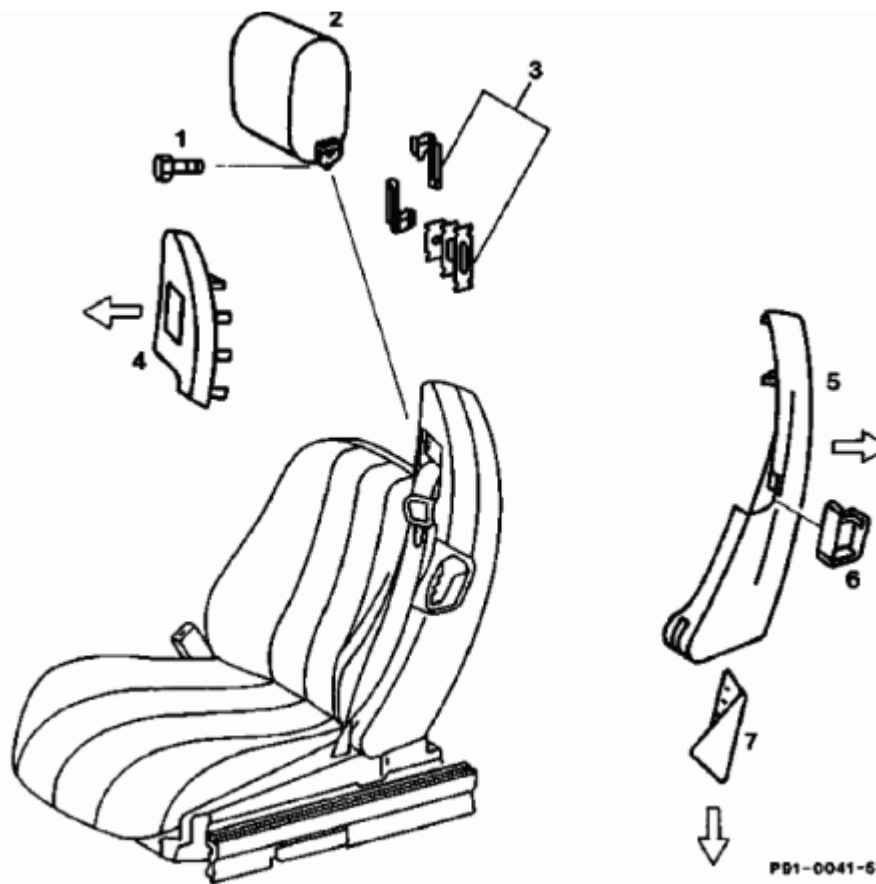


P91-0041-57

Screw (1)	unscrew, 5 Nm.
Head restraint adjustment	allow to run down.
Head restraint (2)	pull upward out of adjustable holder.
Head restraint (2)	remove from backrest frame housing by turning.
Cover (3)	disassemble (2 catch hooks) and remove individual parts on head restraint.

Reinstall in opposite order.


Removal, installation

1 Unscrew screw (arrow).

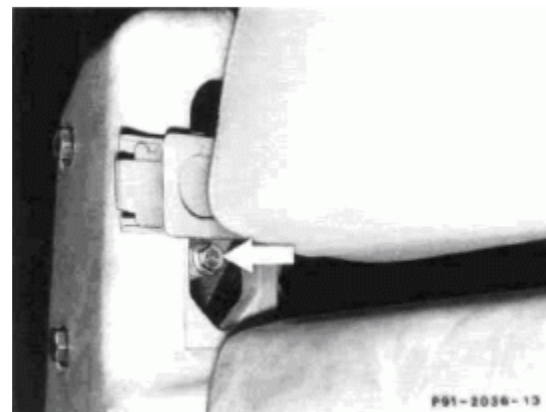


P91-2036-13

2 Allow head restraint adjustment mechanism to run down.

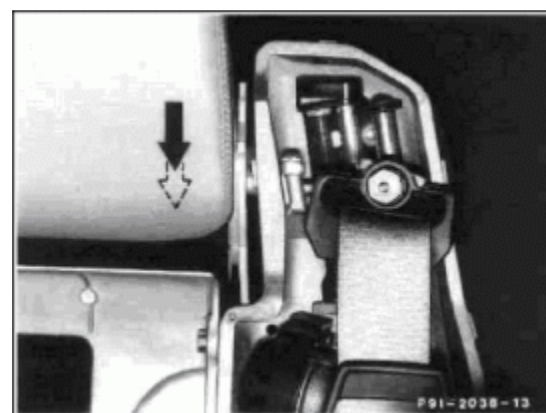


P91-2038-13

3 Remove head restraint upward out of holder, turn and remove from backrest frame housing.

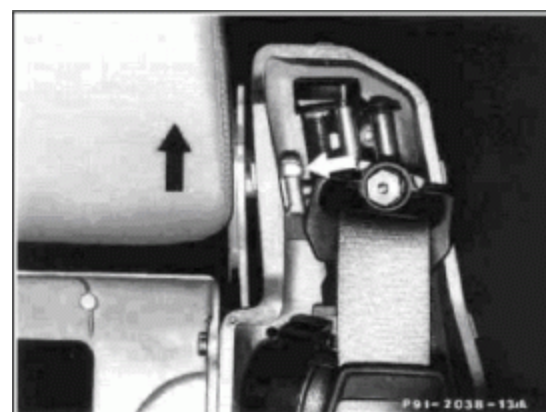


P91-2038-13A

4 Disassemble cover (slider) and remove.

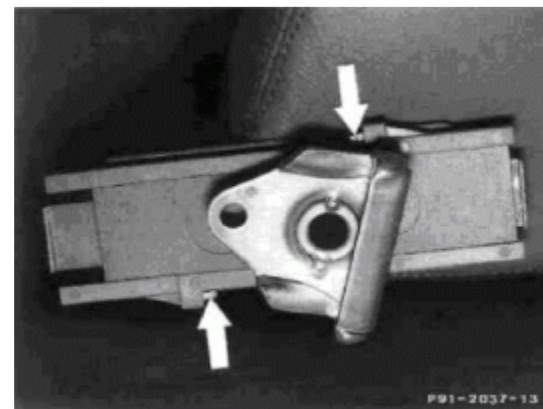

P91-2037-13


Cover (slider) for head restraint shaft disassembled.

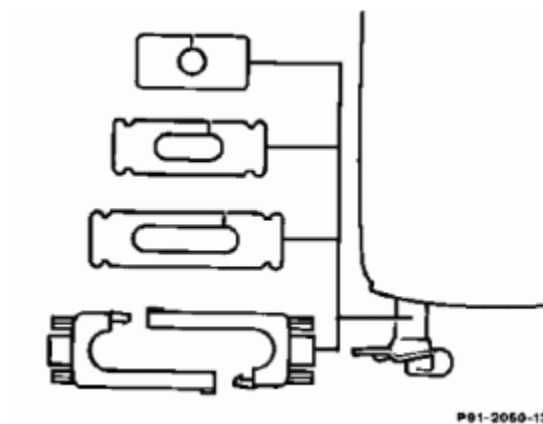

P91-2050-13

5 Insert head restraint and cover into mount on adjustment mechanism and fasten with screw. Tightening torque: 5 Nm.

6 Continue to reinstall in opposite order.

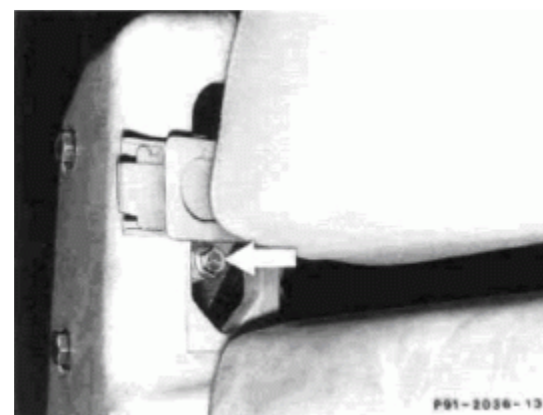

P91-2036-13