

Designation	Description	Coordinates	Reference
<u>A1</u>	Instrument cluster	4A 13A 21A 29A 37A 44A 53A 61A 63A	
<u>A1e1</u>	Left turn signal indicator lamp	21A	
<u>A1e2</u>	Right turn signal indicator lamp	22A	
<u>A1e3</u>	High beam indicator lamp	63A	
<u>A1e4</u>	Fuel reserve indicator lamp	33A	
<u>A1e5</u>	Generator charge indicator lamp	12A	
<u>A1e6</u>	Brake pad wear indicator lamp	45A	
<u>A1e7</u>	Low brake fluid level/parking brake indicator lamp	9A	
<u>A1e8</u>	Instrument illumination	18A	
<u>A1e9</u>	Seat belt/backrest lock reminder lamp	35A	
<u>A1e11</u>	Low ECL indicator lamp	11A	
<u>A1e12</u>	Low engine oil level indicator lamp	36A	
<u>A1e13</u>	Low windshield washer fluid level indicator lamp	60A	
<u>A1e14</u>	Exterior lamp failure indicator lamp	62A	
<u>A1e15</u>	SRS MIL and control	51A	
<u>A1e16</u>	Preglow indicator lamp	46A	
<u>A1e17</u>	ABS MIL	12A	
<u>A1e21</u>	ASR warning lamp	45A	
<u>A1e22</u>	ASR MIL	46A	
<u>A1e27</u>	ADS MIL	50A	
<u>A1e29</u>	RB MIL	57A	
<u>A1e35</u>	ETS MIL	46A	
<u>A1e36</u>	ETS warning lamp	45A	
<u>A1e43</u>	EPC MIL	55A	
<u>A1h1</u>	Warning buzzer	27A	
<u>A1h2</u>	Audible turn signal indicator	22A	
<u>A1p1</u>	ECT gauge	61A	
<u>A1p2</u>	Fuel level gauge	43A	
<u>A1p3</u>	Engine oil pressure gauge with warning lamp	28A	
<u>A1p4</u>	Outside temperature indicator	41A	
<u>A1p5</u>	Tachometer	42A	
<u>A1p6</u>	Electronic clock	43A	
<u>A1p8</u>	Electronic speedometer	28A	

A1p10	Fuel consumption indicator	29A	
A1p11	Dynamic oil pressure indicator	33A	
A1r1	Instrument illumination rheostat	14A	
A2	Radio	27L	
B4	Fuel level sensor	56L	
B5	Oil pressure sensor	34L	
B13	ECT gauge sensor	62L	
B14	Outside temperature indicator temperature sensor	58L	
E3	Left taillamp unit	23L	
E3e1	Turn signal lamp	22L	
E4	Right taillamp unit	30L	
E4e1	Turn signal lamp	30L	
E6/1	Left turn signal/side marker lamp (USA)	19L	
E6/1e1	Turn signal	20L	
E6/1e2	Side marker lamp (USA)	20L	
E6/2	Right turn signal/side marker lamp (USA)	28L	
E6/2e1	Turn signal	28L	
E6/2e2	Side marker lamp (USA)	28L	
E15	Dome lamp (with shut-off delay and reading lamp)	5L	
F1	Fuse and relay box	2L 52L 64L	B.4
F1f9	Fuse 9	64K	
F1f10	Fuse 10	3K	
F1f14	Fuse 14	1K	
F3f13	Fuse 13	52K	
G2	Generator	12L	PE15.00
N2/2	SRS control module	51L	PE91.60
N3/4	HFM-SFI control module	42L	B.2/2
N3/10	ME-SFI control module	32L 37L 40L 46L	PE07.61
N3/12	Right ME-SFI control module	6L 33L 37L 40L 46L	
N7	Exterior lamp failure monitoring module	9L 21L 29L 62L	

<u>N10</u>	Combination relay (turn/hazard signal, heated rear window, wiper motor)	21L 31L	
<u>N16/1</u>	Base module (BM)	26L	
<u>N22</u>	AAC pushbutton control module	26L	
<u>N32/7</u>	Left backrest lock safety package	39L	
<u>N32/8</u>	Right backrest lock safety package	38L	
<u>N47-1</u>	ASR/SPS control module	44L	PE42.40
<u>N47-2</u>	ETS/SPS control module	44L	
<u>N47-5</u>	ESP/SPS/BAS control module	43L	
<u>N51</u>	ADS suspension control module	50L	
<u>N52</u>	Power soft top control module	57L	
<u>N59/1</u>	Diagnostic module (OBD II)	48L	
<u>R3</u>	Front cigar lighter (with ashtray illumination)	13L	
<u>R3e1</u>	Illumination	14L	
<u>R3x1</u>	Front cigar lighter connector	13K	
<u>S1</u>	Exterior lamp switch	10L	
<u>S9/1</u>	Stop lamp switch (4-pole)	4L	PE42.40
<u>S11</u>	Brake fluid level switch	33L	
<u>S41</u>	ECL switch	11L	
<u>S42</u>	Windshield washer fluid level switch	60L	
<u>S43</u>	Oil level switch	35L	
<u>S43x1</u>	Oil level switch connector	35H	
<u>W1</u>	Main ground (behind instrument cluster)	4G 31F 34H	
<u>W2</u>	Ground (at right headlamp unit)	12H 28H 60H	
<u>W6</u>	Ground (left wheelhousing in trunk)	20H 23H 30H	
<u>W12</u>	Ground (center console)	13H	
<u>X4/10</u>	Terminal block (circuit 30/30Ü/61e/87L) (6-pole)	7H 45J 48J	B.1/1
<u>X6</u>	Terminal block (circuit 58d) (2-pole)	18H	B.1/4
<u>X12/1</u>	Terminal block (circuit 15 unfused)	15H	B.1/22
<u>X18</u>	Interior/taillamp harness connector (12-pole)	22H 26H 30H 39H	B.1/4
<u>X18/3</u>	Interior/taillamp harness connector (8-pole)	51H 55H	B.1/4

<u>X24</u>	Headlamp harness connector	11H 21H 28H 59G	B.1/1
<u>X27</u>	Starter harness connector (5-pole)	12H 34G	B.1/1
<u>X33/12</u>	ADS/interior connector (3-pole)	49J	
<u>X35</u>	Cockpit/module box separation point (12-pole)	6H 26G 32H 37H 40H 43J 44J 50H 61G	B.1/18
<u>X35/26</u>	Module box/engine separation point	61J	B.1/18
<u>X62/19</u>	Terminal block (left front VSS sensor - traction systems)	24G	B.1/22
<u>X67</u>	Outside temperature indicator connector (2-pole)	58H	B.1/1
<u>Z3/7</u>	Circuit 15R (fused) connector sleeve (F3f15)	52H	
<u>Z3/29</u>	Circuit 15 connector sleeve (fused)	2H	
<u>Z7/19</u>	Circuit 30 connector sleeve (fused)	1H	
<u>Z92</u>	TNA-signal connector sleeve (feed from base module - N16/1)	26H	
*U29	00.19-2000 Front axle VSS	0	
*U120	00.19-2720 Voltage distribution, circuit 15	0	
*U139	00.19-2722 Circuit 15R voltage distribution	0	
*U136	00.19-2750 Circuit 61e voltage distribution	0	
*U34	82.20-2000 Interior lighting	0	