


80-440	Removing and installing infrared remote control module (N54)
--------	--

Operation no. of operation texts and work units or standard texts and flat rates:

Version 1 up to 11/94,  up to 08/95

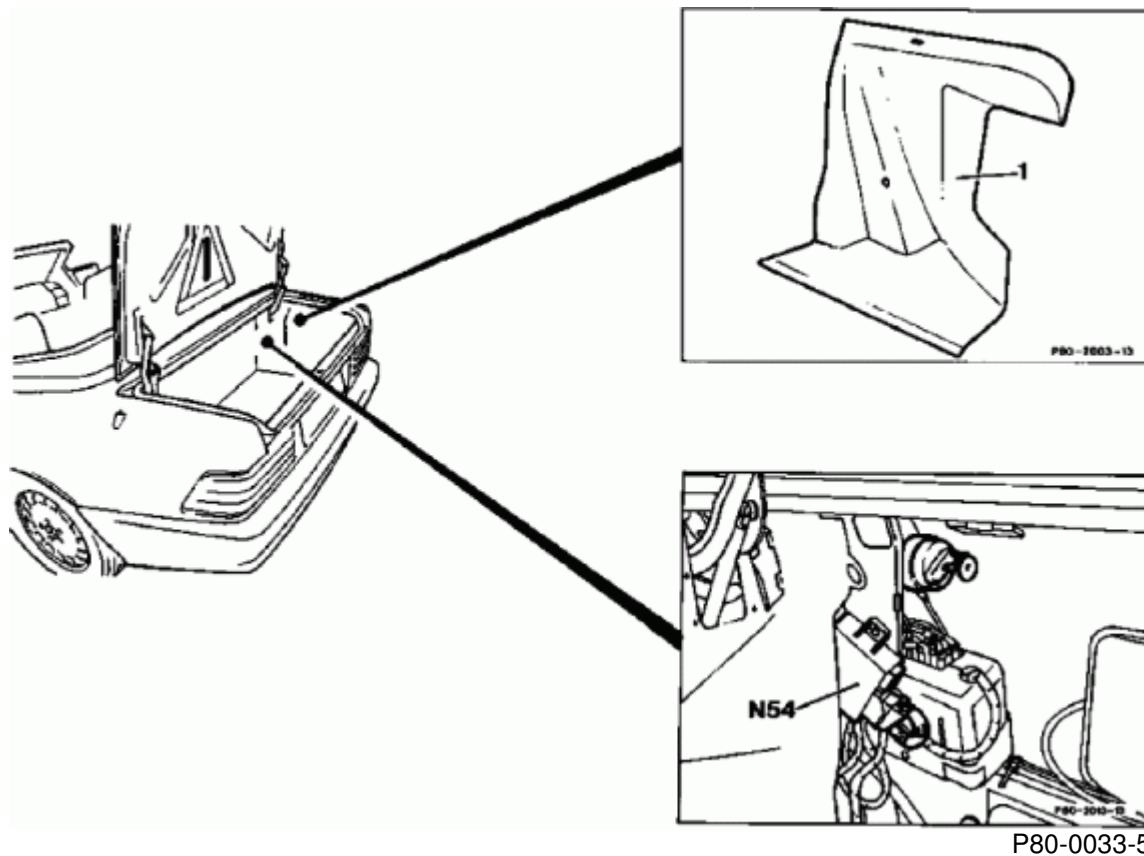


Panelling (1) on the right of luggage compartment	remove, install.
Electric connector	disconnect, connect.
Self-tapping screw	unscrew, tighten.
Control module (N54)	remove, replace.

Note

When replacing the control module or the remote control key always indicate the locking system number, because the two parts are matched to one another.

Version 2 as of 12/94, (USA) as of 09/95

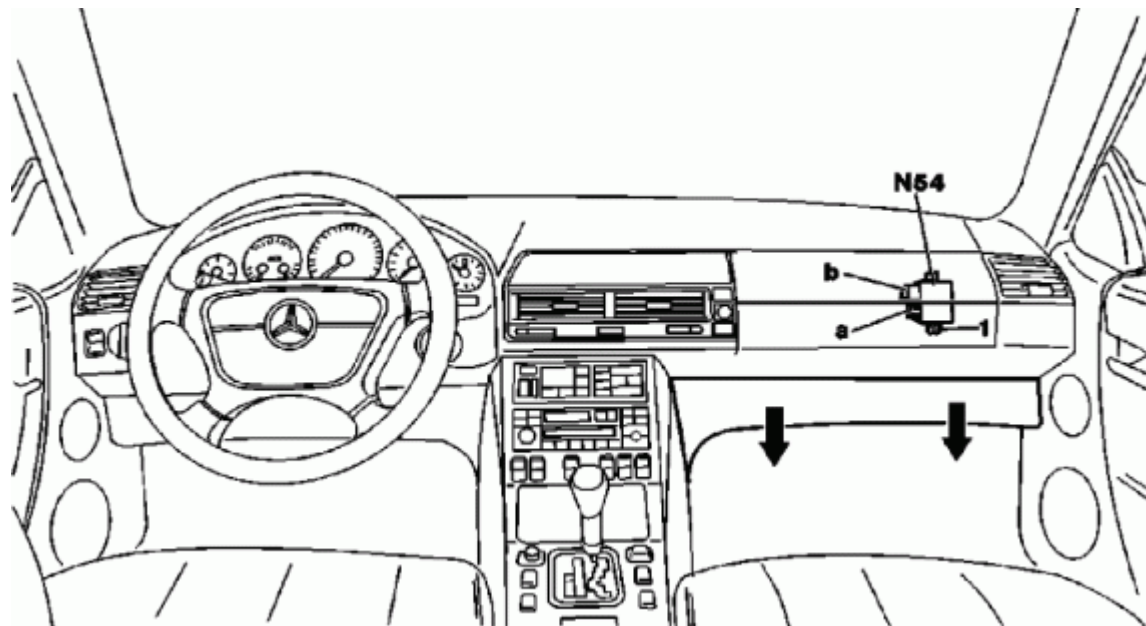

P80.30-0268-05

N54 Infrared remote central locking control module (IRCL), locations reversed on vehicles with right-hand steering

Cover below instrument panel on right	remove, install (68-150).
Nut (1)	unscrew, screw on.
Electric connector	disconnect, reconnect. ⚠ The 12-pin connector (a) is equipped with an aid for connecting and disconnecting. To disconnect press the catch and swivel the strap away. The 2-pin connector (b) is secured with a retainer. To disconnect press the catch and slide the retainer to the side.
Control module (N54)	remove, install.

Note

When replacing the control module or the remote control key always indicate the locking system number, because the two parts are

matched to one another.