
 
 
 
 
 
	Remove, Install		
 Installation	Replace self-locking nuts		
1	Detach tie rod (10) at steering idler arm (26)		AR46.40-P-0200A
2	Detach drag link (11) at steering idler arm (26)		AR46.40-P-0100A
3	Remove heat shield (26g)		
4	Unscrew nut (26b), remove washer (26e). Pull out bolt (26a) and remove steering idler arm (26)		*BA46.40-P-1001-05A
5	Lift sealing lip at the slide bushing (26f) using a screwdriver and remove slide bushing from rubber mount		
6	Use extractor (061) to pull out rubber friction bearing (26f)	 Extractor  Installation: Use insertion tool to pull in rubber friction bearing as far as the stop  Insertion tool	*129589003300 *115589086100
7	Install in the reverse order		