


AD77.30-P-5000A	Roadster soft top (RST) diagnosis troubleshooting	16.4.97
-----------------	---	---------

MODEL 129 as of 1.1.94

 Danger!	Risk of injury by trapping or crushing , in extreme cases with loss of limbs when working with the mechanism	When moving components, no body parts or limbs should be within the movement range of the mechanism.	AS00.00-Z-0009-01A
Roadster soft top (RST) diagnosis, previous knowledge			AD77.30-P-2000A
Troubleshooting			
Complaint with troubleshooting step number	Possible cause	Note	Remedy / test step
1 Coupe roof does not unlock and/or does not lock	Hydraulic unit not running Power soft top switch (S84) Soft top "open" / front lock "open" valve (Y56/1y3) Soft top solenoid "closed", fabric bow lock valve "open" (Y55/1y1) Pump temperature signal System pressure (specified value) not reached Locking pins on coupe roof incorrectly adjusted		AD77.30-P-6000-01A AD77.30-P-6000-02A AD77.30-P-6000-03A AD77.30-P-6000-18A AD77.30-P-6000-30A AD77.30-P-6000-31A AD77.30-P-6000-36A AD77.30-P-7000-01A AD77.30-P-7000-02A ra77001290420x RA77-0420

<p>2</p> <p>Indicator lamp in power soft top switch not illuminated when ignition switched on</p>	<p>Voltage supply, terminal 15, 31 Power soft top switch (S84)</p> <p>Power soft top control module (N52) defective</p>		<p>AD77.30-P-6000-02A</p> <p>AD77.30-P-6000-18A</p> <p>AD77.30-P-6000-28A ra77001290450x</p> <p>RA77-0450</p>
<p>3</p> <p>Indicator lamp in power soft top switch illuminated with soft top locked (no impulse display) (Chime sounds when driving)</p>	<p>Fabric bow limit switch locked, left (A22s2) Fabric bow limit switch locked, right (A23s2) Soft top limit switch locked, left (S84/1) Soft top limit switch locked, right (S84/2)</p>		<p>AD77.30-P-6000-05A</p> <p>AD77.30-P-6000-06A</p> <p>AD77.30-P-6000-08A</p> <p>AD77.30-P-6000-09A</p>
<p>4</p> <p>Indicator lamp in power soft top switch illuminated with soft top opened (no impulse display) (Chime sounds when driving)</p>	<p>Soft top compartment cover locked, right</p>		<p>AD77.30-P-6000-04A</p>
<p>5</p> <p>Rollover bar cannot be raised with rollover bar switch</p>	<p>Hydraulic unit not running</p> <p>RB actuator switch (S83) Pump temperature signal System pressure (specified value) not reached</p> <p>Check hydraulic circuit for raising rollover bar</p>		<p>AD77.30-P-6000-01A</p> <p>AD77.30-P-6000-02A</p> <p>AD77.30-P-6000-03A</p> <p>AD77.30-P-6000-19A</p> <p>AD77.30-P-6000-36A</p> <p>AD77.30-P-7000-01A</p> <p>AD77.30-P-7000-02A</p> <p>AD77.30-P-7000-17A</p>
<p>6</p> <p>Rollover bar cannot be raised with</p>	<p>RB "raise" valve (Y56/1y3) Check hydraulic circuit for raising rollover bar</p>		<p>AD77.30-P-6000-35A</p> <p>AD77.30-P-7000-17A</p>

power soft top switch (Possible only during covering process, rollover bar must be raised first)			
<p>7</p> <p>Rollover bar cannot be retracted with rollover bar switch</p>	<p>Rollover bar "crash actuation"</p> <p>Hydraulic unit not running</p> <p>RB switch (manual operation) (S83) RB "lower" valve (Y56/1y2) RB "raise" valve (Y56/1y3) Pump temperature signal System pressure (specified value) not reached</p> <p>Check hydraulic circuit for retracting rollover bar</p>		<p>Capture rollover bar with switch</p> <p>AD77.30-P-6000-01A</p> <p>AD77.30-P-6000-02A</p> <p>AD77.30-P-6000-03A</p> <p>AD77.30-P-6000-19A</p> <p>AD77.30-P-6000-34A</p> <p>AD77.30-P-6000-35A</p> <p>AD77.30-P-6000-36A</p> <p>AD77.30-P-7000-01A</p> <p>AD77.30-P-7000-02A</p> <p>AD77.30-P-7000-18A</p>
<p>8</p> <p>Rollover bar cannot be raised with power soft top switch</p>	<p>Hydraulic unit not running</p> <p>Power soft top switch (S84) RB "lower" valve (Y56/1y2) RB "raise" valve (Y56/1y3) Pump temperature signal System pressure (specified value) not reached</p> <p>Check hydraulic circuit for lowering rollover bar</p>		<p>AD77.30-P-6000-01A</p> <p>AD77.30-P-6000-02A</p> <p>AD77.30-P-6000-03A</p> <p>AD77.30-P-6000-18A</p> <p>AD77.30-P-6000-34A</p> <p>AD77.30-P-6000-35A</p> <p>AD77.30-P-6000-36A</p> <p>AD77.30-P-7000-01A</p> <p>AD77.30-P-7000-02A</p>

			AD77.30-P-7000-18A
9 Rollover bar raises itself independently (no crash actuation)	Rollover bar operation element (right) defective		ra91001290920x RA91-920
10 During soft top closing movement process: Soft top compartment cover does not unlock	Hydraulic unit not running Soft top "open" switch (soft top in storage compartment) (S84/3) RB "retracted" switch (S83/1) Power soft top switch (S84) Soft top compartment cover "open" / soft top compartment cover lock "open" valve (Y55/1y4) Pump temperature signal System pressure (specified value) not reached Check hydraulic circuit for opening middle lock		AD77.30-P-6000-01A AD77.30-P-6000-02A AD77.30-P-6000-03A AD77.30-P-6000-12A AD77.30-P-6000-14A AD77.30-P-6000-18A AD77.30-P-6000-29A AD77.30-P-6000-36A AD77.30-P-7000-01A AD77.30-P-7000-02A AD77.30-P-7000-07B
11 Soft top compartment cover does not open or rises only slowly	Cover "locked" switch, right (A25s2) Soft top compartment cover "open" / soft top compartment cover lock "open" valve (Y55/1y4) Check hydraulic circuit for raising soft top compartment cover		AD77.30-P-6000-04A AD77.30-P-6000-29A AD77.30-P-7000-10B
12	Soft top compartment "open" switch (S84/5)		AD77.30-P-6000-10A

Soft top does not come out of soft top compartment, or only closes slowly	Soft top fabric bow "raised" switch (S84/6) Soft top "closed" / fabric bow lock valve "open" (Y55/1y1) Fabric bow "open" / soft top compartment cover "closed" valve (Y55/1y3) Check hydraulic circuit for closing soft top Check delivery volumes of hydraulic unit		AD77.30-P-6000-11A AD77.30-P-6000-31A AD77.30-P-6000-32A AD77.30-P-7000-12A AD77.30-P-7000-03A
13 Soft top remains in 90° position	Left front door "window down" limit switch (S21/9) Right front door "window down" limit switch (S21/8) Left front power window motor (M10/3) not normalized Right front power window motor (M10/4) not normalized	Up to 12/94 Up to 12/94 As of 12/94 As of 12/94	AD77.30-P-6000-15A AD77.30-P-6000-16A ⇒ 33.0 ⇒ 34.0
14 Front locks do not lock	Left front soft top "locked" switch (S84/1) Right front soft top "locked" switch (S84/2) Power soft top switch (top) (S84/4) Fabric bow "open" / soft top compartment cover "closed" valve (Y55/1y3) Check hydraulic circuit for locking front locks Locking pins on soft top incorrectly adjusted		AD77.30-P-6000-08A AD77.30-P-6000-09A AD77.30-P-6000-13A AD77.30-P-6000-32A AD77.30-P-7000-13A ra77001290303x RA77-0303
15 Soft top compartment cover does not close, or closes only slowly, or does not lock	Left front soft top "locked" switch (S84/1) Right front soft top "locked" switch (S84/2) Soft top "closed" switch (reed contact as of 01/94) (S84/4)		AD77.30-P-6000-08A AD77.30-P-6000-09A AD77.30-P-6000-13A

	Fabric bow "open" / soft top compartment cover "closed" valve (Y55/1y3) Check hydraulic circuit for lowering soft top compartment cover		AD77.30-P-6000-32A AD77.30-P-7000-10A
16 Fabric bow does not lower or lowers only slowly	Cover "locked" switch, right (A25s2) Fabric bow "open" / soft top compartment cover "closed" valve (Y55/1y3) Fabric bow "closed" valve (Y55/1y2) Check hydraulic circuit for lowering fabric bow		AD77.30-P-6000-04A AD77.30-P-6000-32A AD77.30-P-6000-33A AD77.30-P-7000-15A
17 Rear locks do not lock	Fabric bow "closed" switch, left Soft top "closed" /fabric bow lock "closed" valve (Y55/1y1) Check hydraulic circuit for locking rear locks		AD77.30-P-6000-07A AD77.30-P-6000-31A AD77.30-P-7000-16A
18 During soft top opening movement process: Rear locks do not unlock	Hydraulic unit not running Left front power window motor (M10/3) not normalized Right front power window motor (M10/4) not normalized Soft top "open" switch (soft top in storage compartment) (S84/3) RB "retracted" switch (S83/1) Power soft top switch (S84) Soft top "closed" switch /fabric bow lock "open" valve (Y55/1y1) Pump temperature signal System pressure (specified value) not reached Check hydraulic circuit for unlocking rear locks	As of 12/94 As of 12/94	AD77.30-P-6000-01A AD77.30-P-6000-02A AD77.30-P-6000-03A ⇒33 ⇒34 AD77.30-P-6000-12A AD77.30-P-6000-14A AD77.30-P-6000-18A AD77.30-P-6000-31A AD77.30-P-6000-36A

			AD77.30-P-7000-01A
			AD77.30-P-7000-02A
			AD77.30-P-7000-05A
19 Fabric bow does not rise or rises only slowly	Bow "locked" switch (A22s2), left Bow "locked" switch (A23s2), right Fabric bow "open" / soft top compartment cover "closed" valve (Y55/1y3) Fabric bow "closed" valve (Y55/1y2) Check hydraulic circuit for raising fabric bow		AD77.30-P-6000-05A AD77.30-P-6000-06A AD77.30-P-6000-32A AD77.30-P-6000-33A AD77.30-P-7000-06A
20 Fabric bow rises then lowers	Bow "closed" switch (A22s1), left		AD77.30-P-6000-07A
21 Middle locks do not unlock	Soft top fabric bow "raised" switch (S84/6) Soft top compartment cover "open" / soft top compartment cover lock "open" valve (Y55/1y4) Check hydraulic circuit for unlocking middle locks		AD77.30-P-6000-11A AD77.30-P-6000-29A AD77.30-P-7000-07A
22 Soft top compartment cover does not open or rises only slowly	Cover "locked" switch, right (A25s2) Soft top compartment cover "open" / soft top compartment cover lock "open" valve" (Y55/1y4) Check hydraulic circuit for raising soft top compartment cover		AD77.30-P-6000-04A AD77.30-P-6000-29A AD77.30-P-7000-07A
23 Front locks do not unlock	Left front soft top "locked" switch (S84/1) Left front door "window down" limit switch (S21/9) Right front door "window down" limit switch (S21/8) RB "raise" valve (Y56/1y3)	Up to 12/94 Up to 12/94	AD77.30-P-6000-10A AD77.30-P-6000-15A AD77.30-P-6000-16A

	Check hydraulic circuit for unlocking front locks		AD77.30-P-6000-30A AD77.30-P-7000-08A
24 Soft top does not open or opens only slowly	Left front soft top "locked" switch (S84/1) Right front soft top "locked" switch (S84/2) RB "raise" valve (Y56/1y3) Soft top "closed" switch / fabric bow lock "open" valve (Y55/1y1) Check hydraulic circuit for opening soft top Check delivery volumes of hydraulic unit		AD77.30-P-6000-08A AD77.30-P-6000-09A AD77.30-P-6000-30A AD77.30-P-6000-31A AD77.30-P-7000-09A AD77.30-P-7000-03A
25 Soft top compartment cover does not close or closes only slowly or does not lock	Soft top "open" switch (soft top in storage compartment) (S84/3) Soft top compartment cover "open" / soft top compartment cover lock "open" valve (Y55/1y4) Fabric bow "open" / soft top compartment cover "closed" valve (Y55/1y3) Check hydraulic circuit for lowering soft top compartment cover		AD77.30-P-6000-12A AD77.30-P-6000-29A AD77.30-P-6000-32A AD77.30-P-7000-10A
26 Side windows do not open with power soft top switch, but do open with power window switch	Left front door "window down" limit switch (S21/9) Right front door "window down" limit switch (S21/8) Left front power window motor (M10/3) not normalized Right front power window motor (M10/4) not normalized Power soft top control module (N52)	Up to 12/94 Up to 12/94 As of 12/94 As of 12/94	AD77.30-P-6000-15A AD77.30-P-6000-16A ⇒ 33 ⇒ 34 ra77001290450x RA77-0450
27	Left front power window motor (M10/3)	As of 12/94	⇒ 33

Side windows do not close with power soft top switch, but do close with power window switch	not normalized Right front power window motor (M10/4) not normalized Power soft top control module (N52)	As of 12/94	⇒ 34 ra77001290450x RA77-0450
28 Side windows do not open and/or do not close with power window switch (step 1)	Left front power window switch (front center console) (S21/1) Right front power window switch (front center console) (S21/2) Left front power window motor (M10/3) Right front power window motor (M10/4) Power soft top control module (N52)		AD77.30-P-6000-24A AD77.30-P-6000-25A AD77.30-P-6000-20A AD77.30-P-6000-37A AD77.30-P-6000-21A AD77.30-P-6000-38A ra77001290450x RA77-0450
29 Side windows do not open automatically with power window switch (step 2)	Left front door "window down" limit switch (S21/9) Right front door "window down" limit switch (S21/8) Left front power window motor (M10/3) not normalized Right front power window motor (M10/4) not normalized Left front power window switch (front center console) (S21/1) Right front power window switch (front center console) (S21/2) Power soft top control module (N52)	Up to 12/94 Up to 12/94 As of 12/94 As of 12/94	AD77.30-P-6000-15A AD77.30-P-6000-16A ⇒ 33 ⇒ 34 AD77.30-P-6000-24A AD77.30-P-6000-25A ra77001290450x RA77-0450
30	Left front door actuator (S47), right front		AD77.30-P-6000-37A

<p>Side windows convenience locking via driver / passenger side door or trunk lid lock, inoperative</p>	<p>door actuator (S48), trunk lid lock actuator (S49) ATA/CF microswitch (S86), ATA/CF microswitch (S87s1), ATA/CF microswitch (S88s1) Power soft top control module</p>		<p>AD77.30-P-6000-38A</p> <p>ra77001290450x</p> <p>RA77-0450</p>
<p>31</p> <p>Left side window cannot be normalized (electrical basic setting)</p> <p>As of 12/94</p>	<p>Left front power window motor (M10/3) Power soft top control module (N52)</p>		<p>AD77.30-P-6000-26A</p> <p>ra77001290450x</p> <p>RA77-0450</p>
<p>32</p> <p>Right side window cannot be normalized (electrical basic setting)</p> <p>As of 12/94</p>	<p>Right front power window motor (M10/4) Power soft top control module (N52)</p>		<p>AD77.30-P-6000-27A</p> <p>ra77001290450x</p> <p>RA77-0450</p>
<p>33</p> <p>Left side window does not open (4mm) with opening of left front door</p> <p>As of 12/94</p>	<p>Window not normalized (electrical basic setting)</p> <p>Rotary tumbler microswitch (S86s2) Power soft top control module (N52)</p>		<p>Normalize power window motor. Close door, close side window with power window switch and allow to run for 1-2 s on lock.</p> <p>AD77.30-P-6000-40A</p> <p>ra77001290450x</p> <p>RA77-0450</p>
<p>34</p> <p>Right side window does not open (4mm) with opening of right front door</p> <p>As of 12/94</p>	<p>Window not normalized (electrical basic setting)</p> <p>Rotary tumbler microswitch (S87s2) Power soft top control module (N52)</p>		<p>Normalize power window motor. Close door, close side window with window lifter switch and allow to run for 1-2 s on lock.</p> <p>AD77.30-P-6000-41A</p>

			ra77001290450x RA77-0450
35 Left side window does not close (4mm) with closing of left front door As of 12/94	Window not normalized (electrical basic setting) Rotary tumbler microswitch (S86s2) Power soft top control module (N52)		Normalize power window motor. Close door, close side window with window lifter switch and allow to run for 1-2 s on lock. AD77.30-P-6000-40A ra77001290450x RA77-0450
36 Right side window does not close (4mm) with closing of right front door As of 12/94	Window not normalized (electrical basic setting) Rotary tumbler microswitch (S87s2) Power soft top control module (N52)		Normalize power window motor. Close door, close side window with window lifter switch and allow to run for 1-2 s on lock. AD77.30-P-6000-41A ra77001290450x RA77-0450
37 Either or both side windows lose basic electrical setting As of 12/94	Voltage supply, power soft top control module (N52) coupling X1 pin1, pin 5, pin 8 (undervoltage) Left front power window motor (M10/3) switching circuit Right front power window motor (M10/4) switching circuit Power soft top control module (N52)		AD77.30-P-6000-01A AD77.30-P-6000-02A AD77.30-P-6000-26A AD77.30-P-6000-27A ra77001290450x RA77-0450
38	Left front door actuator (S47), right front door actuator (S48), trunk lid lock		AD77.30-P-6000-37A

Convenience opening of side windows inoperative As of 06/97	actuator (S49) ATA/CF microswitch (S86), ATA/CF microswitch (S87s1), ATA/CF microswitch (S88s1) Power soft top control module		AD77.30-P-6000-38A ra77001290450x RA77-0450
--	---	--	---