


MODEL 230.467 /474 /475 /476 /479

- 1 Side flap drive
- 2 Side flaps
- 3 Trunk lid
- 4 Locknut
- 5 Adjusting nut

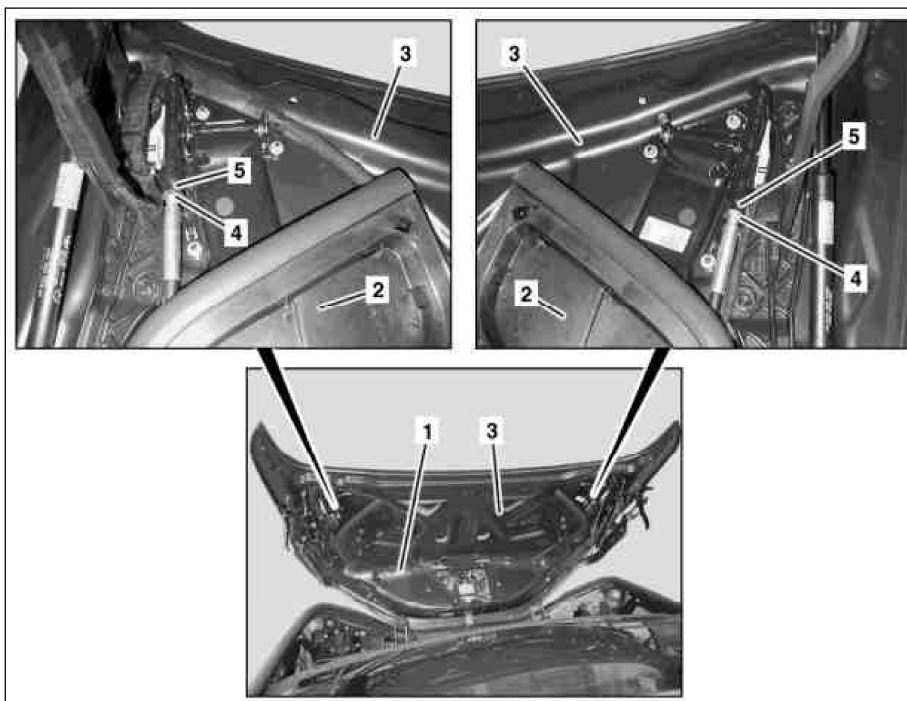

P77.30-2113-06

☐	Check		
⚠ Danger!	Risk of injury. Moving parts can pinch, crush or, in extreme cases, even sever extremities.	No parts of the body or limbs should be within the operating range of the mechanism when moving components.	AS00.00-Z-0009-01A
i	Correct adjustment of the side flap drive (1) allows uniform motion of both side flaps (2). Moreover, it prevents the side flaps (2) from making noises when the Vario roof is open. Vario roof must be closed		
1	Actuate soft top switch until tailgate is opened	i The side flaps (2) must be completely folded in	
2	Check adjustment of side flaps (2) when folded in	i Both side flaps (2) should make uniform contact with the trunk lid (3) under tension	
	Adjust		
3	Loosen counternut (4) and turn adjusting nut (5)	i Turn adjusting nut (5) until both side flaps (2) make uniform contact with the trunk lid (3) under tension	
4	Tighten locknut (4)		
5	Actuate soft top switch until side flaps (2) are completely folded out		
6	Check adjustment of side flaps (2) when folded out	i Both side flaps (2) should make uniform contact with trunk lid (3)	
7	Loosen counternut (4) and turn adjusting nut (5)	i Turn adjusting nut (5) until both side flaps (2) make uniform contact with the trunk lid (3) under tension	
8	Tighten locknut (4)		
9	Fold side flaps (2) in and out twice using the soft top switch		
10	Check adjustment of side flaps (2) when folded in or out; if necessary, repeat adjustment	i If the side flaps (2) do not make contact in both positions with the trunk lid (3) under tension, adjust the side flap drive (1) so that the side flaps (2) make contact with the trunk lid (3) on the inside with tension in the folded-in state. This prevents noises when the Vario roof is open whereby the side flaps (2) do not make noises when the Vario roof is closed.	