

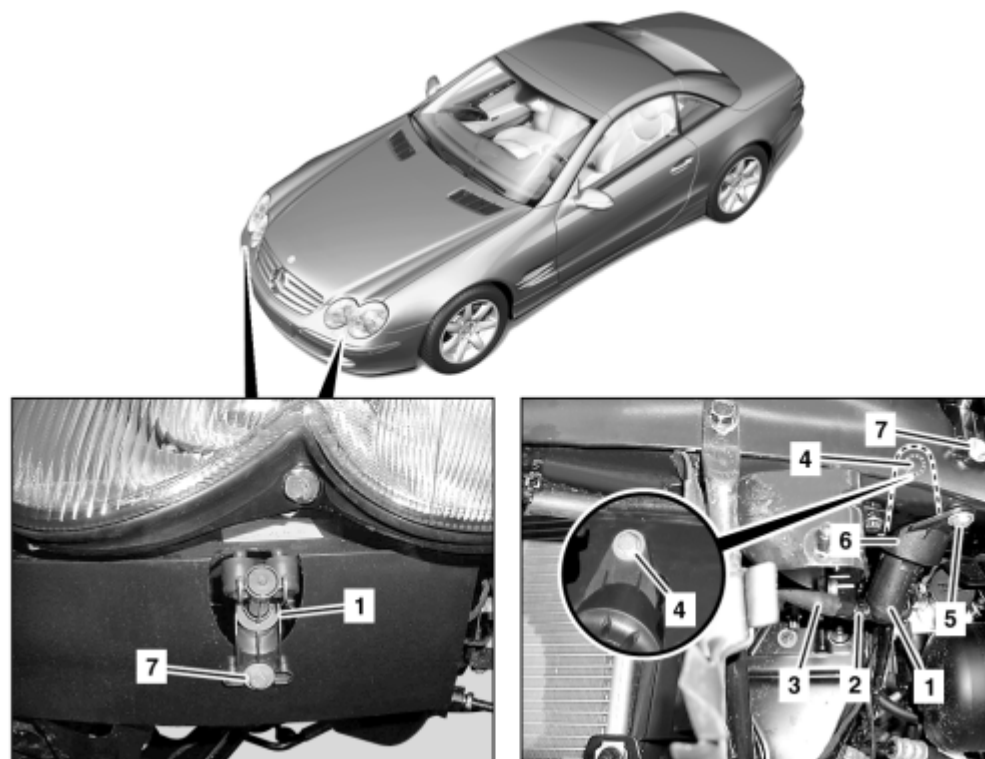
AR82.15-P-6100R

Remove/install telescoping nozzle for headlamp cleaning system

10.1.06




**MODEL 230.4**

- 1 Telescopic nozzle
- 2 Retaining clamp
- 3 Washer fluid hose
- 4 Bolt
- 5 Bolt
- 6 Bracket
- 7 Bolt



P82.15-2086-06

☒ ☒	Remove/install		
1.1	Remove left front section of fender liner together with left front engine compartment paneling or right front section of fender liner together with right front engine compartment paneling	When removing the left or right telescopic nozzle (1).	
		<p><b>i</b> The left or right front section of the</p>	

		fender liner remains bolted to the corresponding front engine compartment paneling and is removed as a unit. Refer to:↓	
		Remove/install inner fender in front fender	<a href="#">AR88.10-P-1300R</a>
		Remove and install bottom engine compartment paneling	<a href="#">AR61.20-P-1105R</a>
2.1	Detach front bumper	When removing the left or right telescopic nozzle (1).	<a href="#">AR88.20-P-2000-01R</a>
2.2	Remove front bumper	When removing the left and right telescopic nozzle (1).	<a href="#">AR88.20-P-2000R</a>
3	Detach retaining clamp (2) and remove washer fluid hose (3) from telescopic nozzle (1)	 Collect washer fluid which flows out.	
4	Undo screws (4, 5) from bracket (6) of telescopic nozzle (1)		
5	Remove bracket (6)		
6	Unscrew bolt (7)		
7	Remove telescopic nozzle (1) upward	 Guide out telescopic nozzle (1) using a rotary motion.	
8	Install in the reverse order		
9	Fill washer fluid reservoir		
	Windshield washer system - inspect fluid level, adjust to correct level		<a href="#">AP82.35-P-8210N</a>