


AR88.80-P-6000R	Remove/install longitudinal member paneling	21.12.05
-----------------	---	----------

MODEL 230.4



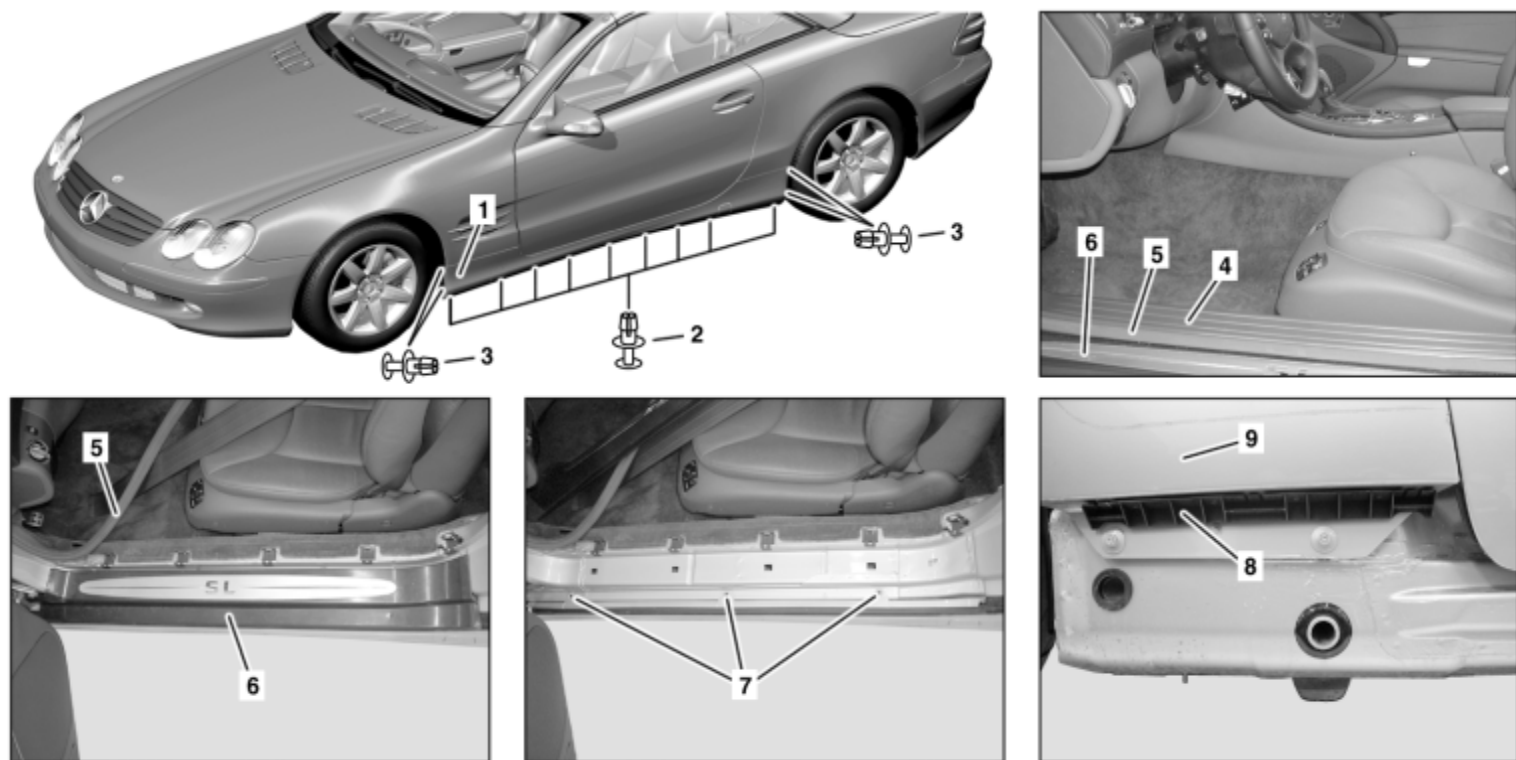


 



 
P88.80-2032-09

1 Longitudinal member paneling
 2 Expansion rivet
 3 Expansion rivet

4 Paneling
 5 Edge guard
 6 Door sill molding

7 Bolts
 8 Terminal strip
 9 Front fender

	Remove/install		
1	Remove left and right paneling (4).	 Installation: Ensure that retaining clips are positioned correctly.	

			110 589 03 59 00
2	Loosen edge guard (5) in entrance area.		
3	Unclip door sill molding (6).	 Installation: Replace damaged mounting clips.	
			110 589 03 59 00
4	Remove underfloor paneling		AR61.30-P-1001R
5	Remove expansion rivets (2) from longitudinal member paneling (1).		
6	Remove expansion rivets (3) on front and rear fender liner		
7	Remove bolts (7)		
8	Press longitudinal member paneling (1) toward outside from front and rear terminal strip (8).	 Carefully press of longitudinal member paneling (1), to prevent breaking catch lugs.	
			110 589 03 59 00
		 Installation: Arrest longitudinal member paneling (1) in front and rear terminal strip (8).	
9	Install in the reverse order		



110 589 03 59 00

Mounting wedge