



AR68.20-P-2310R	Remove/install cover on gearshift lever	20.12.05
-----------------	---	----------

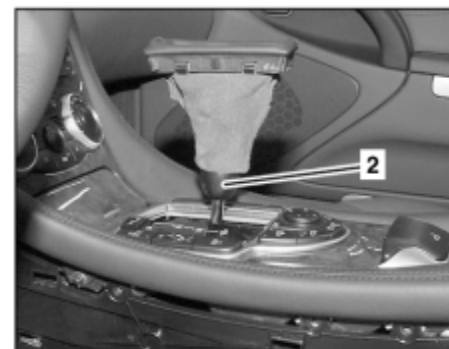

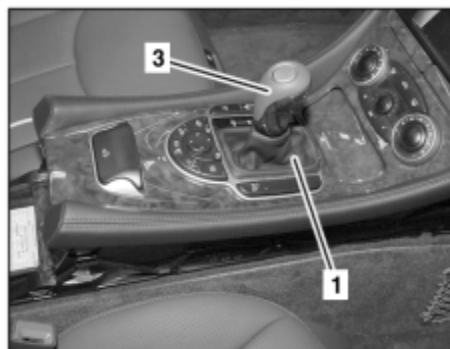

MODEL 230.4

Shown on vehicle with transmission 722

- 1 Boot
2 Clamping ring
3 Selector lever handle (with transmission 722)



P68.20-2481-04

 	Remove/install		
1	Secure vehicle against rolling		
2.1	Switch on ignition, actuate brake pedal and shift to selector lever position "N"	On vehicles with transmission 722	
3	Switch off ignition and remove transmitter key from EIS control unit	 On vehicles with code (889) Keyless Go, press Keyless Go start/stop button repeatedly until the ignition is switched off. Remove Keyless Go transmitter card or transmitter key from vehicle and store beyond reach of transmitter (min. 2 m).	
4	Unclip boot (1) with mounting wedge.		110 589 03 59 00
5.1	Move selector lever to position "P"	On vehicles with transmission 722	
6	Put boot (1) over selector lever handle (3) or shift lever handle.		
7	Turn clamping ring (2) approx. 90 ° counterclockwise and remove selector		

	lever handle (3) or shift lever handle together with boot (1).		
8	Install in the reverse order		



110 589 03 59 00

Mounting wedge