


NT02-5 DIAGRAM

Kombi-Stecker, MQS 40 (elektrisch) + 2-PIN MOST (optisch)

- A Block A
- B Block B
- C Block C
- D Block D

Alone green/black LIVE CABLE IS Radio
Antenna AMPLIFIER POWER +12V PIN 7.

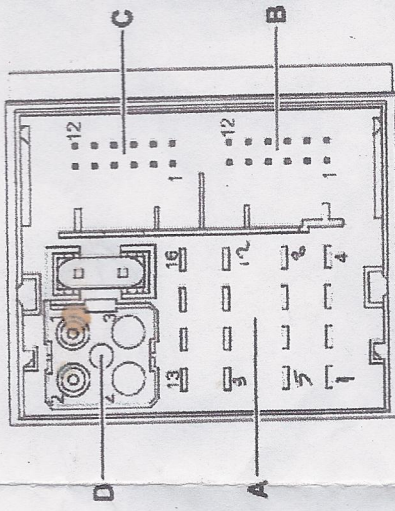

PSZ 80-753-01

Stecker	Pin	Belegung
Block A	1	RR- (AF rear right +)
	2	FR- (AF front right +)
	3	FL+ (AF front left +)
	4	RL+ (AF rear left +)
	5	RR- (AF rear right -)
	6	FR- (AF front right -)
	7	FL- (AF front left -)
	8	RL- (AF rear left -)
	9	Innenraum-CAN, LOW
	10	Telephone-Mute
	11	Innenraum-CAN, HIGH
	12	Ubat -
	13	nicht belegt
	14	nicht belegt
	15	Ubat +
	16	MOST-Wake Up
Block D	1	RX-LWL (optical receiving signal)
	2	TX-LWL (optical transmission signal)
	3-4	nicht belegt

Stecker	Pin	Belegung
Block B	1	Microphon_1_In +
	2	Microphon_2_In +
	3	Microphon_Shield
	4	nicht belegt
	5-6	nicht belegt
	7	Cradle_Compensator
	8	nicht belegt
	9	Microphon_Ground
	10-12	nicht belegt
	Block C	1
2		nicht belegt
3		AUX1_shield -14
4		AUX1_left -13
5-8		nicht belegt
9		AUX1_ground 05
10		AUX1_right 07
11-12		nicht belegt

MIC

AUX